

AN2518/D
Rev. 0, 5/2003

3-Phase Sine Wave
Generator – 3 outputs version
– XOR version TPU Function
Set (3Sin3Xor)

By Milan Brejl, Ph.D.

Functional Overview

The 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor) is a version of the 3-Phase Sine Wave Generator – 3 outputs version (3Sin3) function that uses two TPU channels to generate one PWM output channel. The TPU channel outputs are to be connected to a XOR gate whose output is the required PWM signal. See [Figure 1](#). An advantage of this solution is the full range (0% to 100%) of PWM duty-cycle ratios. There is no *MPW* (minimum pulse width) parameter to limit the edge duty-cycle ratios in this version, unlike in the 3Sin3. A disadvantage is that the number of assigned TPU channels is doubled.

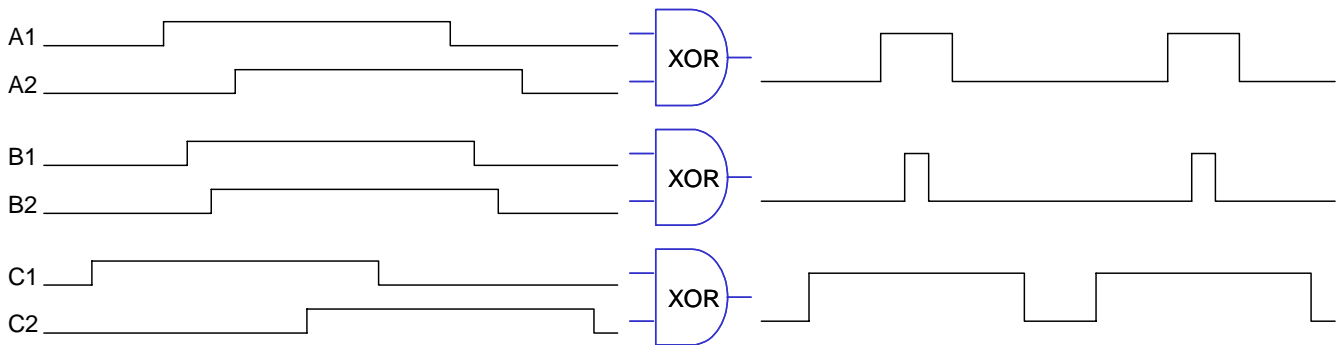


Figure 1. Functionality of XOR version – illustration

The function set consists of 4 TPU functions:

- 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor)
- Synchronization Signal for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_sync)

- Resolver Reference Signal for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_res)
- Fault Input for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_fault)

The 3Sin3Xor TPU function generates 3 pairs of XOR gate inputs. The XOR gate outputs then produce a 3-channel 3-phase center-aligned PWM signal. The generated signals control external hardware, which outputs a pair of transistor signals (top and bottom) with dead-time inserted. The Synchronization Signal for the 3Sin3Xor function can be used to generate one or more adjustable signals for a wide range of uses, which are synchronized to the PWM, and track changes in the PWM period. The Resolver Reference Signal for the 3Sin3Xor function can be used to generate one or more 50% duty-cycle adjustable signals that are also synchronized to the PWM. The Fault Input for the 3Sin3Xor function is a TPU input function that sets all XOR gate outputs low when the input signal goes low.

Function Set Configuration

None of the TPU functions in the 3-Phase Sine Wave Generator – 3 outputs version – XOR version TPU function set can be used separately. The 3Sin3Xor_R and 3Sin3Xor_T functions have to be used together. The 3Sin3Xor_R runs on pins A1, B1, C1, the 3Sin3Xor_T runs on pins A2, B2, C2 – see [Figure 1](#). The 3Sin3Xor_R and 3Sin3Xor_T functions use a table of 32 cosine function values. The table is placed in the parameter space of four consecutive channels. One or more channels running Synchronization Signal for 3Sin3Xor as well as Resolver Reference Signals for 3Sin3Xor functions can be added to the 3Sin3Xor_R and 3Sin3Xor_T functions. They can run with different settings on each channel. The function Fault Input for 3Sin3Xor can also be added to the 3Sin3Xor_R and 3Sin3Xor_T functions. It is recommended to use it on channel 15, and to set the hardware option that disables all TPU output pins when the channel 15 input signal is low (DTPU bit = 1). This ensures that the hardware reacts quickly to a pin fault state. Note that it is not only the 3Sin3Xor_R and 3Sin3Xor_T channels, but all TPU output channels, including the synchronization and resolver reference signals, that are disabled in this configuration. The function 3Sin3Xor_fault can run on one of the four channels where the table of cosine function values is placed, because the 3Sin3_fault function does not have any parameters.

[Table 1](#) shows the configuration options and restrictions.

Table 1. 3Sin3Xor TPU function set configuration options and restrictions

TPU function	Optional/ Mandatory	How many channels	Assignable channels
3Sin3Xor_R	mandatory	3	any 3 channels
3Sin3Xor_T	mandatory	3	any 3 channels
Cosine table	mandatory	4	any 4 consecutive channels
3Sin3_sync	optional	1 or more	any channels
3Sin3_res	optional	1 or more	any channels
3Sin3_fault	optional	1	any, recommended is 15 and DTPU bit set

Table 2 shows an example of configuration.

Table 2. Example of configuration

Channel	TPU function	Priority
0	3Sin3Xor_R	middle
1	3Sin3Xor_T	middle
2	3Sin3Xor_R	middle
3	3Sin3Xor_T	middle
4	3Sin3Xor_R	middle
5	3Sin3Xor_T	middle
10	3Sin3Xor_sync	low
11	3Sin3Xor_res	low
12	Cosine table 1	none
13	Cosine table 2	none
14	Cosine table 3	none
15	3Sin3Xor_fault, Cosine table 4	high

Table 3 shows the TPU function code sizes.

Table 3. TPU function code sizes

TPU function	Code size
3Sin3Xor_R	237 μ instructions + 8 entries = 245 long words
3Sin3Xor_T	3 μ instructions + 8 entries = 11 long words
3Sin3Xor_sync	26 μ instructions + 8 entries = 34 long words
3Sin3Xor_res	38 μ instructions + 8 entries = 46 long words
3Sin3Xor_fault	9 μ instructions + 8 entries = 17 long words

- Configuration Order** The CPU configures the TPU as follows.
1. Disables the channels by clearing the two channel priority bits on each channel used (not necessary after reset).
 2. Selects the channel functions on all used channels by writing the function numbers to the channel function select bits.
 3. Initializes function parameters. The parameters *T*, *prescaler*, *DT*, *Theta_H*, *Theta_L* and *sync_presc_addr* must be set before initialization. 32 cosine table values must be set. If a 3Sin3_sync channel or a 3Sin3_res channel is used, then its parameters must also be set before initialization.
 4. Issues an HSR (Host Service Request) type %10 to one of the 3Sin3Xor_R channels to initialize all 3Sin3Xor_R and 3Sin3Xor_T channels. Issues an HSR type %10 to the 3Sin3Xor_sync channels, 3Sin3Xor_res channels and 3Sin3Xor_fault channel, if used.
 5. Enables servicing by assigning a high, middle or low priority to the channel priority bits. All 3Sin3Xor_R and 3Sin3Xor_T channels must be assigned the same priority to ensure correct operation. The CPU must ensure that the 3Sin3Xor_sync or 3Sin3Xor_res channels are initialized after the initialization of 3Sin3Xor_R and 3Sin3Xor_T channels:
 - assign a priority to the 3Sin3Xor_R and 3Sin3Xor_T channels to enable their initialization
 - if a Synchronization Signal or a Resolver Reference Signal channel is used, wait until the HSR bits are cleared to indicate that initialization of the 3Sin3Xor_R and 3Sin3Xor_T channels has completed and
 - assign a priority to the 3Sin3Xor_sync or 3Sin3Xor_res channels to enable their initialization

NOTE: *A CPU routine that configures the TPU can be generated automatically using the MPC500_Quick_Start Graphical Configuration Tool.*

Detailed Function Description

3-Phase Sine Wave Generator – 3 outputs version – XOR version – R channels (3Sin3Xor_R) and 3-Phase Sine Wave Generator – 3 outputs version – XOR version – T channels (3Sin3Xor_T)

The 3Sin3Xor_R and 3Sin3Xor_T TPU functions work together to generate 3 pairs of XOR gate inputs. The XOR gate outputs then produce a 3-channel 3-phase center-aligned PWM signal. Unlike the 3Sin, the generated signals are not top-bottom pairs with dead-times but only top-like signals without dead-times. In order to charge the bootstrap transistors, the PWM signals start to run 1.6ms after their initialization (at 20MHz TCR1 clock). The functions generate signals corresponding to Reference Voltage Vector Amplitude of 0 (50% duty-cycle) until the first reloaded values are processed.

The CPU controls the PWM output by setting the TPU parameters. The Stator Reference Voltage Vector Amplitude *Ampl*, the Stator Reference Voltage Vector angle *Theta* (32-bit) and the angle increment *dTheta* (32-bit), can be adjusted during run time. The PWM period *T* and the *prescaler* – the number of PWM periods per reload of new values – are also read at each reload, so these parameters can be changed during run time. The CPU notifies the TPU that the new reload values are prepared by setting the LD_OK parameter. The TPU notifies the CPU that the reload values have been read and new values can be written by clearing the LD_OK parameter.

The TPU function rotates the Stator Reference Voltage Vector by *dTheta* angle each period. So the TPU can drive the motor with constant amplitude and constant speed independently of the CPU. The CPU can adjust the *Ampl* parameter to change the Stator Reference Voltage Vector amplitude, and the *dTheta* parameter to change the rotation speed. The CPU can also set the absolute value of Stator Reference Voltage Vector angle *Theta*. To notify the TPU that the *Theta* parameter should be loaded instead of using the buffered value, the CPU must set LD_OK = \$8001 instead of \$0001.

The following equations describe how the 3-phase sine wave PWM signal high-times ht_A , ht_B , ht_C and transition times t_{trans} of each channel are calculated:

$$Theta = Theta + dTheta$$

$$s_A = \cos(Theta)$$

$$s_B = \cos(Theta - 120^\circ)$$

$$s_C = -(s_A + s_B)$$

The function **cos** is calculated using a table of 32 values from the first quadrant of one cosine wave period. The function parameter is mirrored in the first quadrant. The function value is obtained by linear interpolation between the two closest table values. **Figure 2** shows the error of the cosine function value

calculation. The maximum error is 7 in the amplitude range <-32768, 32767>, that is 0.021%.


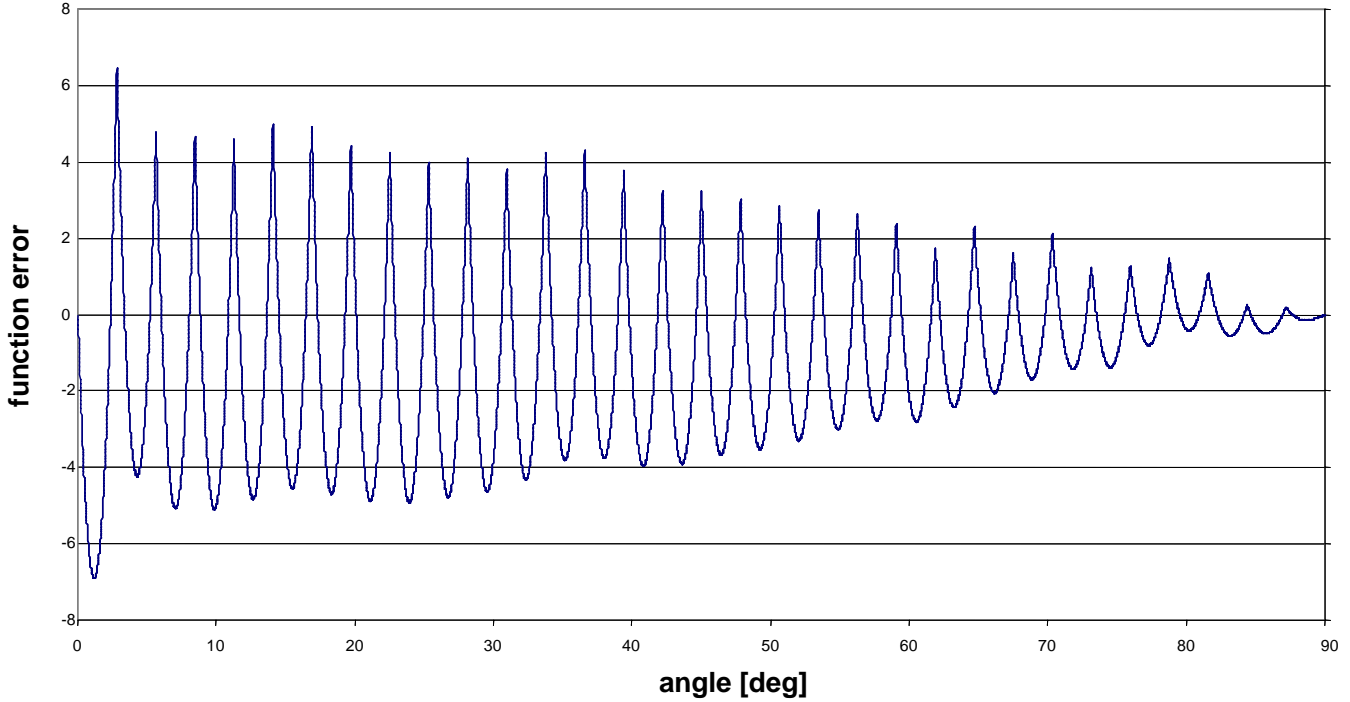


Figure 2. Cosine function value error

$$ht_A = T \cdot \frac{Ampl \cdot s_A + 1}{2}$$

$$ht_B = T \cdot \frac{Ampl \cdot s_B + 1}{2}$$

$$ht_C = T \cdot \frac{Ampl \cdot s_C + 1}{2}$$

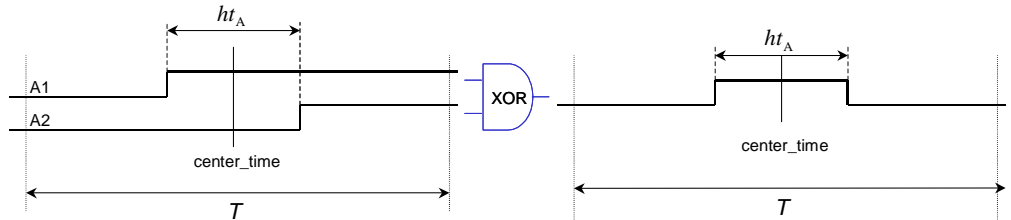

Phase A:

– 1 channel

$$t_{trans} = center_time - \frac{ht_A}{2}$$

– 2 channel

$$t_{trans} = center_time + \frac{ht_A}{2}$$

Phase B and Phase C similarly with ht_B and ht_C substituted to ht_A .

Host Interface





	Written By CPU		Written by both CPU and TPU
	Written By TPU		Not Used

Table 4. 3Sin3Xor_T Control Bits







Name		Options
3 2 1 0 	Channel Function Select	3Sin3Xor_T function number (Assigned during assembly the DPTRAM code from library TPU functions)
1 0 	Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
1 0 	Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Not used 11 – Not used
1 0 	Host Sequence Bits (HSQ)	xx – Not used
0 	Channel Interrupt Enable	x – Not used
0 	Channel Interrupt Status	x – Not used

Table 5. 3Sin3Xor_R Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin3Xor_R function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Stop
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: blue; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted

TPU function 3Sin3Xor_R generates an interrupt when the current values of *Ampl*, *dTheta* (optionally also *Theta*), *T* and *prescaler* have been read by the TPU and indicates to the CPU that it can write new variables. The CPU program can either wait for this interrupt to occur, or poll the *LD_OK* parameter to check it has cleared. The interrupt is generated at each reload by one of the R channels. The T channels do not generate any interrupts.

Table 6. 3Sin3Xor_T and 3Sin3Xor_R Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Phase A 1 channel	0	htA, sA															
	1	x2_chan_A															
	2	x1a_chan_A															
	3	x1b_chan_A															
	4	LD_OK															
	5	prescaler															
	6																
	7																

Table 6. 3Sin3Xor_T and 3Sin3Xor_R Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Phase A 2 channel	0	Ttime_A2																
	1	state																
	2	center_time																
	3	T_copy																
	4	Theta_H																
	5	Theta_L																
	6																	
	7																	
Phase B 1 channel	0	htB, sB																
	1	x2_chan_B																
	2	x1a_chan_B																
	3	x1b_chan_B																
	4	Theta_buf_H																
	5	Theta_buf_L																
	6																	
	7																	
Phase B 2 channel	0	Ttime_B2																
	1	dec																
	2	dTheta_buf_H																
	3	dTheta_buf_L																
	4	dTheta_H																
	5	dTheta_L																
	6																	
	7																	
Phase C 1 channel	0	htC, sC																
	1	x2_chan_C																
	2	x1a_chan_C																
	3	x1b_chan_C																
	4	Ampl																
	5	T																
	6																	
	7																	
Phase C 2 channel	0	Ttime_C2																
	1	prsc_copy																
	2	TA_buf																
	3	F_chan																
	4	CPU14																
	5	sync_presc_addr																
	6																	
	7																	

Table 7. 3Sin3Xor_T and 3Sin3Xor_R parameter description

Parameter	Format	Description
Parameters written by CPU		
Ampl	16-bit fractional	Stator Reference Voltage Vector amplitude, positive values only!
Theta	32-bit fractional	Stator Ref. Voltage Vector angle range $\langle -1, 1 \rangle$ corresponds to $\langle -180^\circ, 180^\circ \rangle$
dTheta	32-bit fractional	Stator Reference Voltage Vector angle increment range $\langle -1, 1 \rangle$ corresponds to $\langle -180^\circ, 180^\circ \rangle$
T	16-bit unsigned integer	PWM period in number of TCR1 TPU cycles
prescaler	16-bit unsigned integer	The number of PWM periods per reload of new values
CPU14	16-bit unsigned integer	Time of 14 IMB clocks in TCR1 clocks.
sync_presc_addr	8-bit unsigned integer	address of synchronization channel <i>prescaler</i> parameter: \$X4, where X is synchronization channel number. \$0 if no synchronization channel is used.
Parameters written by both TPU and CPU		
LD_OK	16-bit unsigned integer	0 CPU can update variables <>0 .. TPU can read variables: \$0001 ... load <i>Ampl</i> , <i>dTheta</i> , <i>T</i> and <i>prescaler</i> only \$8001 ... load also <i>Theta</i> CPU sets \$0001 or \$8001, TPU sets 0
Parameters written by TPU		
fault_pinstate	0 or 1	If fault channel is used, state of fault pin: 0 ... low 1 ... high
Theta_buf	32-bit fractional	Actual Stator Reference Voltage Vector angle range $\langle -1, 1 \rangle$ corresponds to $\langle -180^\circ, 180^\circ \rangle$
Other parameters are just for TPU function inner use.		

Performance

The maximum PWM frequency is 45kHz (PWM period $T = 444$). This can be achieved when only 3Sin3Xor_R and 3Sin3Xor_T run on the TPU and the IMB clock is 40MHz. When other functions run on the same TPU, the minimum PWM period T has to be greater. Get all the other running function states that can be served during one PWM period. Get their lengths (number of IMB clock cycles) and add a time slot transition of 10 IMB clock cycles to each one. Sum all the states lengths including the time slot transition. Convert the result from IMB clock cycles to TCR1 clock cycles according to TCR1 prescaler settings. The result indicates how much greater than the minimum value of 444, T has to be for that particular case.

Table 8. 3Sin3Xor_T State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
ST	2	1
SF	2	0

Table 9. 3Sin3Xor_R State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	102	24
STOP	82	4
SFR ₀	6	1
SFR	66	23
C7	16	4
SFC ₀	6	1
SFC ₁	58	7
SFC ₂	96	10
SFC ₃	88	7
SFC ₄	68	8
SFC ₅	68	8
SFC ₆	80	9

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

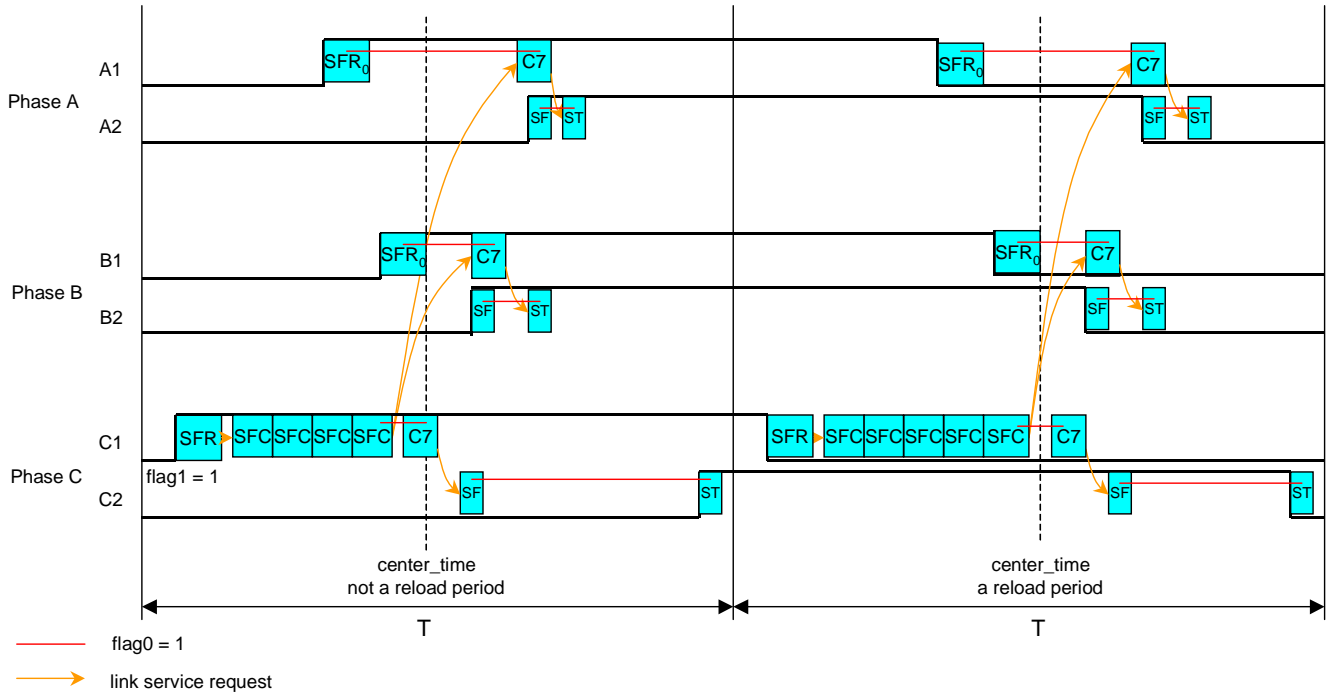


Figure 3. 3Sin3Xor_T and 3Sin3Xor_R timing

NOTE: The R channel with the momentary earliest transition within the PWM period is marked by a flag1 and runs the SFR and SFC states.

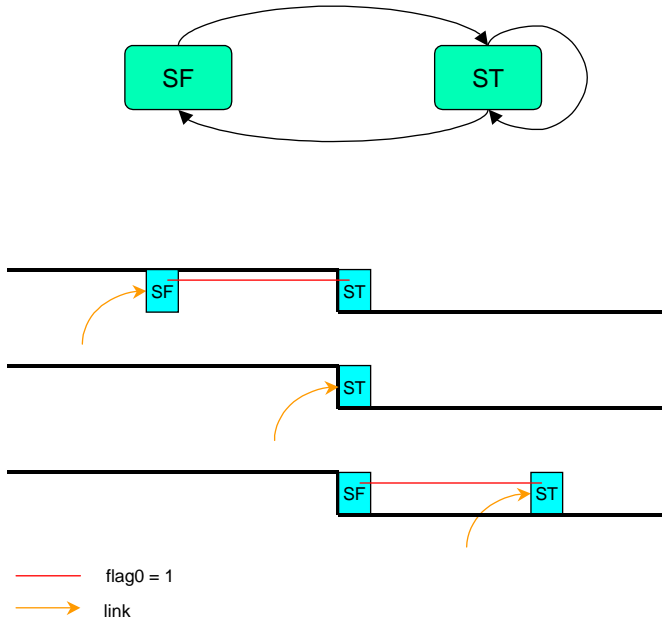


Figure 4. 3Sin3Xor_T state diagram and 3 cases of timing

NOTE: The case that happens is determined by the time when the link comes.

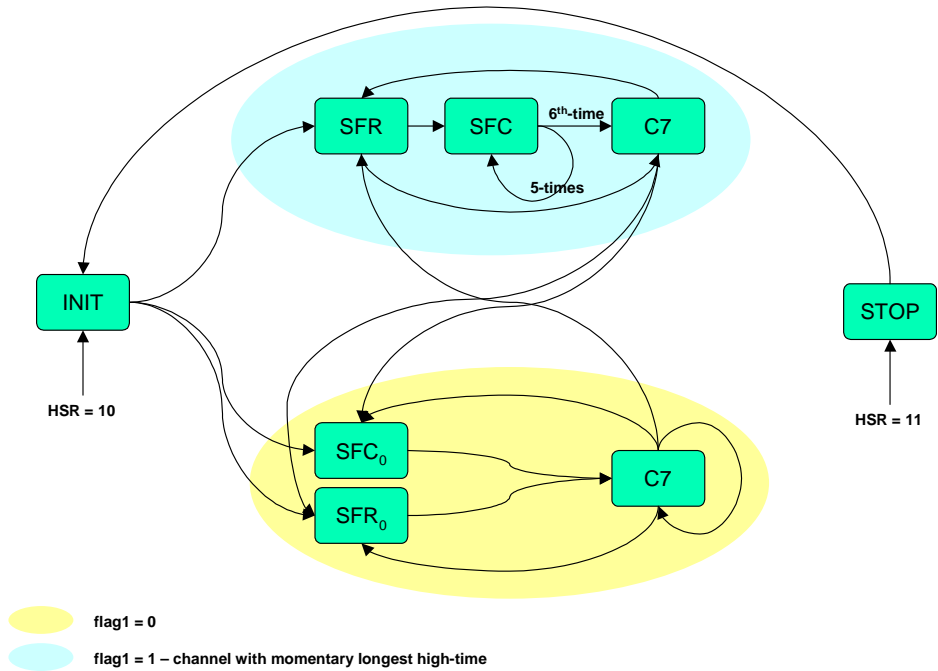


Figure 5. 3Sin3Xor_R state diagram

Synchronization signal for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_sync)

The 3Sin3Xor_sync TPU function uses information obtained from 3Sin3Xor_R and 3Sin3Xor_T functions, the actual PWM center times and the PWM periods. This allows a signal to be generated, which tracks the changes in the PWM period and is always synchronized with the PWM. The synchronization signal is a positive pulse generated repeatedly after the *prescaler* or *presc_copy* PWM periods (see next paragraph). The low to high transition of the pulse can be adjusted by a parameter, either negative or positive, to go a number of TCR1 TPU cycles before or after the PWM period center time. The pulse width *pw* is another synchronization signal parameter.

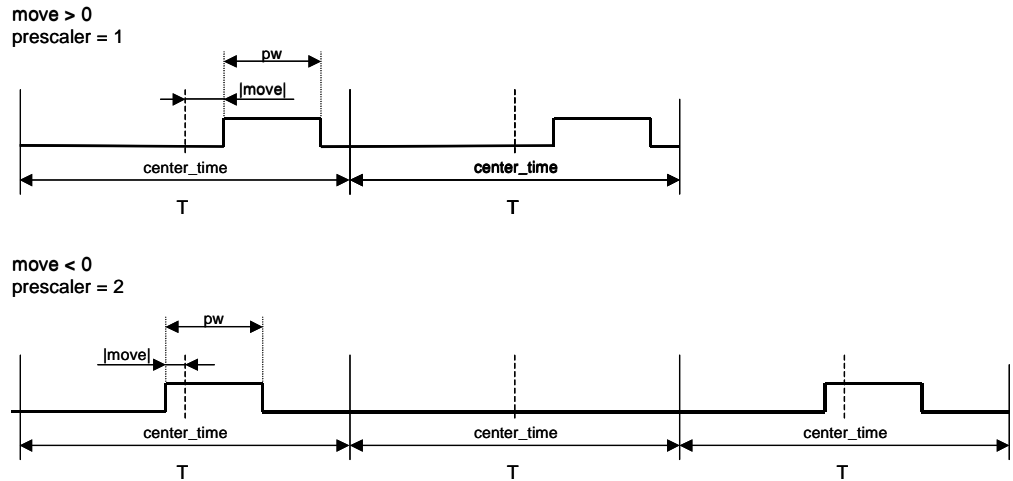


Figure 6. Synchronization signal adjustment examples

Synchronized Change of PWM Prescaler And Synchronization Signal Prescaler

The 3Sin3Xor_sync TPU function actually uses the *presc_copy* parameter instead of the *prescaler* parameter. The *prescaler* parameter holds the prescaler value that is copied to the *presc_copy* by the 3Sin3Xor_R function at the time the PWM parameters are reloaded. This ensures that new prescaler values for the PWM signals, as well as the synchronization signal, are applied at the same time. Write the synchronization signal *prescaler* parameter address to the *sync_presc_addr* parameter to enable this mechanism. Write 0 to disable it, and remember to set the synchronization signal *presc_copy* parameter instead of the *prescaler* parameter in this case.

Host Interface

<input type="checkbox"/>	Written By CPU	<input type="checkbox"/>	Written by both CPU and TPU
<input type="checkbox"/>	Written By TPU	<input type="checkbox"/>	Not Used

Table 10. 3Sin3Xor_sync Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin3Xor_sync function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: blue; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted

TPU function 3Sin3Xor_sync generates an interrupt after each low to high transition.

Table 11. 3Sin3Xor_sync Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Synchronization channel	0	move															
	1	pw															
	2	prescaler															
	3	presc_copy															
	4	time															
	5	dec															
	6	T_copy															
	7																

Table 12. 3Sin3Xor_sync parameter description

Parameter	Format	Description
Parameters written by CPU		
move	16-bit signed integer	The number of TCR1 TPU cycles to forego (negative) or come after (positive) the PWM period center time
pw	16-bit unsigned integer	Synchronization pulse width in number of TCR1 TPU cycles.
prescaler	16-bit unsigned integer	The number of PWM periods per synchronization pulse – use in case of synchronized prescalers change
presc_copy	16-bit unsigned integer	The number of PWM periods per synchronization pulse – use in case of asynchronous prescalers change
Parameters written by TPU		
Other parameters are just for TPU function inner use.		

Performance

There is one limitation. The absolute value of parameter *move* has to be less than a quarter of the PWM period *T*.

$$|move| < \frac{T}{4}$$

Table 13. 3Sin3Xor_sync State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	12	5
S1	12	6
S2	8	3
S3	16	7

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

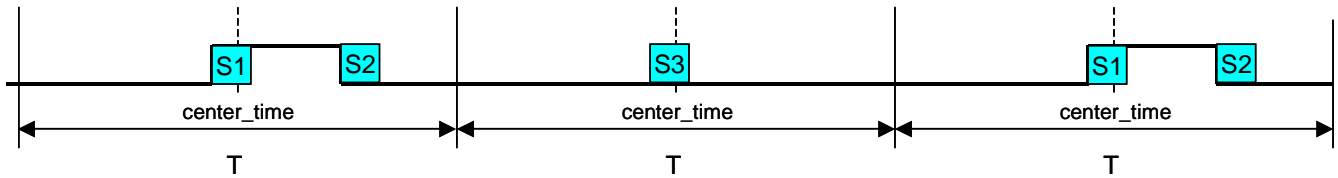


Figure 7. 3Sin3Xor_sync timing

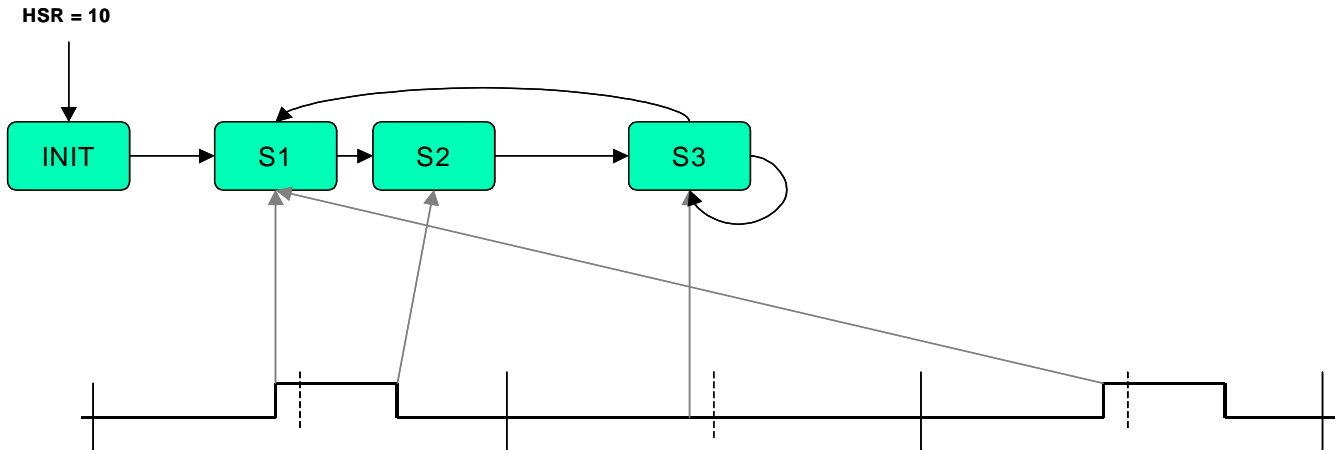


Figure 8. 3Sin3Xor_sync state diagram

Resolver Reference Signal for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_res)

The 3Sin3Xor_res TPU function uses information read from the 3Sin3Xor_R and 3Sin3Xor_T functions, the actual PWM center times and the PWM periods. This allows a signal to be generated, which tracks the changes of the PWM period and is always synchronized with the PWM. The resolver reference signal is a 50% duty-cycle signal with a period equal to *prescaler* or synchronization channel *presc_copy* PWM periods (see next paragraph). The low to high transition of the pulse can be adjusted by a parameter, either negative or positive, to go a number of TCR1 TPU cycles before or after the PWM period center time.

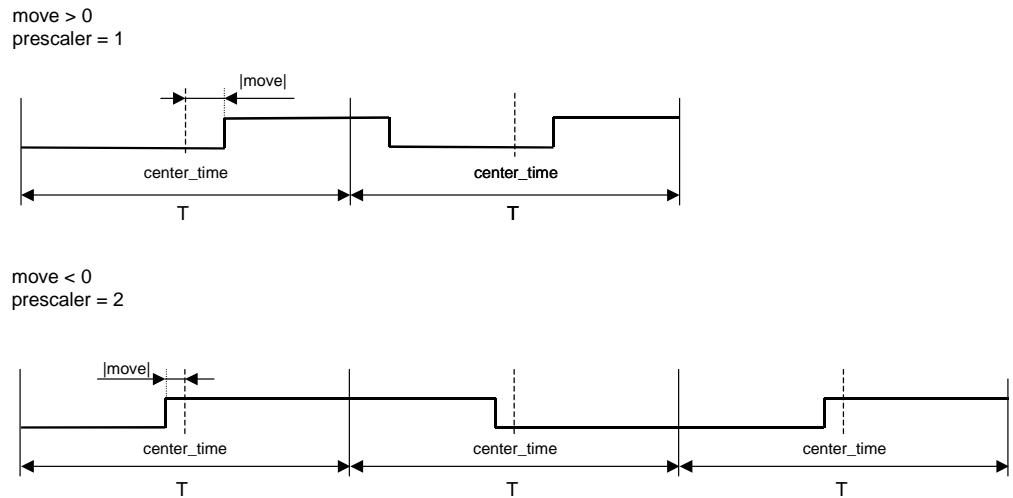


Figure 9. Resolver reference signal adjustment examples

Synchronized Change of PWM Prescaler And Resolver Reference Signals Prescaler

The 3Sin3Xor_res TPU function can inherit the Synchronization Signal prescaler that is synchronously changed with the PWM prescaler. Write the synchronization signals *presc_copy* parameter address to the *presc_addr* parameter to enable this mechanism. Write 0 to disable it, and in this case set the *prescaler* parameter to directly specify prescaler value.

Host Interface





 Written By CPU	 Written by both CPU and TPU
 Written By TPU	 Not Used

Table 14. 3Sin3Xor_res Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin3Xor_res function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	x – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	x – Not used

Table 15. 3Sin3Xor_res Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Resolver	0	move																
	1																	
	2	presc_addr																
	3	prescaler																
	4																	
	5																	
	6																	
	7																	

Table 16. 3Sin3Xor_res parameter description

Parameter	Format	Description
Parameters written by CPU		
move	16-bit signed integer	The number of TCR1 TPU cycles to forego (negative) or come after (positive) the PWM period center time
presc_addr	16-bit unsigned integer	\$00X6, where X is a number of Synchronization Signal channel, to inherit Sync. channel prescaler or \$0000 to enable direct specification of prescaler value in prescaler parameter
prescaler	1, 2, 4, 6, 8, 10, 12, 14, ...	The number of PWM periods per synchronization pulse – use when apresc_addr = 0
Parameters written by TPU		
Other parameters are just for TPU function inner use.		

Performance

There is one limitation. The absolute value of parameter *move* has to be less than a quarter of the PWM period *T*.

$$|move| < \frac{T}{4}$$

Table 17. 3Sin3Xor_res State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	12	5
S1	26	9
S3	18	7

NOTE: Execution times do not include the time slot transition time ($TST = 10$ or 14 IMB clocks)

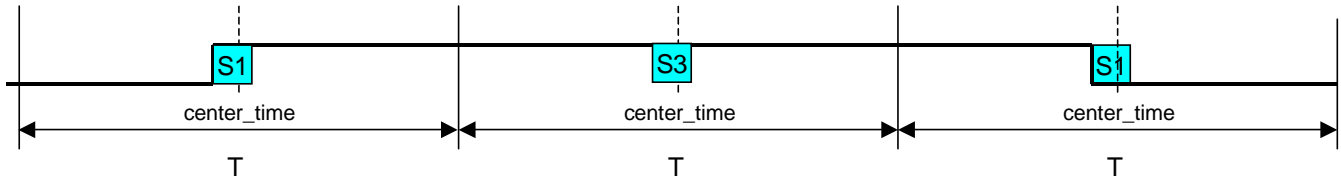


Figure 10. 3Sin3Xor_res timing

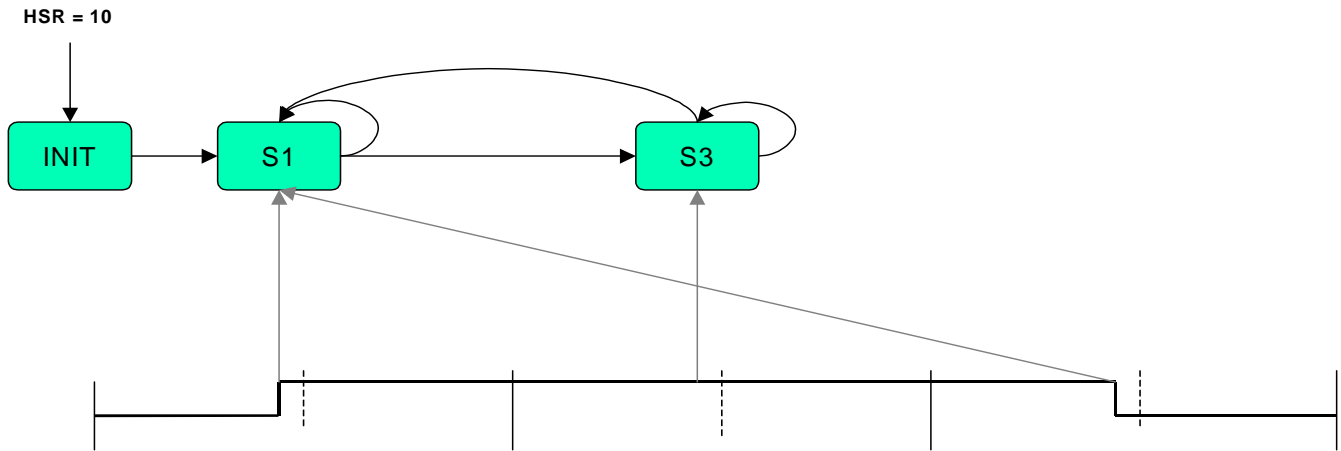


Figure 11. 3Sin3Xor_res state diagram

Fault Input for 3-Phase Sine Wave Generator – 3 outputs version – XOR version (3Sin3Xor_fault)

The 3Sin3Xor_fault is an input TPU function that monitors the pin, and if a high to low transition occurs, immediately sets all PWM channels low and cancels all further transitions on them. The PWM channels, as well as the synchronization and resolver reference signal channels (if used), have to be initialized again to start them running.

The function returns the actual pinstate as a value of 0 (low) or 1 (high) in the parameter *fault_pinstate*. The parameter is placed on the A1 channel to keep the fault channel parameter space free.

Host Interface

<input type="checkbox"/>	Written By CPU	<input type="checkbox"/>	Written by both CPU and TPU
<input type="checkbox"/>	Written By TPU	<input type="checkbox"/>	Not Used

Table 18. 3Sin3Xor_fault Control Bits

Name	Options
<div style="display: flex; justify-content: space-around; width: 100px;"> 3210 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Function Select	3Sin3Xor_fault function number (Assigned during assembly the DPTRAM code from library TPU functions)
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Channel Priority	00 – Channel Disabled 01 – Low Priority 10 – Middle Priority 11 – High Priority
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> </div> Host Service Bits (HSR)	00 – No Host Service Request 01 – Not used 10 – Initialization 11 – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 10 </div> <div style="display: flex; align-items: center;"> <div style="background-color: green; width: 15px; height: 15px; margin-right: 5px;"></div> <div style="background-color: green; width: 15px; height: 15px;"></div> </div> Host Sequence Bits (HSQ)	xx – Not used
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Enable	0 – Channel Interrupt Disabled 1 – Channel Interrupt Enabled
<div style="display: flex; justify-content: space-around; width: 100px;"> 0 </div> <div style="display: flex; align-items: center;"> <div style="background-color: blue; width: 15px; height: 15px; margin-right: 5px;"></div> </div> Channel Interrupt Status	0 – Interrupt Not Asserted 1 – Interrupt Asserted

TPU function 3Sin3Xor_fault generates an interrupt when a high to low transition appears.

Table 19. 3Sin3Xor_fault Parameter RAM

Channel	Parameter	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Fault input	0																
	1																
	2																
	3																
	4																
	5																
	6																
	7																

Table 20. 3Sin3Xor_fault parameter description

Parameter	Format	Description
Parameters written by TPU		
fault_pinstate	0 or 1	State of fault pin: 0 ... low 1 ... high

Performance

Table 21. 3Sin3Xor_fault State Statistics

State	Max IMB Clock Cycles	RAM Accesses by TPU
INIT	8	2
FAULT	88	5
NO_FAULT	4	1

NOTE: Execution times do not include the time slot transition time (TST = 10 or 14 IMB clocks)

 


Figure 12. 3Sin3Xor_fault timing

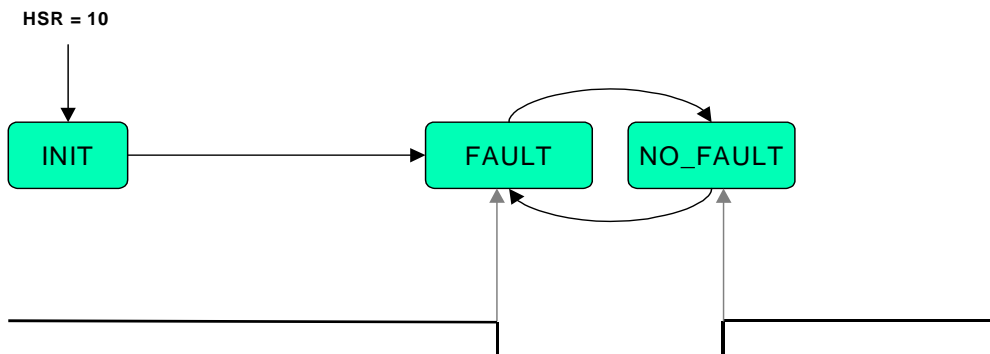


Figure 13. 3Sin3Xor_fault state diagram

How to Reach Us:

Home Page:
www.freescale.com

E-mail:
support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor
Technical Information Center, CH370
1300 N. Alma School Road
Chandler, Arizona 85224
+1-800-521-6274 or +1-480-768-2130
support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064
Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 2666 8080
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
1-800-441-2447 or 303-675-2140
Fax: 303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

