



Attention Kinetis TWR-K60F120M Users

Please note that jumper J6 has been removed from this board. This jumper was intended to select between the on-board 50 MHz oscillator and an external clock (usually from a TWR-SER or TWR-SER2 board). Instead of using J6 to select between the clock sources, J8 can be used:

ON On-board 50 MHz oscillator is powered and sources an input clock to the processor

OFF On-board 50 MHz oscillator is not powered

Note: This option must be selected whenever a Tower module card that provides a clock on primary elevator pin B24 is connected to the CPU module.

As always, continue to check the Kinetis TWR-K60F120M Web page for the most recent documentation, including hardware errata, user manual, lab guides and more.

Learn more at freescale.com/k60

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Kinetis is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © 2012 Freescale Semiconductor, Inc.



Doc Number: K60INSERT REV 0
Agile Number: 926-78677 REV A