

Freescale Semiconductor User's Guide

Document Number: KTUSBSPIDRVUG Rev. 1.0, 10/2012

USB to SPI Device Driver Installation Instructions

Table of Contents

1	Introduction	2
2	Windows 7	2
3	Windows XP	4
4	Revision History	7





Introduction

1 Introduction

The USB to SPI device driver allows the USB to SPI Dongle to communicate with the SPIGen program. SPIGen is a configurable SPI generator written for Microsoft Windows XP, Microsoft Vista, and Microsoft Windows 7. SPIGen uses the USB port of your computer and the USB to SPI Dongle (P/N: KITUSBSPIDGLEVME) to interface with an evaluation board (EVB) or any other test platform.

Note: Before connecting the USB to SPI Dongle to your computer, make sure the SPIGen software has already been installed.

2 Windows 7

When the SPI dongle is connected to the computer, the device driver installation notification should appear as shown in Figure 1.

 


Figure 1.

Clicking on this notification window will display the following dialog box:

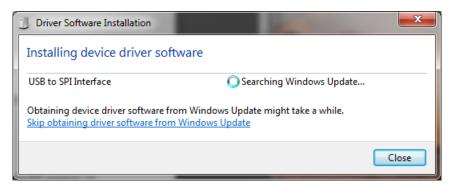


Figure 2.

To speed up the installation process, click on "Skip obtaining driver software from Windows Update".



The following window will be displayed. Click on Yes.



Figure 3.

When the driver installation is complete, the following message will be displayed:

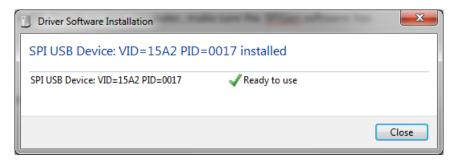


Figure 4.



3 Windows XP

When the SPI dongle is connected to the computer, the New Hardware Wizard should appear as shown in Figure 5.



Figure 5.

Select the "No, not this time" option, then click on Next.

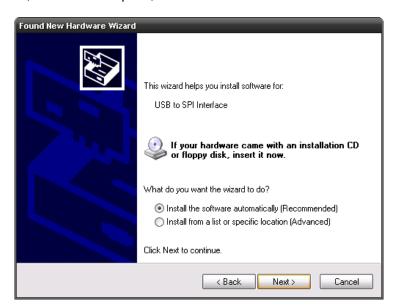


Figure 6.

Select "Install the software automatically", then click on Next.



The wizard will then prompt for the location of the driver as shown in Figure 7.

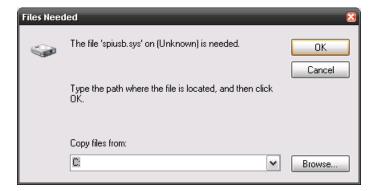


Figure 7.

Select C:\Windows\system32\drivers using the Browse button as shown in Figure 8

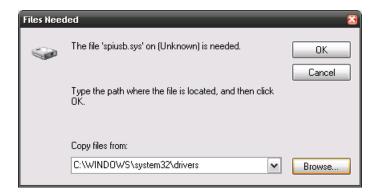


Figure 8.



Windows XP

Click on OK. The driver should now be installed and the following window will be displayed:



Figure 9.

Click on Finish to complete the installation. The SPI to USB Dongle should now be ready to use with SPIGen.



4 Revision History

REVISION	DATE	DESCRIPTION OF CHANGES
1.0	10/2012	Initial Release



How to Reach Us:

Home Page: freescale.com

Web Support:

freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: store.esellerate.net/store/Policy.aspx?Selector=RT&s=STR0326182960&pc.

Freescale, the Freescale logo, AltiVec, C-5, CodeTest, CodeWarrior, ColdFire, C-Ware, Energy Efficient Solutions logo, Kinetis, mobileGT, PowerQUICC, Processor Expert, QorlQ, Qorivva, StarCore, Symphony, and VortiQa are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Airfast, BeeKit, BeeStack, ColdFire+, CoreNet, Flexis, MagniV, MXC, Platform in a Package, QorlQ Qonverge, QUICC Engine, Ready Play, SafeAssure, SMARTMOS, TurboLink, Vybrid, and Xtrinsic are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2012 Freescale Semiconductor, Inc.

Document Number: KTUSBSPIDRVUG

Rev. 1.0 10/2012

