

UM11195

LM75B-PCT2202 temperature sensor daughter card

Rev. 1 — 15 March 2019

User manual

Document information

Information	Content
Keywords	Fm+ Development Kit, OM13320, Temperature Sensor, LM75, PCT2202
Abstract	Installation guide and User Manual for the LM75B-PCT2202 Temperature Sensor Daughter Card that connects to OM13320 Fm+ Development Kit. This board permits easy and simple evaluation of most of the NXP temperature sensor portfolio of products.



Revision history

Rev	Date	Description
v.1	20190315	Initial version

1 Introduction

The LM75B-PCT2202 Temperature Sensor Daughter Card connects directly to the OM13320 Fm+ Development kit and permits easy evaluation of most of NXP's Temperature Sensor portfolio of products.

[Table 1](#) lists the supported devices.

The LM75B-PCT2202 Temperature Sensor Daughter Card is shipped with LM75BDP (TSSOP8) and PCT2202UK (WLCSP6) temperature sensor devices soldered on the board.

There are three additional package footprints for LM75B: LM75BD (SO8), LM75BGD (XSON8U) and LM75BTP (HWSON8).

Table 1. Devices supported by OM13257 Temperature Sensor Daughter Card

Part Number	Package Number	Package Description
LM75BD	SOT96-1	SO8
LM75BDP	SOT505-1	TSSOP8
LM75BGD	SOT998-2	XSON8U
LM75BTP	SOT1069-2	HWSON8
PCT2202UK	PCT2202UK	WLCSP6

1.1 Features of the LM75B-PCT2202 Temperature Sensor Daughter Card

- Direct connection to OM13320 Fm+ Development kit
- Flexible power supply configuration: 3.3 V or 5 V
- Jumper configuration of device I²C address
- LED indicators for power and INT
- Scope ground connection loop

2 Board jumper setup

2.1 Power Supply

The power supply selection for the LM75B-PCT2202 temperature sensor daughter card is very flexible and allows for detailed analysis and evaluation of all the NXP temperature sensor devices. JP1 labeled PWR selects between 5 V supplied from the tester connector CN4 (jumper between pin 2 and 3) and the Fm+ board connector CN5 (jumper between pin 1 and 2). If 3.3 V is desired, no jumper is required.

JP2 (labeled VDD) selects between 5 V and 3.3 V for the main power supply on pin 8 of the device under test. Add a jumper between pins 2 and 3 for 3.3 V supplied by the Fm+ board or 1 and 2 for 5 V selected by JP1.

See [Figure 2](#) for more details.

2.2 I²C Address

The I²C address of the slave temperature sensor device is selected via JP10, JP11 and JP12 connected to pin 5, 6, and 7 of the device under test respectively. Pin 1 of the jumpers is connected to 0 V, while pin 3 is connected to VDD selected above. Consult the datasheet for the I²C addresses corresponding to the logic levels on each pin.

See [Figure 2](#) for more details.

2.3 SCL and SDA source

There are two I²C buses implemented on the Fm+ board and JP3 and JP4 select either Bus 1 or Bus 2 as a source to the device under test. Jumper between pins 1 and 2 to select Bus 2 as a source and jumper between pins 2 and 3 to select Bus 1.

JP5 and JP6 are selected I²C bus to be used to communicate to either LM75B or PCT2202.

Remark: SCL and SDA from CN4 Tester Connector are always connected to the device under test. If two masters are used, there may be contention.

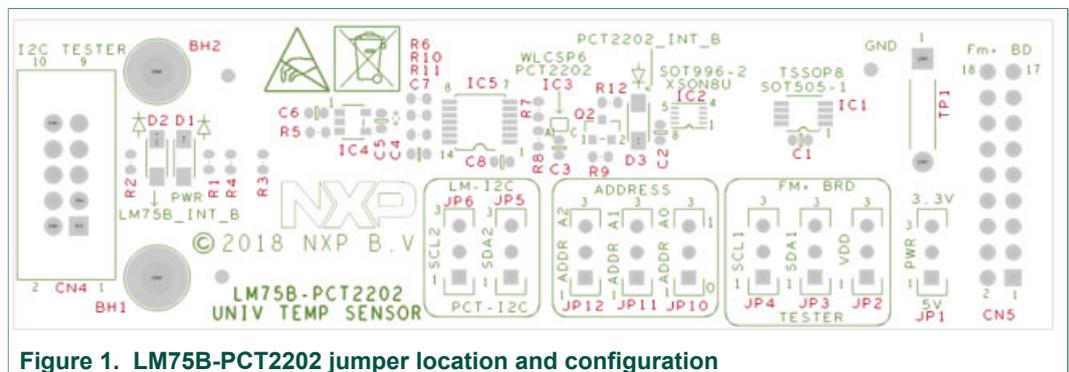


Figure 1. LM75B-PCT2202 jumper location and configuration

3 Connector pinouts

3.1 CN5 Fm+ Development Board connector

The OM13257 can connect directly to the OM13320 Fm+ Development kit via CN5. This connector provides power, I²C signals and other ancillary signals.

Remark: [Table 2](#) lists pin description for CN5.

Table 2. CN5 Fm+ Board connector pinout

CN5 Pin Number	Function	Board Connection
1	—	No connect
2	—	No connect
3	SCL2	I ² C Bus 2 to JP4 pin 1
4	SDA1	I ² C Bus 1 to JP3 pin 3
5	INT_B	Interrupt to INT LED and U1 pin 3
6	RESET_B	
7	+5 V	JP1 pin 1
8	+3.3 V	JP2 pin 3
9	GND	
10	GND	
11	+3.3 V	JP2 pin 3
12	+5 V	JP1 pin 1
13	RESET_B	
14	INT_B	Interrupt to INT LED and U1 pin 3
15	SDA2	I ² C Bus 2 JP3 pin 1
16	SCL1	I ² C Bus 1 JP4 pin 3
17	—	No connect
18	—	No connect

3.2 CN4 Tester connector

Generation, inspection and logging of I2C-bus data is easily achieved with third-party development tools from Total Phase (<http://www.totalphase.com>). There are two tools called Aardvark and Beagle that direct connect to this board through CN4.

Remark: Since SDA and SCL are both connected to the device under test, the Aardvark and the Fm+ Development board cannot be used simultaneously. The Beagle, a bus sniffer, does not have any issues.

Table 3. CN4 Tester connector pinout

CN4 Pin Number	Function	Board Connection
1	SCL	JP6 pin 2
2	Ground	

CN4 Pin Number	Function	Board Connection
3	SDA	JP5 pin 2
4	+5 V	JP1 pin 3
5	+5 V	JP1 pin 3
6	+5 V	JP1 pin 3
7	—	
8	—	
9	—	
10	Ground	

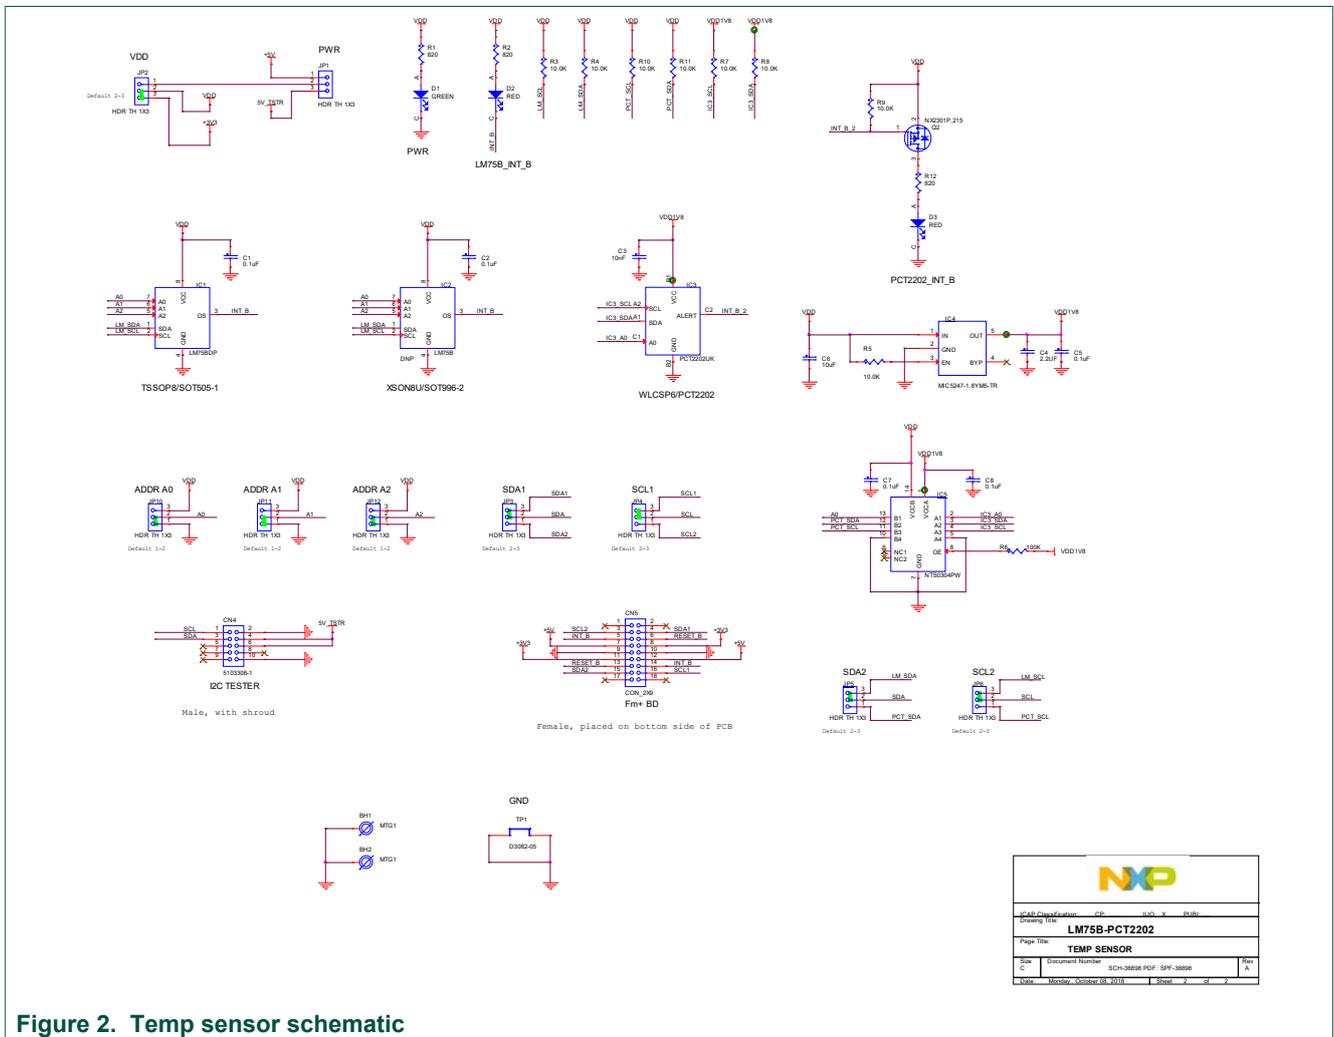


Figure 2. Temp sensor schematic

4 Legal information

4.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

4.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors. In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory. Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and

products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Evaluation products — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer. In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out of the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages. Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

Translations — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

4.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

Tables

Tab. 1. Devices supported by OM13257 Temperature Sensor Daughter Card	3	Tab. 2. CN5 Fm+ Board connector pinout	5
		Tab. 3. CN4 Tester connector pinout	5

Figures

Fig. 1. LM75B-PCT2202 jumper location and configuration4

Fig. 2. Temp sensor schematic6

Contents

1	Introduction	3
1.1	Features of the LM75B-PCT2202 Temperature Sensor Daughter Card	3
2	Board jumper setup	4
2.1	Power Supply	4
2.2	I2C Address	4
2.3	SCL and SDA source	4
3	Connector pinouts	5
3.1	CN5 Fm+ Development Board connector	5
3.2	CN4 Tester connector	5
4	Legal information	7

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

© NXP B.V. 2019.

All rights reserved.

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: salesaddresses@nxp.com

Date of release: 15 March 2019
Document identifier: UM11195