

Low Cost Universal Motor Drive Using Kinetis L family

by: Ivan Lovas

Contents

1 Introduction

Today the universal motor is still widely used in home appliances such as vacuum cleaners, washers, hand tools, and food processors. The operational mode, which is used in this application, is closed loop and regulated speed. This mode requires a speed sensor on the motor shaft. Such a sensor is usually an incremental sensor or a tachometer generator. The kind of motor and its drive have a high impact on many home appliance features like cost, size, noise, and efficiency.

Electronic control is usually necessary when variables speed or energy savings are required. MCUs offer the advantages of low cost and attractive design. They can operate with only a few external components and reduce the energy consumption as well as the cost. This circuit has been designed as a simple schematic using key features of a Kinetis L MCU. For demonstration purposes, the Freescale low cost Freedom KL25Z development platform was used.


This application note describes the design of a low-cost phase angle motor control drive system based on Freescales's Kinetis L series microcontroller (MCU) and the MAC4DC snubberless triac. The low-cost single-phase power board is dedicated for universal brushed motors operating from 1000 RPMs to 15,000 RPMs. This application note explains both HW and SW design with an ARM Kinetis L series MCU.

1	Introduction.....	1
2	Hardware Description.....	4
3	Software.....	6

Introduction

Such a low-cost MCU is powerful enough to do the whole job necessary for driving a closed loop phase angle system as well as many others algorithms.

Figure 1. Freedom development platform with universal motor drive board extension

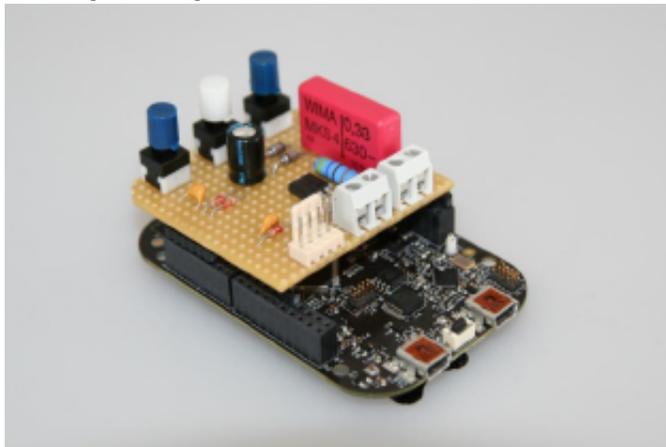

The phase angle control technique is used to adjust the voltage applied to the motor (refer to Figure 6 Power line to software synchronization). A phase shift of the gate's pulses allows the effective voltage, seen by the motor, to be varied. All required functions are performed by just one integrated circuit and a small number of external components. This allows a compact printed circuit board (PCB) design and a cost-effective solution.

1.1 Added Value Using a Microcontroller

Compared to a poor analog solution, an MCU-based drive shows many advantages. Some of them are:

- Choice of different control algorithms
- Choice of any shape of speed command (phase acceleration and deceleration)
- Choice of any type of tachometer
- Software that can make the hardware simpler
- Diagnostic functions
- Remote control by wire and communications protocol
- Open for innovation

1.2 Freescale Freedom Development Platform

The Freescale Freedom FRDM-KL25Z is a low-cost evaluation and development platform to demonstrate the capability of the Kinetis-L family of MCUs, ARM® Cortex™-M0+ based and targeting energy-efficient applications.

Features:

- KL25Z128VLK4--Cortex-M0+ MCU with:
 - 128KB flash, 16KB SRAM
 - Up to 48MHz operation
 - USB full-speed controller
 - OpenSDA- sophisticated USB debug interface
 - Tri-color LED
 - Capacitive touch "slider"
 - Freescale MMA8451Q accelerometer
 - Flexible power supply options
 - Power from either on-board USB connector

- Coin cell battery holder (optional population option)
- 5V-9V Vin from optional IO header
- 5V provided to optional IO header
- 3.3V to or from optional IO header
- Reset button
- Expansion IO form factor accepts peripherals designed for Arduino™-compatible hardware



Figure 2. Freedom low cost development platform

1.3 Freescale Kinetis L family

Kinetis L series MCUs combine the exceptional energy-efficiency and ease-of-use of the new ARM® Cortex™-M0+ processor with the performance, peripheral sets, enablement and scalability of the Kinetis 32-bit MCU portfolio.

The Kinetis L series frees power-critical designs from 8- and 16-bit MCU limitations by combining excellent dynamic and stop currents with superior processing performance, a broad selection of on-chip flash memory densities and extensive analog, connectivity and HMI peripheral options.

Kinetis L series MCUs are also hardware and software compatible with the ARM Cortex-M4-based Kinetis K series, providing a scalable migration path to more performance, memory and feature integration.

Devices start from 8 KB of flash in a small-footprint 4 x 4 mm 24 QFN package extending up to 256 KB in a 121 MBGA package. Each combines ultra-low-power performance with a rich suite of analog, communication, timing and control peripherals.

Common Features		Optional Features										
System		Family	Flash	SRAM	Pin Count	Key Features						
Memory						USB OTG	Seg LCD	DMA	ADC	DAC	I ² S	TSI
ARM® Cortex™-M0+ Core, 48 MHz		KL46	128–256 KB	16–32 KB	64–121	✓	✓	✓	16-bit	12-bit	✓	✓
Multiple low-power modes and peripherals, low-power boot, clock gating		KL36	64–256 KB	8–32 KB	64–121		✓	✓	16-bit	12-bit	✓	✓
1.71–3.6 V, –40° C to +105° C [1]		KL34	64 KB	8 KB	64–100		✓	✓	12-bit			
Analog Peripherals		KL26	128–256 KB	16–32 KB	64–121	✓		✓	16-bit	12-bit	✓	✓
12/16-bit ADC, 12-bit DAC		KL25	32–128 KB	4–16 KB	32–80	✓		✓	16-bit	12-bit		✓
High-speed comparator		KL24	32–64 KB	4–8 KB	32–80	✓		✓	12-bit			
Serial Interfaces		KL16	256 KB	16–32 KB	64–80			✓	16-bit	12-bit	✓	✓
UART (including 1 LPUART)		KL15	32–128 KB	4–16 KB	32–80			✓	16-bit	12-bit		✓
SPI, I ² C		KL14	32–64 KB	4–8 KB	32–80			✓	16-bit			
Timers		KL05	8–32 KB	1–4 KB	24–48			✓	12-bit	12-bit		✓
Real-time clock [2]		KL04	8–32 KB	1–4 KB	24–48			✓	12-bit			
16-bit low-power TPMs (GP timer/PWM)		KL02	8–32 KB	1–4 KB	16–32				12-bit			
Low-power timers												
32-bit periodic interrupt timer												

[1] Feature not available on CSP packages
 [2] For KL02, use software to support

Figure 3. Kinetis L family portfolio

2 Hardware Description

2.1 Function Description

In Figure 4 Schematic, the schematic of a phase angle motor control board is shown. The phase angle drive needs only one integrated circuit - the MCU. The snubberless triac MAC4DC is used as the power device. This triac has high dv/dt immunity and, therefore, there is no RC circuit around the triac. The MT1 pin of the triac is connected to VCC and the GATE pin is connected directly to the microcontroller. The triac’s turn-on level on pins PTC1–PTC3 is 0 V. This configuration was chosen for two reasons. The first is the current capability of the pins of port A. In the Kinetis L family specification can be found that the source capability is 5 mA and the sink capability is 10 mA. Our choice is the sink mode. The second reason is determined by the triac. A common law states that snubberless triacs with high dv/dt immunity need a higher gate trigger current IGT. The MAC4DC needs at least 25 mA typically in case of negative IGT. For an operational mode with positive IGT, the gate trigger current is much higher. Our choice is to use a negative IGT. Three pins, PTC 1,2,3 , are connected together and are powerful enough to cover the amount of current needed by the gate and to turn on the triac reliably.


The power supply includes only a few components (D1, D4, R2, C12, C13, and F1). The output voltage is +3.3 V and despite its simplicity it is able to supply the microcontroller, the external control panel, and also the triac.

Warning

This circuit is powered directly from the line. Do not touch any parts of this board. When working with this board, do not connect any computer, scope, or development system. In this case, it is necessary to use an isolation transformer.

2.2 Schematic

Figure 4. Schematic

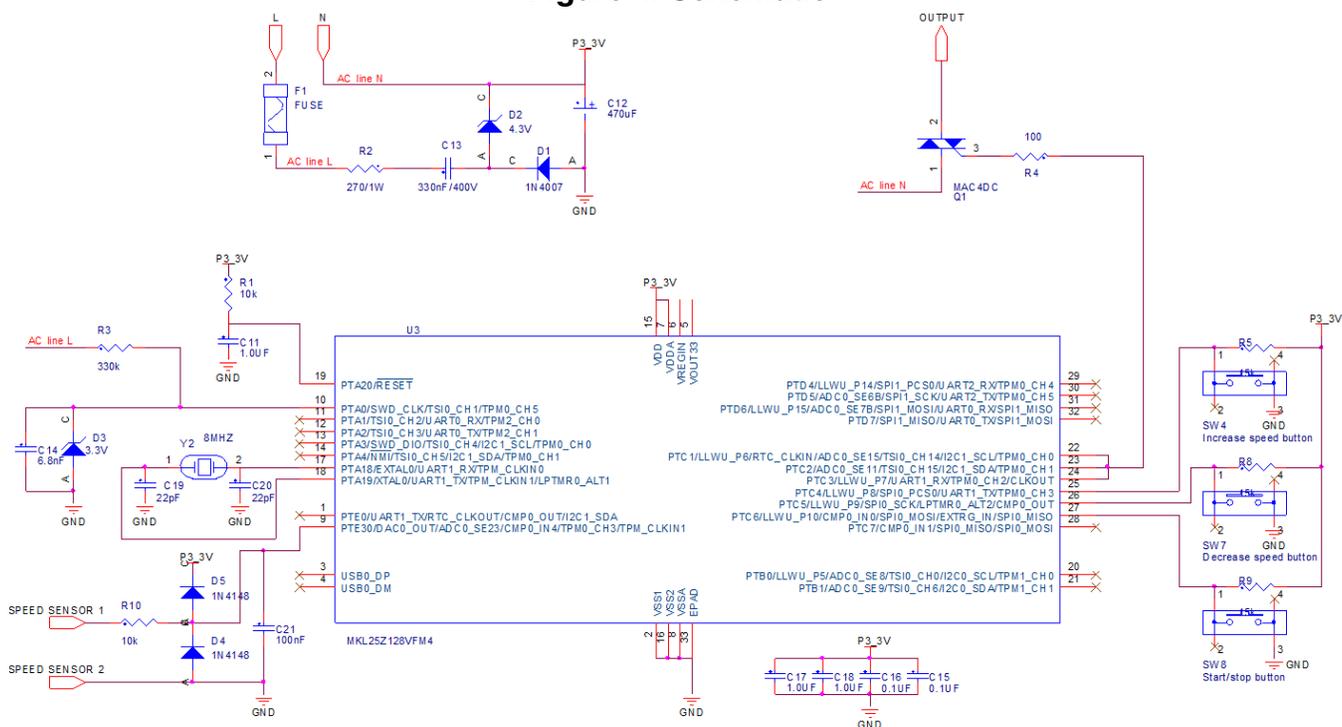

The circuitry connected to pin PTA2 is needed for the acquisition of a synchronization signal. This signal provides the most important information to the microcontroller, which is the zero crossing of the line voltage. The point of the zero crossing is fundamental for the calculation of any triac's action. All actions and the functionality concerning the triac are controlled by software. Because this board provides the control algorithm in closed loop mode, some devices allow connection of a tachometer or incremental position sensor. An input filter with D5 protects the internal comparator against high voltage at high speed, and diode D4 protects the comparator against negative voltage. If the incremental speed sensor is needed, this protection circuit can be omitted. The output square wave signal from the internal comparator is internally connected to timer. With this arrangement, the input capture feature of the microcontroller can be used. The speed command can be set externally using buttons SW1 and SW3. A simple external control panel should be linked with the phase angle power stage when the external commands are needed.

2.3 User Interface

The pushbuttons SW1, SW2 and SW3 allow to control the drive. There are external pull-up resistors because this device does not support internal pull-up resistors on each pin. The SW1 and the SW3 are used to increase or decrease the motor speed and the SW2 is used to Start/Stop the drive.

NOTE

The control panel must be isolated from the user under all possible circumstances.


2.4 Synchronization HW

The basic principle of the phase angle control algorithm is simple: match the firing pulse time of the triac in relation with the zero crossing of the line voltage. A phase shift of this firing pulse produces a variable output voltage on the load. A structure with two interrupts has been chosen to ensure proper functionality and some additional CPU performance capacity. See Figure 6 Power line to software synchronization.

As it is well known, the phase angle drive system needs to have information about the line voltage and its zero crossing points. The appropriate signal is connected to pin PTA0. Only one resistor (R3), one capacitor (C14), and a diode (D3) are used. Due to its simplicity and its low-cost solution, the output signal is not a real square wave (purple signal).

In Figure 5 Zero cross detection waveform, the relationship between the input signal on PTA0 (purple), zero cross detection (green) and line voltage (blue) can be seen.

Figure 5. Zero cross detection waveform

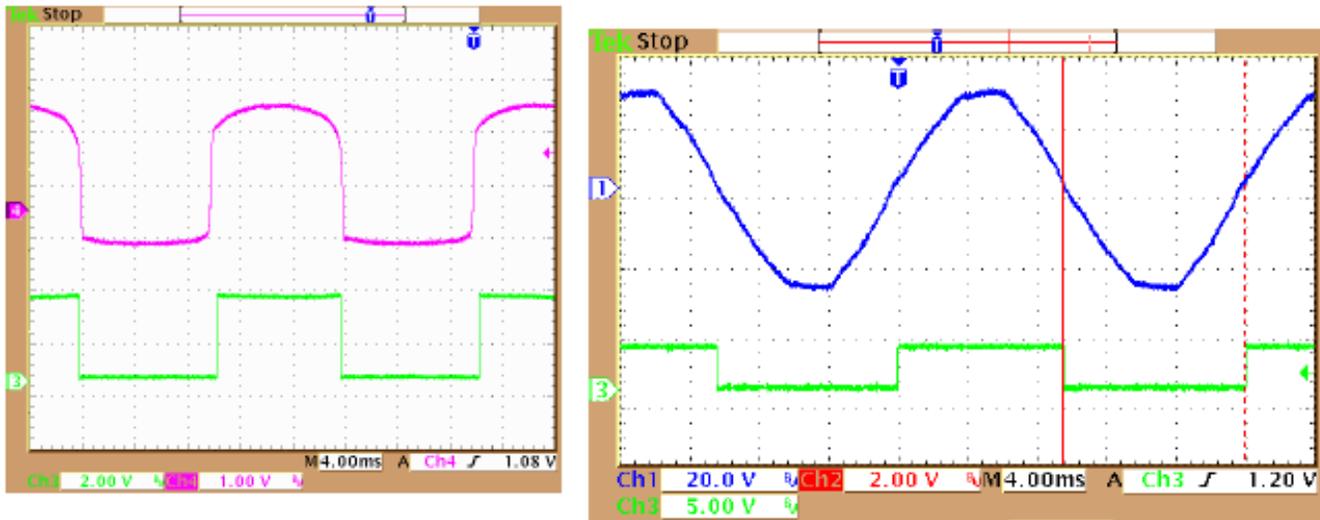

For more information about synchronization software see Section 3.2 Synchronization SW.

3 Software

3.1 Peripheral Configuration

For the motor control to properly function the following peripherals should be configured.

- CPU core
- Periodic interrupt timer (PIT)
- GPIO port and interrupt from GPIO
- Timer/PWM Module (TPM)

3.1.1 CPU Core Configuration

Default system startup configures the CPU clock to 48 MHz. To conserve energy consumed by CPU, the core clock frequency should be decreased. In our case the software is very simple, so the clock can be configured to 3MHz. It can be done by changing the core clock output divider in register SIM_CLKDIV1. However there is still enough power to execute motor control algorithm and other control software. Changing the frequency of core clock:

```
SIM_CLKDIV1 = SIM_CLKDIV1_OUTDIV1(15); // select core clock divider to 15
```

3.1.2 Periodic Interrupt Timer Configuration

Configuration of PIT timer is very easy. Only the peripheral clock, timer start value, and interrupt enable bits should be configured.

```
// PIT configuration
SIM_SCGC6 |= SIM_SCGC6_PIT_MASK;
PIT_MCR = PIT_MCR_FRZ_MASK; // freeze timer when debug mode
PIT_LDVAL0 = 24000; // default start value (333nS per one tick at 3MHz)
PIT_TCTRL0 = PIT_TCTRL_TIE_MASK |
PIT_TCTRL_TEN_MASK; //enable Timer and timer interrupt
```

3.1.3 GPIO Port and Interrupt Setup

At least 8 GPIO pins should be used for this application. Two versions of configuration can be used. The first one is for MKL25Z128VFM4 device which is packed in a QFN32 package. The second configuration is used for Freedom KL25Z development platform which contains the 80-pin package. The pins are set as per Table 1 Microprocessor pins usage.

Table 1. Microprocessor Pin Usage

	KL25Z128VFM4	Freedom KL25Z
User Interface	Port C 4,5,6	PORT E 23,29,30
Triac gate pulses	Port C 1,2,3	PORT E 20,21,22
Zero cross detection	PORT A 0	PORT A 17
Speed measurement	PORT E 30	PORT C 6

The interrupt should be configured properly. To do this, we need to write down an interrupt into the vector table.

```
#undef VECTOR_038
#define VECTOR_038 PIT0_isr
#undef VECTOR_046
#define VECTOR_046 Zero_Cross_isr
```

Then, we need to enable interrupt in the NVIC register:

```
/* Determine which of the NVICISERS corresponds to the irq */
NVIC_ICPR |= 1 << ((38 - 16)%32);
NVIC_ISER |= 1 << ((38 - 16)%32);
NVIC_ICPR |= 1 << ((46 - 16)%32);
NVIC_ISER |= 1 << ((46 - 16)%32);
```


3.2 Synchronization SW

Only one periodic interrupt timer is used to generate the delay after zero cross and the triac gate pulses. For an explanation how the synchronization works the “Figure 6 Power line to software synchronization” will be used. The PIT status is represented by the 5 status from the Figure.

1. Zero cross detected – To detect the zero cross point, an interrupt from GPIO port is used. After the zero cross interrupt occurs and the previous pulse is successfully generated, the PIT timer is reconfigured to have the required control angle. At that moment, the PIT starts to count. The “control_angle” variable is used to change the actual control angle.

2. Wait to achieve control angle - The timer status is switched to “wait for pulse” mode. In this mode the microprocessor waits for PIT interrupt.
3. Control angle achieved – When the required phase angle is achieved, the PIT interrupt occurs. Timer is reconfigured to generate triac gate pulses according to the required pulse width. The “pulse_wide” variable is used to change the gate pulse width.
4. Pulse generate – The gate signal is being generated. The number of pulses depends on PULSES_COUNT macro.
5. Pulse OK – A pulse is generated successfully. The application waits for the next half wave.

Figure 6. Power Line to Software Synchronization

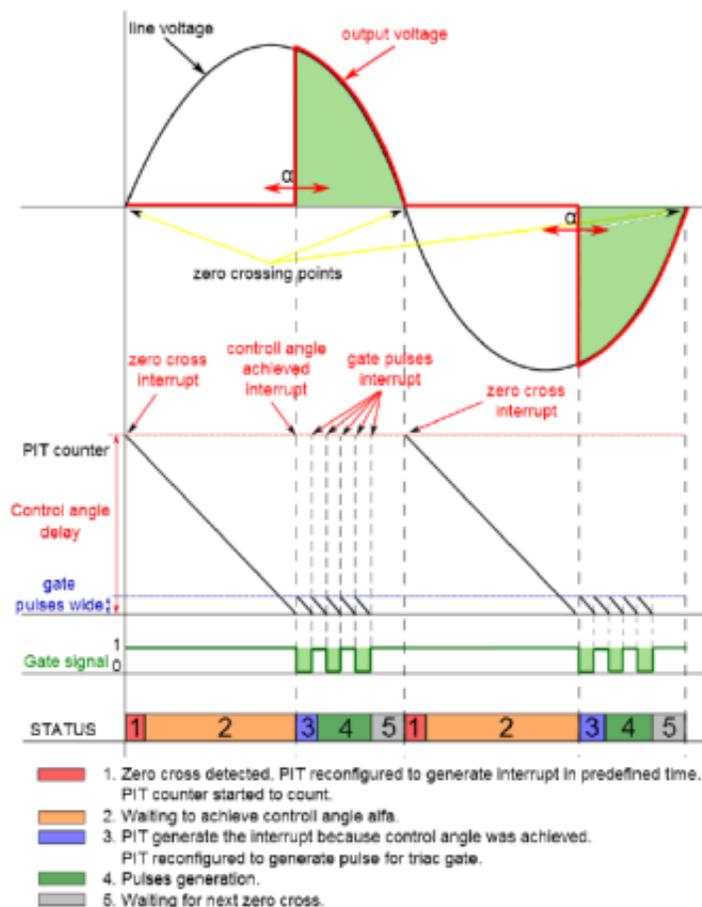

Interrupt routine for zero cross event service:

```
void Zero_Cross_isr (void)
{ if (pit_state == PULSE_OK) // if previous pulse generated successfully setup PIT for next trigger
  { PIT_LDVAL0 = controll_angle; // for enter new value into PIT, timer should be disabled and enabled again
    PIT_TCTRL0 = 0; // timer disable
    PIT_TCTRL0 |= PIT_TCTRL_TEN_MASK | PIT_TCTRL_TIE_MASK; // timer enable pit_state = WAIT_FOR_PULSE; // change PIT status }
  PORTA_ISFR |= (1UL); // clear flag }
```

Interrupt routine for PIT event service:

The PIT timer is used for two purposes:

1. It generates an interrupt at a predefined time after the line voltage zero cross. In this case PIT counter is started in Zero_Cross_isr routine, when the line voltage zero cross is detected.
2. It generates a pulse sequence for triac. In this case timer is started in PIT0_isr routine and the interrupt is called periodically until the required pulse count is reached.

```

void PIT0_isr(void)
{
    switch(pit_state)
    {
        case (WAIT_FOR_PULSE): // start to generate triac pulses after defined phase angle
        {
            PIT_LDVAL0 = pulse_wide; // set pulse wide for triac gate in PIT cycles
            // for enter new value into PIT, timer should be disabled, flag cleared
            // and PIT enabled again
            PIT_TCTRL0 = 0; // timer disable
            PIT_TFLG0 |= PIT_TFLG_TIF_MASK; // clear flag
            PIT_TCTRL0 |= PIT_TCTRL_TEN_MASK | PIT_TCTRL_TIE_MASK; // timer enable
            if(run == 1) { GPIOC_PCOR |= PORTC_1_2_3_MASK; } // generate pulse on 3 pins simultaneously
            using mask
            pulse_counter = 0;
            pit_state = PULSE_GEN; // switch state
            break;
        }
        case (PULSE_GEN):
        {
            if(run == 1) {GPIOC_PTOR |= PORTC_1_2_3_MASK;} // set pin level on three pins at the same
            time, using mask
            pulse_counter ++;
            if( pulse_counter > PULSES_COUNT)//repeat until required pulse count achieved
            { PIT_LDVAL0 = controll_angle; // after all pulses was generated wait for next line voltage
            half wave PIT_TCTRL0 = 0; // timer disable pit_state = PULSE_OK;
            }
            break;
        }
    }
    PIT_TFLG0 |= PIT_TFLG_TIF_MASK; //clear flag
}

```

3.3 Performance


Table 2 Memory usage shows how much memory was needed to run the phase angle drive. A significant part of the memory is still available.

Table 2. Memory Usage

Memory	Available	Used
SRAM	32 KB	65 bytes
ROM	256 KB	1.5 KB

“Figure 7 Current waveform, triac pulses and zero cross detection” shows the final operation of this application. The blue line waveform shows drive input current. The red waveform shows triac gate pulses generated by the microcontroller and the green one shows the detection of the line voltage zero cross.

Figure 7. Current waveform, triac pulses and zero cross detection

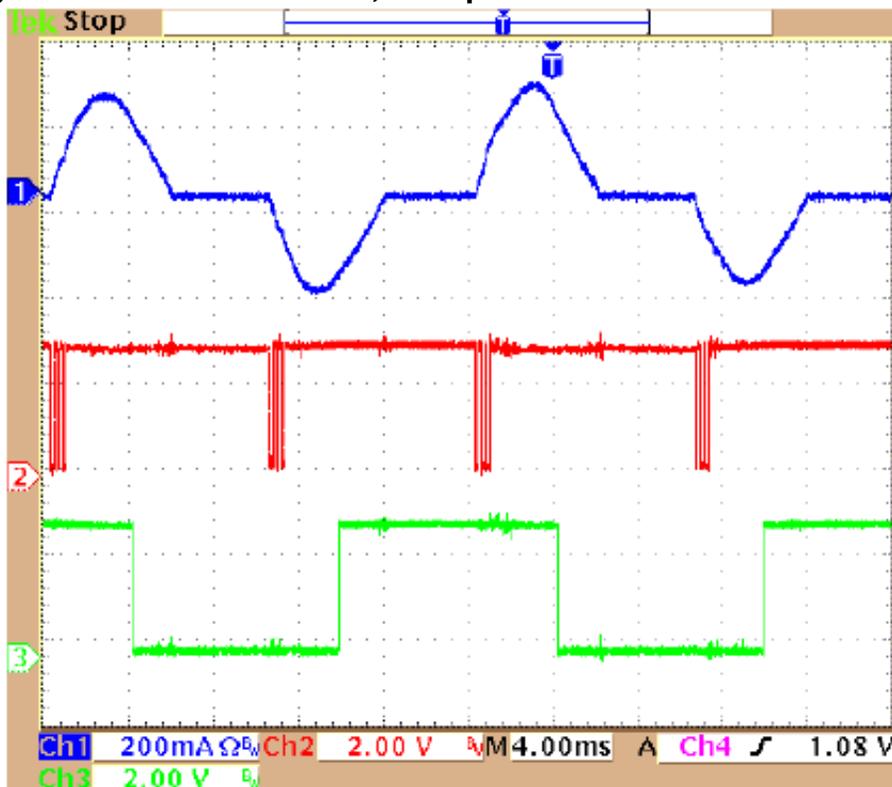

3.4 Conclusion

This application note describes an application that can be used in a low-cost product. The unused memory and performance capacity are still available for other customer purposes. These facts make this application especially suitable for the appliance market.

3.5 References

1. AN1663, Low cost universal motor Sensorless phase angle drive ssystem, by Ivan Skalka, Andrzej Lara, Freescale, Inc.
2. AN1662, Low cost universal motor phase angle drive ssystem, by Ivan Skalka, Freescale, Inc.
3. MAC4DCM Data Sheet from ON Semiconductor
4. KL25 Sub-Family Reference Manual by Freescale, Inc.

How to Reach Us:

Home Page:

www.freescale.com

Web Support:

<http://www.freescale.com/support>

USA/Europe or Locations Not Listed:

Freescale Semiconductor
Technical Information Center, EL516
2100 East Elliot Road
Tempe, Arizona 85284
+1-800-521-6274 or +1-480-768-2130
www.freescale.com/support

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
www.freescale.com/support

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064
Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor China Ltd.
Exchange Building 23F
No. 118 Jianguo Road
Chaoyang District
Beijing 100022
China
+86 10 5879 8000
support.asia@freescale.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductors products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claims alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics as their non-RoHS-complaint and/or non-Pb-free counterparts. For further information, see <http://www.freescale.com> or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to <http://www.freescale.com/epp>.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2012 Freescale Semiconductor, Inc.