
S32 Design Studio for Power Architecture 2.1

Installation Guide

Document Number: S32DSPAIG



Contents

System requirements.....	3
Installation prerequisites for Linux platforms.....	5
Downloading the installer.....	8
Obtaining the activation code.....	10
Installing S32DS for Power Architecture.....	12

System requirements

To maximize performance, the S32DS for Power Architecture tools should be installed on a computer with the recommended system configuration. While the tools will operate on a computer with the minimum configuration, the limited hardware will restrict its ability to function at desired performance levels.

Table 1: Requirements for Windows platform

<p>Recommended Configuration</p> <ul style="list-style-type: none"> • PC with 2.6 GHz Intel® Pentium® compatible processor or better • 4 GB of RAM • 8.5 GB of disk space (when installing all product features or all updates) • 3.32 GB of temporary storage (required only during the product installation) • USB port for communications with target hardware • Ethernet port for communications with target hardware (optional)
<p>Operational Minimum Configuration</p> <ul style="list-style-type: none"> • PC with 1.8 GHz Intel® Pentium® compatible processor • 2 GB of RAM • 8.5 GB of disk space • 3.32 GB of temporary storage (required only during the product installation) • USB port for communications with target hardware
<p>Java Runtime</p> <ul style="list-style-type: none"> • Java Runtime Environment 1.8 32-bit (included in the installation package)
<p>Host Operating System Support</p> <ul style="list-style-type: none"> • Microsoft® Windows® 7 32-bit and 64-bit • Microsoft® Windows® 8 32-bit and 64-bit • Microsoft® Windows® 8.1 32-bit and 64-bit • Microsoft® Windows® 10 32-bit and 64-bit <p>Note: S32 Design Studio for Power Architecture 2.1 supports all flavors and editions of the above operating systems as limited to the requirements of the Java Runtime Environment.</p>

Table 2: Requirements for Linux platform

<p>Recommended Configuration</p> <ul style="list-style-type: none"> • PC with 2.6GHz Intel® Pentium® compatible processor or better • 4 GB of RAM • 7.5 GB of disk space • 3.1 GB of temporary storage (required only during the product installation) • USB port for communications with target hardware • Ethernet port for communications with target hardware (optional)
<p>Operational Minimum Configuration</p> <ul style="list-style-type: none"> • PC with 1.8 GHz Intel® Pentium® compatible processor • 2 GB of RAM

- 7.5 GB of disk space
- 3.1 GB of temporary storage (required only during the product installation)
- USB port for communications with target hardware

Java Runtime

- Java Runtime Environment 1.8 64-bit (must be installed separately)

GNU Compiler Collection

- GCC 5.x

Host Operating System Support

- Ubuntu LTS 16.04 64-bit
- Debian 8 64-bit
- CentOS 7 64-bit

Note: S32 Design Studio for Power Architecture 2.1 supports all editions of the operating systems listed above and is limited only by the requirements of the Java Runtime Environment.

Installation prerequisites for Linux platforms

The following preliminary steps are required before you install S32 Design Studio for Power Architecture 2.1.

- The user account installing the product needs to be a member of sudoers group
- Compatibility libraries necessary to run a 32-bit toolchain on a 64-bit Linux need to be installed
- **Table 3: Installing 32-bit compatibility libraries**

Libraries	Platform	Installing
lib32z1 lib32ncurses5 libstdc++6	Ubuntu 14	<pre>sudo apt-get install lib32z1 lib32ncurses5 lib32stdc++6 lib32bz2-1.0 libc6:i386 libx11-6:i386 libxpm4:i386</pre>
lib32bz2-1.0 glibc libX11 libxpm4	Ubuntu 16	<pre>sudo dpkg --add-architecture i386 sudo apt-get update sudo apt-get install lib32z1 libncurses5:i386 libstdc++6:i386 lib32bz2-1.0 libc6:i386 libx11-6:i386 libxpm4:i386</pre>
	Debian	<pre>sudo dpkg --add-architecture i386 sudo apt-get update sudo apt-get install lib32z1 lib32ncurses5 lib32stdc++6 libc6:i386 libx11-6:i386 libxpm4:i386</pre>
	CentOS	<pre>sudo yum install zlib.i686 ncurses-devel.i686 glibc.i686 libstdc++.i686 libX11.i686 libXpm.i686</pre>

- Java Runtime Environment 1.8 64-bit and JavaFX:

Table 4: Installing JRE 1.8 and JavaFX

Platform	Installing
Ubuntu and Debian	<pre>sudo apt-get install openjdk-8-jre openjfx</pre>
CentOS	<p>1. Download the following rpm packages:</p> <ul style="list-style-type: none"> • Headless Oracle Java Runtime Environment • Oracle Java Runtime Environment • Oracle JavaFX runtime <p>2. Install:</p> <pre>sudo rpm -Uvh java-1.8.0-oracle- headless-1.8.0.181-3.el7.R.x86_64.rpm java-1.8.0-oracle-1.8.0.181-3.el7.R.x86_64.rpm java-1.8.0-oracle-javafx-1.8.0.181-3.el7.R.x86_64.rpm</pre>

Platform	Installing
	3. Configure the alternatives: <pre>sudo alternatives --config java</pre> Then type the selection number of installed java version.

- An up-to-date version of the MAKE utility:

Table 5: Installing MAKE

Platform	Installing
Ubuntu	<pre>sudo apt-get install make</pre>
Debian	<pre>sudo apt-get install build-essential</pre>
CentOS	<pre>sudo yum install make</pre>

- Webkit1 for GTK2:

Table 6: Installing libwebkitgtk

Platform	Installing
Ubuntu and Debian	<pre>sudo apt-get install libwebkitgtk-1.0-0</pre>
CentOS	<pre>sudo yum install webkitgtk</pre>

- The TCL package is required to run the scripts found in the Project_Settings container in a project.

Table 7: Installing TCL

Platform	Installing
Ubuntu and Debian	<pre>sudo apt-get install tcl</pre>
CentOS	<pre>sudo yum install tcl</pre>

- The 32-bit Python 2.7 needs to be installed to use the GDB Python build (arm-none-eabi-gdb-py):

Table 8: Installing Python

Platform	Installing
Ubuntu and Debian	<pre>sudo apt-get install libpython2.7:i386</pre>
CentOS	<pre>sudo yum install python-libs.i686</pre>

- The unix2dos utility:

Table 9: Installing unix2dos

Platform	Installing
Ubuntu and Debian	<pre>sudo apt-get install tofrodos</pre>
CentOS	<pre>sudo yum install unix2dos</pre>

Downloading the installer

The installer package contains the complete S32 Design Studio for Power tool and can be used on the computer with no access to the Internet.

To download the offline installer, perform these steps:

1. Go to the S32 Design Studio IDE page: www.nxp.com/S32DS.

The S32 Design Studio IDE is a complimentary Integrated Development Environment (IDE) for automotive and ultra-reliable Power Architecture® (e200 core) and Arm® based microcontrollers. Based on open-source software including Eclipse IDE, GNU Compiler Collection (GCC), and GNU Debugger (GDB), the S32 Design Studio IDE is a straightforward development tool with no code-size limitations that enables editing, compiling, and debugging of designs.

NXP software, along with the S32 Design Studio, provides a comprehensive enablement environment that reduces development time.

	PRODUCTS	DEVELOPER RESOURCES	
S32 Design Studio Integrated Development Environment (IDE) for NXP Automotive processors that enables editing, compiling and debugging of your designs.	S32 Design Studio IDE for Arm® based MCUs Targeting S32K14x, KEA, and MAC57D54H microcontrollers; also S32V234 processors.	S32 Design Studio IDE for Power Architecture® based MCUs Targeting MPC57xx and MPC56xx families of microcontrollers; also S32R microcontrollers.	S32 Design Studio for Vision Targeting S32V processors.

2. Choose the required product and go to the **Downloads** tab.
3. Click **Download** next to the **S32 Design Studio for Power Architecture 2.1 – Windows/Linux** hyperlink. If you have not logged in, you will be directed to the **NXP Sign In** page.
4. On the **Software Terms and Conditions** page review the license terms as you scroll down, then click **I Agree**.



Software & Support

- Product List
- Product Search
- Order History
- Recent Product Releases
- Recent Updates

Licensing

- License Lists
- Offline Activation

FAQ

- Download Help
- Table of Contents
- FAQs

Software Terms and Conditions

S32 Design Studio for PA

Please read the following agreement and click "I AGREE" at the bottom before downloading your software.

LA_OPT_TOOL Software Tools v14 January 2019

IMPORTANT. Read the following NXP Software License Agreement ("Agreement") completely. By selecting the "I Accept" button at the end of this page, you indicate that you accept the terms of the Agreement and you acknowledge that you have the authority, for yourself or on behalf of your company, to bind your company to these terms. You may then download or install the file.

NXP SOFTWARE LICENSE AGREEMENT

This is a legal agreement between you, as an authorized representative of your employer, or if you have no employer, as an individual (together "you"), and NXP B.V. ("NXP"). It concerns your rights to use the software identified in the Software Content Register and provided to you in binary or source code form and any accompanying written materials (the "Licensed Software"). The Licensed Software may include any updates or error corrections or documentation relating to the Licensed Software provided to you by NXP under this License. In consideration for NXP allowing you to access the Licensed Software, you are agreeing to be bound by the terms of this Agreement. If you do not agree to all of the terms of this Agreement, do not download or install the Licensed

5. In the **File name** column, click the link next to the installer. If you want to download several files, select the check boxes and click **Download selected files**.
6. Confirm the download and specify the location where you want the installer package to be saved.


Obtaining the activation code


When you agree with the Software Terms and Conditions, you get a notification message with the activation code to your email address.

NXP Software Notification- Thank you for your interest in S32 Design Studio for PA v2.1

nxp@flexnetoperations.com

Sent: 12.04.2019 23:19

To:  John Doe

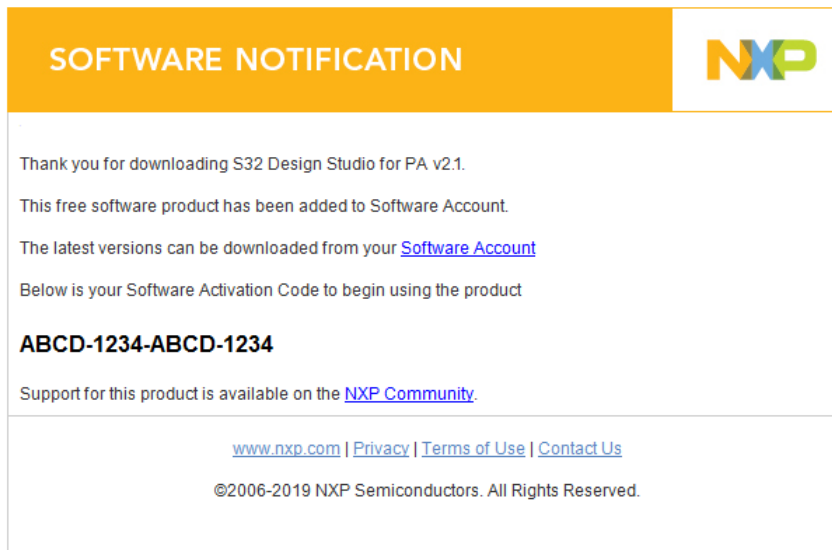

Alternatively, you can find your activation code on the NXP website.

1. Open the **Sign In or Register** page: www.nxp.com/security/login. The **My Account** page opens after signing in.
2. Click **Software Licensing and Support** and then click **Product List**.
3. On the **Product Information** page click the product link.
4. The **Product Download** page appears. Click the **License Keys** tab to open the **License Information** page. Write down or copy the **Activation Code**, you will need it to continue the installation.



Software & Support

[Product List](#)[Product Search](#)[Order History](#)[Recent Product Releases](#)[Recent Updates](#)

Licensing

[License Lists](#)[Offline Activation](#)

FAQ

[Download Help](#)[Table of Contents](#)[FAQs](#)

License Information

S32 Design Studio for PA

[View](#)

Item Description	S32 Design Studio for PA																		
Order Number	S32DS_1234																		
Purchase Order Number																			
Total Number of Licenses:	101																		
Activation Code	ABCD-1234-ABCD-1234																		
License Applicable to Product(s):																			
<u>Version</u>	<u>Description</u>																		
2.1	S32 Design Studio (View EULA)																		
100 Available																			
<table border="1"> <tr> <td>License Quantity:</td> <td>1</td> <td></td> </tr> <tr> <td>Fulfillment ID:</td> <td>123456789</td> <td></td> </tr> <tr> <td>Expiration Date:</td> <td>Nov 20, 2022</td> <td></td> </tr> <tr> <td>Product:</td> <td>S32 Design Studio for PA</td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>Machine:</td> <td>ABCD1234ABCD1234ABCD1234ABCD1234ABCD1234</td> <td></td> </tr> <tr> <td>Activation Code:</td> <td>ABCD-1234-ABCD-1234</td> <td></td> </tr> </table>		License Quantity:	1		Fulfillment ID:	123456789		Expiration Date:	Nov 20, 2022		Product:	S32 Design Studio for PA	<input checked="" type="checkbox"/>	Machine:	ABCD1234ABCD1234ABCD1234ABCD1234ABCD1234		Activation Code:	ABCD-1234-ABCD-1234	
License Quantity:	1																		
Fulfillment ID:	123456789																		
Expiration Date:	Nov 20, 2022																		
Product:	S32 Design Studio for PA	<input checked="" type="checkbox"/>																	
Machine:	ABCD1234ABCD1234ABCD1234ABCD1234ABCD1234																		
Activation Code:	ABCD-1234-ABCD-1234																		

Note: Codes depicted in this document are provided for illustration only and are fictitious.

Installing S32DS for Power Architecture

To install S32 Design Studio for Power, you need to run the downloaded installation package on the target workstation. Installing the product from the command line in the console or silent mode is not supported.

To install S32 Design Studio for Power:


1. Go to the location where you saved the S32 Design Studio for Power installation package, then do one of the following depending on the target platform:

Platform	Action
Windows	<p>Double-click the S32 Design Studio for Power installation package to start the installation procedure.</p> <p>Note: The user account designated for installing S32 Design Studio for Power must be a member of the local Administrators security group. If User Account Control (UAC) is enabled, Windows will ask you to elevate the privileges when you run the installation package. When asked by UAC, grant the S32 Design Studio for Power installer permissions to make changes on your computer.</p>
Linux	<p>Open the terminal and navigate to the directory with the downloaded BIN file:</p> <pre>cd ~/S32DS</pre> <p>Add the execute permissions to the binary:</p> <pre>chmod a+x ./<install_name>.bin</pre> <p>Run the installer:</p> <pre>./<install_name>.bin</pre> <p>Note: The user account used to install S32 Design Studio for Power has to be a sudoers group member. You do not need the root privileges to install the product.</p>

The S32 Design Studio splash screen appears.




2. When the install wizard appears, click **Next**:

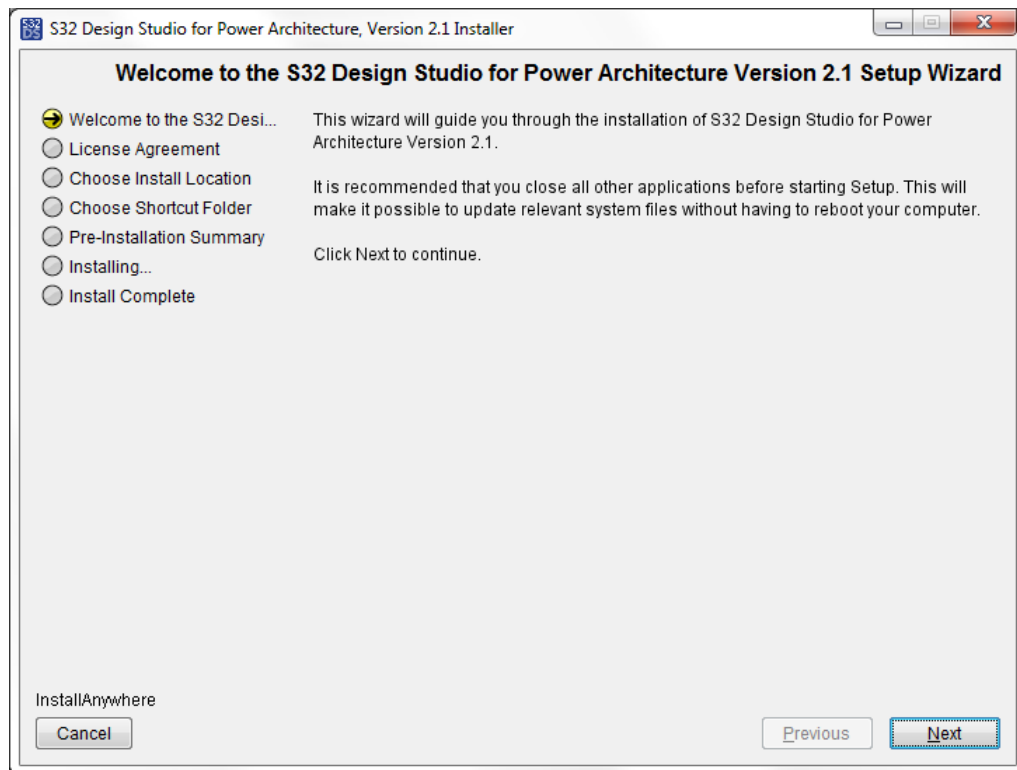


If you install S32DS for Power Architecture on Windows, the **Choose additional feature(s)** page opens.


3. Choose the installation type for S32DS for Power Architecture, and then click **Next**.
4. Review the text of license terms as you scroll down it, then accept and click **Next**:

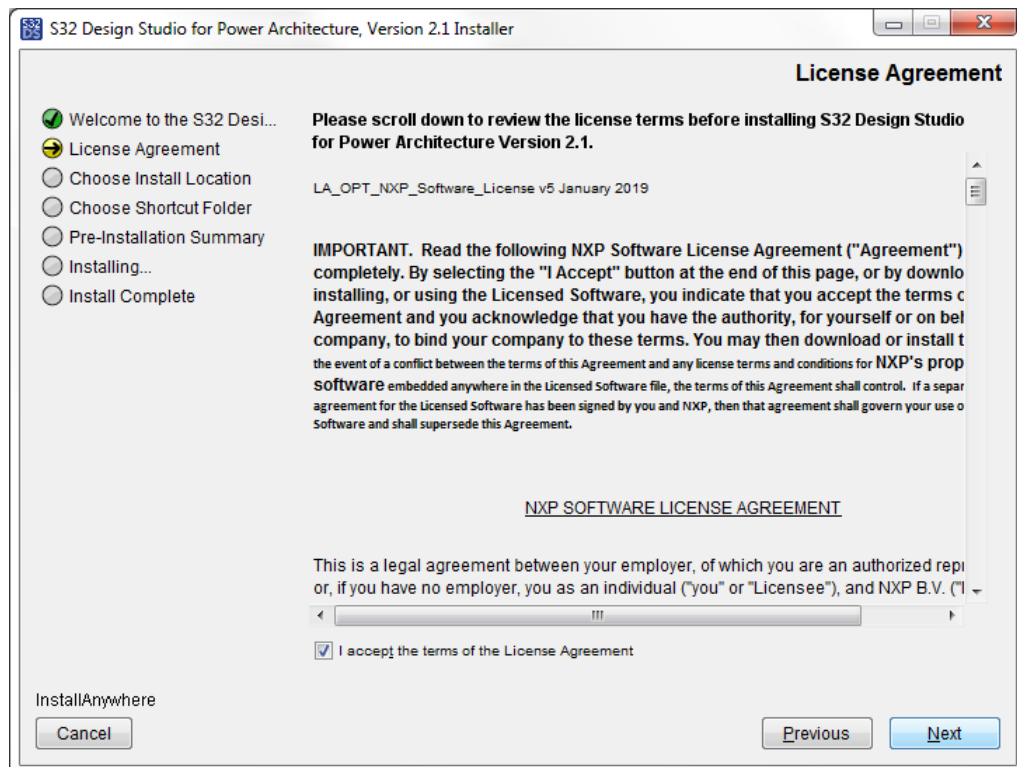


5. Specify the installation folder for S32 Design Studio for Power. Click **Next**:

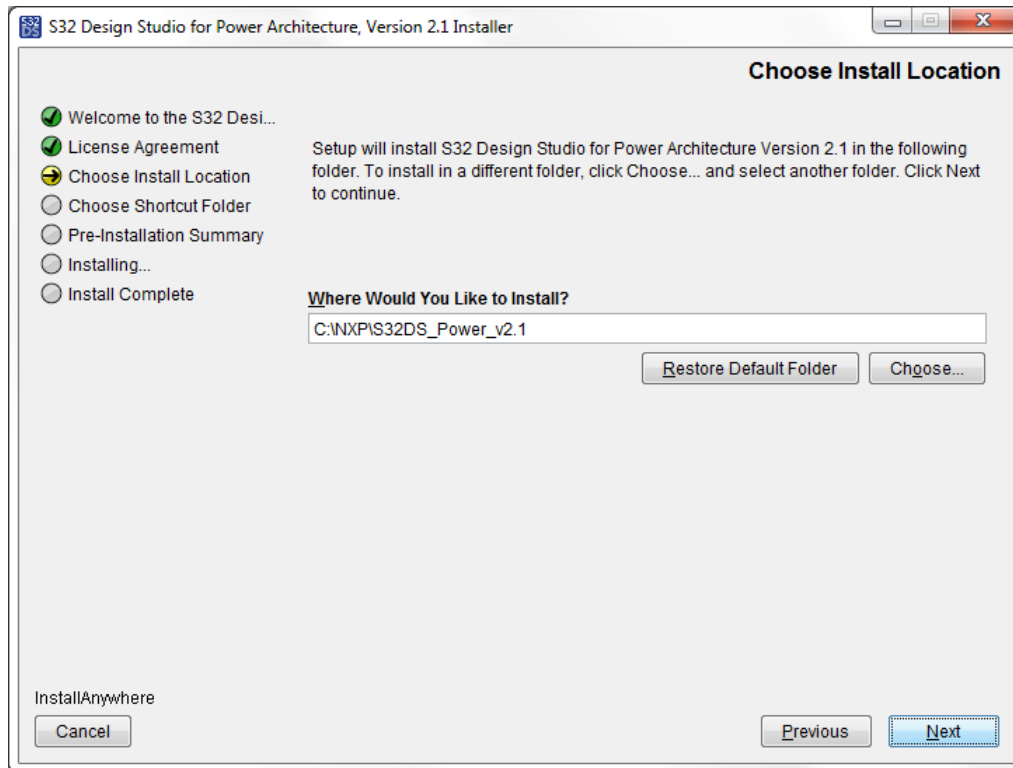

6. Choose the folder for S32 Design Studio for Power program shortcuts. Select **Create Icons for All Users** if you want the shortcuts to be available for all users of this computer. Click **Next**:

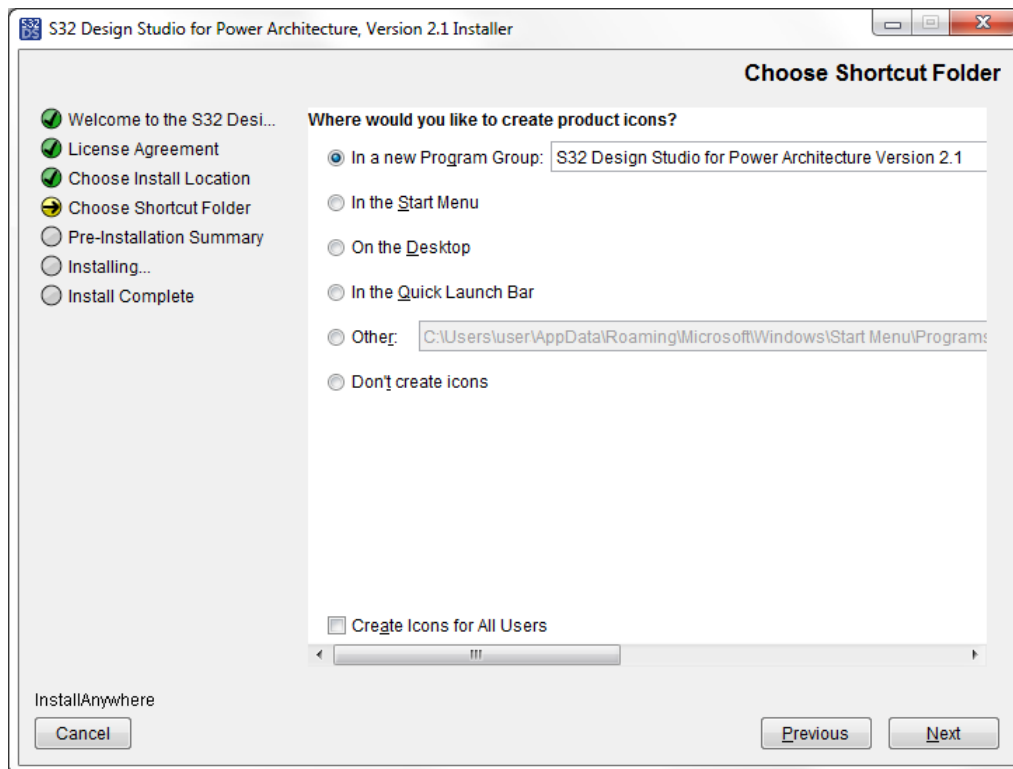


7. Review the pre-installation summary before installing:

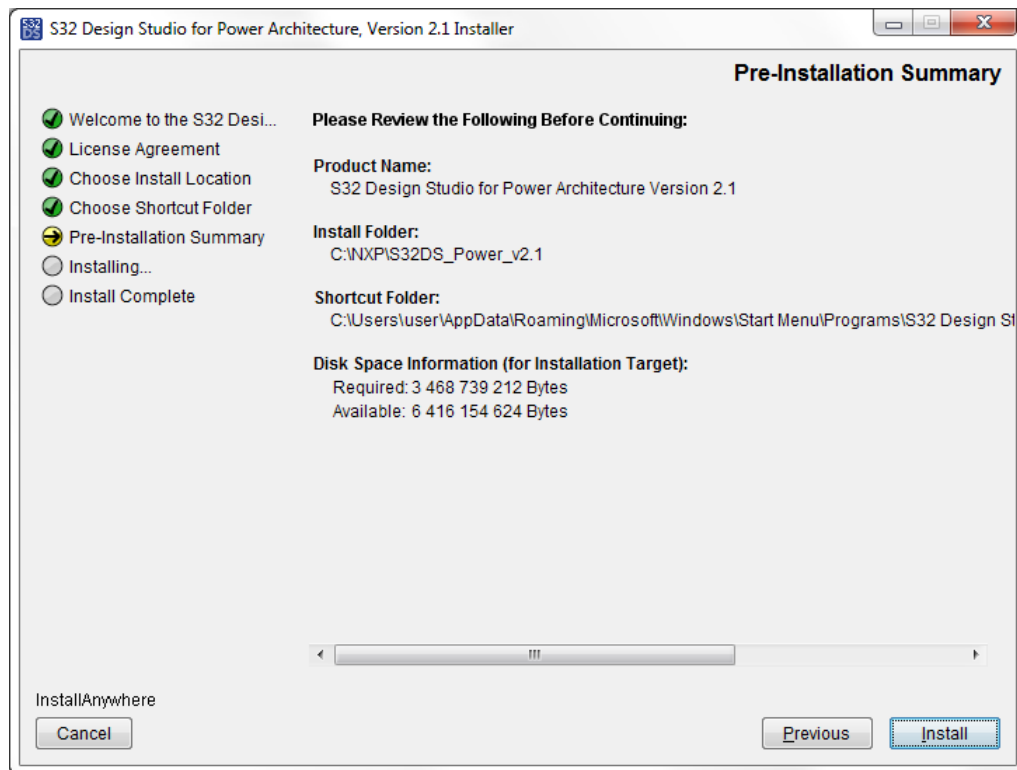

8. Click **Install**. Depending on the target platform, you may need to confirm elevation of the installation process.


Platform	Action
Windows	The wizard checks for existence of C++ runtime installed, and, if necessary, start installing required libraries from the Microsoft Visual C++ 2010 and 2013 packages. No user input required.
Linux	The wizard prompts you to enter your password in the terminal window. When the Enter your sudoer password in the Console... message appears, switch to the terminal window and enter your user password.

9. The installation continues by checking your Windows permissions and installing the Flexera Windows licensing services on your computer. The services are required to license your instance of S32 Design Studio for Power.
10. The installer looks for the S32 Design Studio for Power license on your computer:

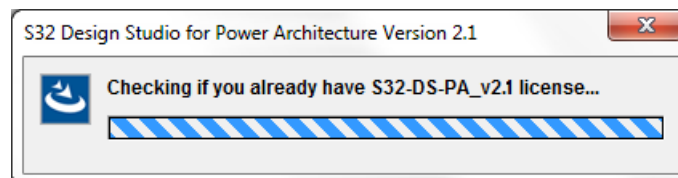

Note: A license issued for an earlier version of S32 Design Studio for Power cannot be used.


11. If no valid license is found on your computer, the installer notifies you about it and asks you to provide the activation code to obtain the license:

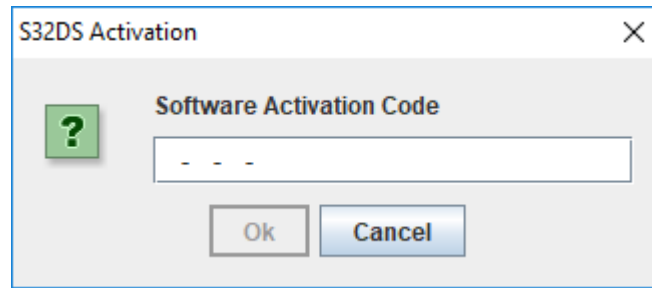

Note: If you click **Cancel**, the installation rolls back.

12. Enter the activation code and click **OK**.

13. Choose the activation type for S32DS for Power Architecture:

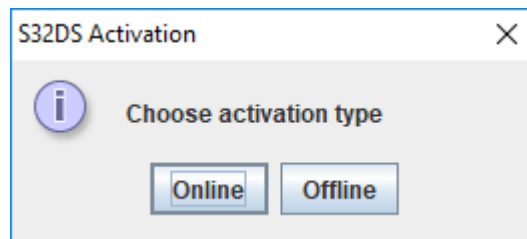

- *Online* activation

If you click **Online**, the installer sends an activation request to a remote activation server and automatically activates your instance of S32 Design Studio for Power. If activation succeeds, S32 Design Studio for Power is licensed and registered on your computer automatically.

- *Offline* activation If you click **Offline**, the **Activation request** dialog box appears to let you to activate S32 Design Studio for Power without access to the Internet. You will need another device connected to the Internet to communicate with the NXP website.

- After you click **Offline** in the **S32DS Activation** message box, the **Activation request** dialog box appears to let you save the XML file with the activation request.
- Save the XML file with the request for offline activation.
- Copy the saved **request.xml** file to the device connected to the Internet. On that device, sign in on the NXP website: www.nxp.com/security/login. Open the **My Account** page where you downloaded the installation package, then click **Offline Activation**.

Note: You do not necessarily have to license the S32 Design Studio for Power in this installation session. Once you have created the offline activation request file, you can close the installer.

- On the **Offline Activation** Web page, browse to the **request.xml** file on the device connected to the Internet. Click **Process** to submit the request file.

Account

ALL Search...

PRODUCTS APPLICATIONS SUPPORT ABOUT

Software & Support

Product List

Product Search

Order History

Recent Product Releases

Recent Updates

Licensing

License Lists

Offline Activation

FAQ

Download Help

Table of Contents

FAQs

Reference your saved request XML file in the form below. After clicking activate, you will be prompted to download the activation response. Save it and load it into your application to activate.

F:\temp\request.xml Browse...

Process


- e) Save the generated **activation.xml** file from the website to the device.
- f) Save the copy of the **activation.xml** file to your computer. If you have previously closed the installer, run it again and generate the **request.xml** file. Leave the generated request file intact.
- g) After you save the activation request file, the **Activation response** dialog box appears. Browse to the **activation.xml** file and click **Load**.

14. If activation is successful, the installation continues automatically.

Note: During the installation process you may be prompted to proceed with the installation wizards of the specific drivers.

computer, the installer shows the error message:

15. Wait until the S32 Design Studio for Power installer finishes the installation and shows the **Install Complete** page. Click **Done**:

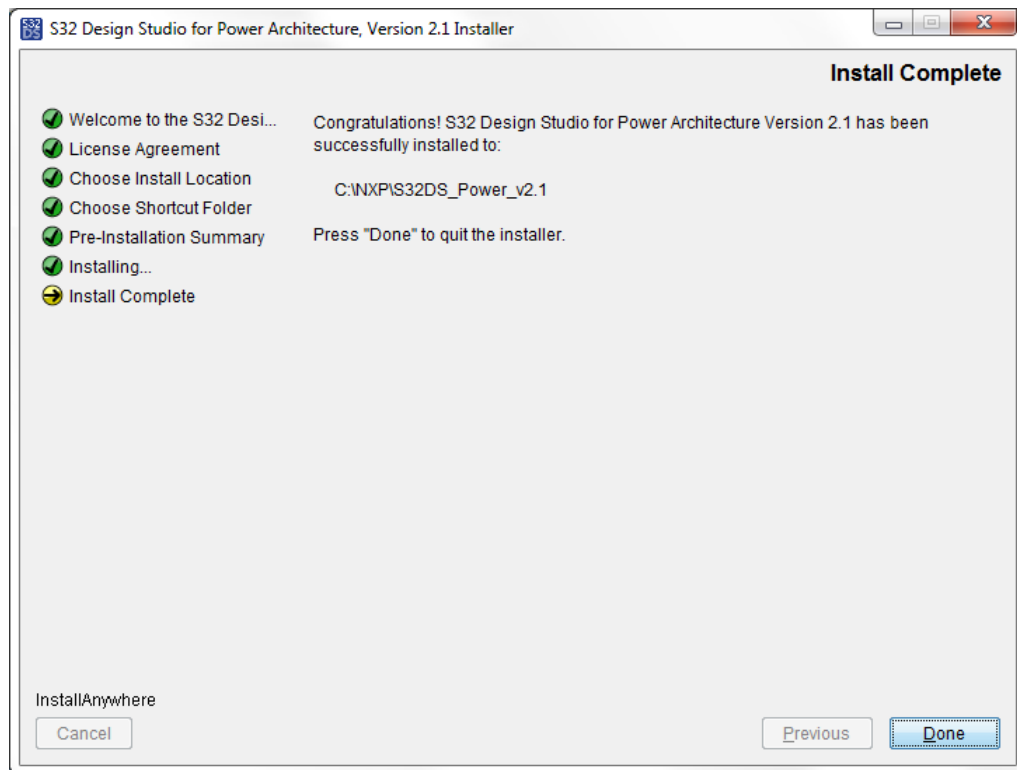

16. Do one of the following to start S32DS for Power Architecture.

- a. Locate the shortcut depending on your selection during the installation, and double-click the product icon.
- b. Specify the folder path where your workspace will be located. Click **OK**.

S32 Design Studio for Power Architecture 2.1 appears on the desktop and displays the **S32DS Extensions and Updates** window. This tool will assist you in installing additional software packages that are required for creating embedded software for the supported devices. Learn the details from the *S32 Design Studio for Power Architecture 2.1 User Guide*. To launch the tool again, click **Help > S32DS Extensions and Updates** from the menu. In addition to device support, the functionality can be extended with support for new debugging instruments such as hardware debugging interfaces and simulators. Integration of third-party products is implemented through plug-ins.

To learn how to use informational resources of S32 Design Studio for Power Architecture 2.1, watch the video on the **Getting Started** page. The page is loaded by default when you launch the product. To open this page, click **Help > Getting Started** from the menu.

Note: To play back the video in Linux for the first time, select the multimedia plug-ins required by Java and click **Install**.

How to Reach Us:

Home Page:

nxp.com

Web Support:

nxp.com/support

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

NXP reserves the right to make changes without further notice to any products herein. NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including “typicals”, must be validated for each customer application by customer's technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: nxp.com/SalesTermsandConditions.

Freescall, the Freescall logo, AltiVec, C-5, CodeTest, CodeWarrior, ColdFire, ColdFire+, C-Ware, Energy Efficient Solutions logo, Kinetis, mobileGT, PowerQUICC, Processor Expert, QorIQ, Qorivva, StarCore, Symphony, and VortiQa are trademarks of Freescall Semiconductor, Inc., Reg. U.S. Pat. and Tm. Off. Airfast, BeeKit, BeeStack, CoreNet, Flexis, Layerscape, MagniV, MXC, Platform in a Package, QorIQonverge, QUICC Engine, Ready Play, SafeAssure, SafeAssure logo, SMARTMOS, Tower, TurboLink, Vybrid, and Xtrinsic are trademarks of Freescall Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2017-2019 NXP

Revision June, 2019

