

AN13639

Calibration Structure for RW61x

Rev. 5.0 — 29 April 2025

Application note

Document information

Information	Content
Keywords	Wi-Fi sub-bands, crystal frequency, Wi-Fi transmit power, Wi-Fi front-end, Wi-Fi thermal compensation, Wi-Fi thermal crystal frequency compensation, Bluetooth transmit power, BD address, Bluetooth front-end loss, one-time programmable (OTP)
Abstract	Describes the RF calibration parameters and data structure used to store the calibration and configuration data for RW61x. The document also details the steps to generate and update the calibration data.



1 Introduction

This document describes the RF calibration parameters and data structure used to store calibration/configuration data for RW61x. The document explains how to adjust the RF calibration parameters to attain tighter tolerances. The document also details the procedure to generate and update the calibration data.

Note: *References to IEEE 802.15.4 features apply to RW612 device.*

The calibration data can be stored in the on-chip OTP memory or in an external configuration file.

2 Calibration data

Calibration data includes Wi-Fi, Bluetooth, and IEEE 802.15.4 (RW612 only) configuration and calibration parameters.

Calibration data is design specific and includes the following:

- Frequency calibration
- Wi-Fi RSSI calibration
- Wi-Fi transmit power calibration
- Thermal compensation for Wi-Fi transmit power
- Thermal compensation for crystal frequency
- Wi-Fi MAC address
- RF front-end control configuration
- Wi-Fi system configuration
- Bluetooth/Bluetooth Low Energy (LE) configuration
 - Initial Bluetooth transmit power
 - Bluetooth TX Power Class Setting
 - Bluetooth device (BD) address
 - Bluetooth RF front end (FE) Loss
 - Bluetooth frequency calibration
 - Bluetooth UART baud rate
- 802.15.4 configuration (RW612 only)
 - 802.15.4 maximum power limit
 - 802.15.4 MAC address
 - SPI clock frequency
 - 802.15.4 FE loss

3 Getting calibration files

The calibration data can be stored in one of the following locations:

- Configuration file
- On-chip OTP memory

Examples of configuration files for RW61x NXP evaluation kits (EVK) are included in the manufacturing software release package. The configuration files are detailed in [Table 1](#).

Table 1. Calibration files

File	Description
<i>WlanCalData_ext.conf</i>	Configuration file containing Wi-Fi, Bluetooth LE, and 802.15.4 calibration data. This file is used to create calibration data text files for Wi-Fi, Bluetooth LE, and 802.15.4.
<i>BtCalData_ext.conf</i>	Configuration file containing Bluetooth LE calibration data.
<i>15p4CalData_ext.conf</i> ^[1]	Configuration file containing 802.15.4 calibration data. Note: This file is reserved for future use and is not be used to load 802.15.4 calibration data.

[1] (RW612 only)

It is recommended to use NXP EVK example configuration files as a starting point to optimize the calibration data for your end-product design.

3.1 Procedure to get editable text files

To edit the calibration data, first convert the *.conf* files to *.txt* format (recommended).

Step 1 - Place the *WlanCalData_ext.conf* file in the Labtool executable directory.

Step 2 - Open the *SetUp.ini* file located in Labtool executable directory. Check for `NO_EEPROM` parameter value in *SetUp.ini* file.

`NO_EEPROM` parameter is used to select the location where the calibration data is stored. It has the following values:

- 1 = Config file (NO_EEPROM) support
- 2 = OTP memory support

Step 3 - Launch Labtool.

Step 4 - Enter the Labtool command 88 to read back the firmware version.

- Verify that the firmware version matches the software release being used.

Step 5 - Enter Labtool command 54 to get the calibration data from the storage location.

Command 54 converts the calibration data from hexadecimal into text format and stores the data in the following text files. The text files are created in the Labtool executable directory.

- *CalWlanDataFile_Upload.txt*
- *PwrTable_Otp_Path0_Upload.txt*
- *CalBtDataFile_Upload.txt*
- *Cal15_4DataFile_Upload.txt*(RW612 only)

Step 6 - Rename the text files as follows:

- *CalWlanDataFile.txt*
- *PwrTable_Path0.txt*
- *CalBtDataFile.txt*
- *Cal15_4DataFile.txt*(RW612 only)

4 Updating the calibration data

This section details how to update the calibration data for specific designs.

[Table 2](#) lists the calibration data available for RW610 and RW612 devices.

Table 2. Calibration data for RW610 and RW612 devices

Calibration item	RW610	RW612
Frequency calibration	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
RF front-end control configuration	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wi-Fi RSSI calibration	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wi-Fi transmit power calibration	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wi-Fi thermal TX power compensation	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wi-Fi thermal crystal frequency compensation	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wi-Fi MAC address	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Bluetooth Low Energy (LE) configuration	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
802.15.4 configuration	<input type="checkbox"/>	<input checked="" type="checkbox"/>

4.1 Frequency calibration

The frequency calibration is used to calibrate the frequency accuracy when an external crystal is used as reference clock source.

The frequency calibration process involves tuning the load capacitance value integrated in the wireless SoC using the crystal compensation parameter *RFXTAL*.

The procedure to obtain the *RFXTAL* value using Labtool is detailed below.

Frequency calibration procedure

- Bring up Labtool
- Enter into Wi-Fi menu and enable Wi-Fi transmit using Labtool command 35

5 GHz example:

```
22 // Load the calibration data file with thermal compensation parameters removed
6 3 // Set the band to 5GHz
112 0 0 // Set the bandwidth to 20MHz
12 0 36 // Set the channel to 36
35 0 1 22 10 // Start TX at target power set to 10dBm, MCS7 rate
< Measure the Frequency Error using a VSA>
35 0 0 // Stop TX
```

- Use Labtool command 95 to read the current *RFXTAL* value.
- Adjust the *RFXTAL* value using Labtool command 96 to fine-tune the frequency error

Example:

```
95 // Return value in hex
96 6D // Set the value in hexadecimal format; it is a 8-bit signed number
```

- Record the final optimized value for *RFXTAL*.

Note: *RFXTAL* value is common for all integrated radios of the device since there is only one external reference clock source.

Figure 1 shows an example of the `Main_Table` section with `RFX TAL` parameter value set to `0x6D`.

```
[StructureInfo]
STRUCTURE_REV=0x0F
[Main_Table]
Ref_Design_Type=0x00
Device_ID=0x00
SPI_Size=0x40
Ant_TX=0xFF
Ant_RX=0xFF
Soc_OR_Rev=0x12
TMP_At_Cal=0x0025
RFX TAL=0x6D
Region_Code=0x10
MISC_Flag=0x00
TEST_VERSION=0x43FCB
MFG_VERSION=0x200003F
DLL_VERSION=0x100000C
```

Figure 1. `Main_Table` section in `CalWlanDataFile.txt` file

4.2 Wi-Fi RSSI calibration

The Wi-Fi RSSI calibration is used to tune the reported signal strength referenced at the antenna connector. The process is as follows:

- The DUT receives a specific signal level from the tester.
- The DUT stores the RSSI offset value.

The offset value is the difference between the tester signal level and the DUT read-back value.

RSSI calibration is run with internal LNA turned on (high gain) and with internal LNA turned off (low gain). If using an external LNA, run RSSI calibration with the combination of four LNA high/low gains per sub-band. A maximum of four LNA high/low gains per sub-band is allowed.

Table 3. Recommended RSSI calibration channels

Band	Sub-band	RSSI calibration channel
2.4 GHz	0	2437 MHz
5 GHz	1	5180 MHz
	2	5600 MHz
	3	5825 MHz

Figure 2 shows the RSSI offset entries under the [RSSI_CALEX] section in *CalWlanDataFile.txt* file.

Each sub-band has four RSSI offset entries for each LNA gain state as highlighted in Figure 2. Note that RSSI is calibrated on one channel per sub-band.

- **RSSI_CAL_5G_SUBBAND1_ELNA_LO_ILNA_HI_Path0_ENTRIES1** is for 5 GHz sub-band 1 external-low and internal-high LNA gain state.
- **RSSI_CAL_5G_SUBBAND1_ELNA_HI_ILNA_HI_Path0_ENTRIES1** is for 5 GHz sub-band 1 external-high and internal-high LNA gain state.
- **RSSI_CAL_5G_SUBBAND1_ELNA_LO_ILNA_LO_Path0_ENTRIES1** is for 5 GHz sub-band 1 external-low and internal-low LNA gain state.
- **RSSI_CAL_5G_SUBBAND1_ELNA_HI_ILNA_LO_Path0_ENTRIES1** is for 5 GHz sub-band 1 external-high and internal-low LNA gain state.

RW61x reference design does not use an external LNA. The internal LNA high and low gain states are linear. As a result, one value is used for every gain state. See [Figure 2](#).

```
[RSSI_CALEX]
RSSI_CAL_Path0_Entries=5
RSSI_CAL_Path0_OFFSET_ENTRIES0=0x3F
RSSI_CAL_2G_ELNA_LO_ILNA_HI_Path0_ENTRIES0=0x00
RSSI_CAL_2G_ELNA_HI_ILNA_HI_Path0_ENTRIES0=0x00
RSSI_CAL_2G_ELNA_LO_ILNA_LO_Path0_ENTRIES0=0x00
RSSI_CAL_2G_ELNA_HI_ILNA_LO_Path0_ENTRIES0=0x00
RSSI_CAL_Path0_OFFSET_ENTRIES1=0x3F
RSSI_CAL_5G_SUBBAND0_ELNA_LO_ILNA_HI_Path0_ENTRIES1=0x00
RSSI_CAL_5G_SUBBAND0_ELNA_HI_ILNA_HI_Path0_ENTRIES1=0x00
RSSI_CAL_5G_SUBBAND0_ELNA_LO_ILNA_LO_Path0_ENTRIES1=0x00
RSSI_CAL_5G_SUBBAND0_ELNA_HI_ILNA_LO_Path0_ENTRIES1=0x00
RSSI_CAL_Path0_OFFSET_ENTRIES2=0x3F
RSSI_CAL_5G_SUBBAND1_ELNA_LO_ILNA_HI_Path0_ENTRIES2=0x00
RSSI_CAL_5G_SUBBAND1_ELNA_HI_ILNA_HI_Path0_ENTRIES2=0x00
RSSI_CAL_5G_SUBBAND1_ELNA_LO_ILNA_LO_Path0_ENTRIES2=0x00
RSSI_CAL_5G_SUBBAND1_ELNA_HI_ILNA_LO_Path0_ENTRIES2=0x00
RSSI_CAL_Path0_OFFSET_ENTRIES3=0x3F
RSSI_CAL_5G_SUBBAND2_ELNA_LO_ILNA_HI_Path0_ENTRIES3=0x00
RSSI_CAL_5G_SUBBAND2_ELNA_HI_ILNA_HI_Path0_ENTRIES3=0x00
RSSI_CAL_5G_SUBBAND2_ELNA_LO_ILNA_LO_Path0_ENTRIES3=0x00
RSSI_CAL_5G_SUBBAND2_ELNA_HI_ILNA_LO_Path0_ENTRIES3=0x00
RSSI_CAL_Path0_OFFSET_ENTRIES4=0x3F
RSSI_CAL_5G_SUBBAND3_ELNA_LO_ILNA_HI_Path0_ENTRIES4=0x00
RSSI_CAL_5G_SUBBAND3_ELNA_HI_ILNA_HI_Path0_ENTRIES4=0x00
RSSI_CAL_5G_SUBBAND3_ELNA_LO_ILNA_LO_Path0_ENTRIES4=0x00
RSSI_CAL_5G_SUBBAND3_ELNA_HI_ILNA_LO_Path0_ENTRIES4=0x00
```

Figure 2. RSSI offset entries in the calibration file

The procedure to obtain the Wi-Fi RSSI offset value using Labtool is as follows.

Wi-Fi RSSI calibration procedure

- Bring up Labtool.
- Enter Wi-Fi menu, start RSSI data collection, and report the results.

5 GHz example:

```
22 // Load the calibration data file with thermal compensation parameters removed
6 3 // Set the band to 5GHz
112 0 0 // Set the bandwidth to 20MHz
12 0 36 // Set the channel to 36
198 0 // Start RSSI data collection
< Transmit Wi-Fi packets from tester with -50dBm power level OFDM-6 signal>
199 0 // Stop RSSI data collection and report the result including the packet count
received, RSSI, and noise floor
```

- Record the RSSI offset using the formula below:
$$RSSI_offset = 2 * (CalPwrLev - Path_0_RSSI_Val)$$
Where:
CalPwrLev is the RF tester signal level.
Path_0_RSSI_Val is the RSSI readback value of the DUT using Labtool command 199.
- Update the *CalWlanDataFile.txt* file with the calculated *RSSI_offset* value for each required entry under the *[RSSI_CALEX]* section.

Note: Convert RSSI offset decimal values to hexadecimal values prior to updating *CalWlanDataFile.txt* file.

4.3 Wi-Fi transmit power calibration

The Wi-Fi transmit power calibration is used to tune the Wi-Fi transmit power for accurate output power at the antenna connector.

The transmit power calibration process involves measuring the output power at the antenna connector for eight power indexes. Each power index corresponds to a specific output power.

The measured output power (in dBm) for all the eight power indexes are recorded in the configuration file called *PwrTble_Otp_Path0.txt* along with the temperature sensor reading and power detector offset value.

The transmit power is measured for each sub-band. A maximum of two 20 MHz channels per sub-band are allowed.

The *PwrTble_Otp_Path0.txt* file has multiple entries to set the band, sub-band, channel, temperature sensor reading, measured power levels at given power indexes, and the power detector offset value.

Figure 3 shows an example of *PwrTble_Otp_Path0.txt*. Table 4 describes the *Power table* file parameters.

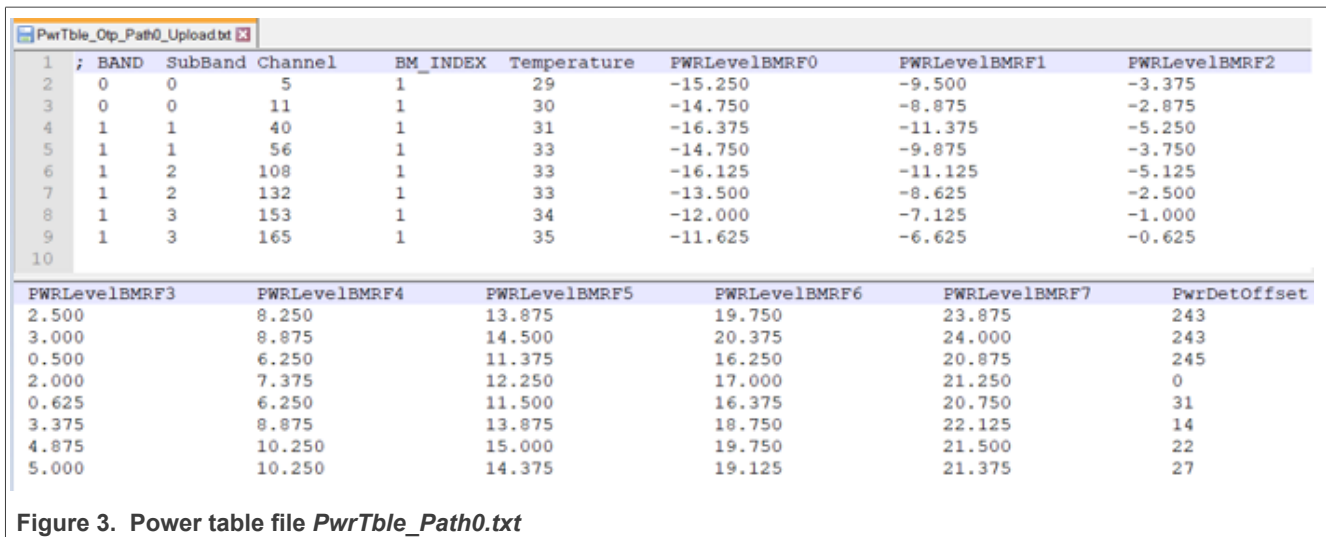


Figure 3. Power table file *PwrTble_Path0.txt*

Table 4. Power table file parameters

Parameter	Description
Band	Band of operation. 0 = 2.4 GHz band 1 = 5 GHz band
Sub-band	2.4 GHz and 5 GHz sub-bands. See Table 5.
Channel	20 MHz channel for which the power calibration is done
BM_INDEX	Reserved parameter. Set to 1
Temperature	Represents the on-chip temperature sensor reading (in degree Celsius, decimal) measured during calibration.
PWRLevelBMRf0 through PWRLevelBMRf7	Represents the power level measured at the antenna connector (in dBm) at a given power index. Eight power indexes are supported (0 to 7). The power resolution is 0.125 dB.
PwrDetOffset	Represents the measured power detector value at power index 5 during calibration. The range is 0 to 255. This parameter is a 7-bit signed number converted in decimal.

[Table 5](#) shows the sub-band information.

Table 5. Sub-band information

Band	Sub-band	Channel range
2.4 GHz	0	1 to 13 (2412 to 2472 MHz)
5 GHz	1	36 to 64 (5180 to 5320 MHz)
	2	100 to 144 (5500 to 5720 MHz)
	3	149 to 177 (5745 to 5885 MHz)

The Wi-Fi transmit power calibration procedure using Labtool is as follows:

- Bring up Labtool.
- Go to the Wi-Fi menu and set the band, bandwidth and desired channel for calibration
- Set the radio in transmit power calibration mode using Labtool command 102 10
- Enable transmit and set the power index using command 35

[Table 6](#) shows how to set the power index using command 35

Table 6. Setting the power index with Labtool command 35

Labtool command	Command output
35 0 1 22 <Index>	Sets Power <Index> value and transmits at MCS7 rate

- Measure and record the output power (in dBm) at the antenna connector for all the eight power indexes
- Record the temperature sensor reading only for power index 0 using Labtool command 120
- Record power detector offset value only for power index 5 using Labtool command 121

[Table 7](#) shows how to read the temperature sensor value using command 120 and the power detector offset value using command 121.

Table 7. Temperature sensor and power detector offset reading using commands 120 and 121

Labtool command	Command output
120 1	Reads the temperature sensor value
121 0 0	Reads the power detector offset value

Example of transmit power calibration for 2.4 GHz band and channel 6:

```
22 // Load the calibration data file with thermal compensation parameters removed
6 11 // Set the band to 2.4GHz
112 0 0 // Set the bandwidth to 20MHz
12 0 6 // Set the channel to 6
102 10 // Set the device into power calibration mode
35 0 1 22 0 // Start Tx at MCS7 rate using power index 0
120 1 // Read the temperature sensor value
<Measure the output power & temperature sensor reading. Note the values>
35 0 0 // Stop Tx
35 0 1 22 1 // Start Tx at MCS7 rate using power index 1
<Measure the output power. Note the value>
35 0 0 // Stop Tx
35 0 1 22 2 // Start Tx at MCS7 rate using power index 2
<Measure the output power. Note the value>
35 0 0 // Stop Tx
35 0 1 22 3 // Start Tx at MCS7 rate using power index 3
<Measure the output power. Note the value>
35 0 0 // Stop Tx
35 0 1 22 4 // Start Tx at MCS7 rate using power index 4
<Measure the output power. Note the value>
35 0 0 // Stop Tx
35 0 1 22 5 // Start Tx at MCS7 rate using power index 5
121 0 0 <measured power value> // Read the power detector offset value
<Measure the output power and power detector offset reading. Note the values.>
35 0 0 // Stop Tx
35 0 1 22 6 // Start Tx at MCS7 rate using power index 6
<Measure the output power. Note the value>
35 0 0 // Stop Tx
35 0 1 22 7 // Start Tx at MCS7 rate using power index 7
<Measure the output power. Note the value>
35 0 0 // Stop Tx
102 0 // Set the device to normal operation mode
```

- Repeat the above steps for the other channels
- Record the measured power values, the temperature sensor values, and power detector offset values in the power table file as shown in [Figure 3](#):
 - Capture the power values in dBm
 - Convert the temperature sensor and power detector offset readback values from hexadecimal to decimal
 - Capture the temperature sensor and power detector offset readback values in decimal format

4.4 Wi-Fi thermal TX power compensation

The Wi-Fi thermal power compensation parameter is used to maintain the transmit power accuracy across the operating temperature range.

The power compensation parameter is expressed as a slope of a linear equation for power correction. As the temperature changes, the slope compensation will be applied to maintain the transmit power accuracy.

The thermal power compensation uses two slope parameters for each sub-band and antenna path:

- Low power slope parameter (*CCK_SLOPE_XXX*) for output power ≤ 12 dBm
- High power slope parameter (*OFDM_SLOPE_XXX*) for output power >12 dBm

[Table 8](#) shows the thermal power compensation parameters.

Table 8. Thermal power compensation parameters

Thermal power compensation	Power region	Band	Sub-band
CCK_SLOPE_2G_Path0	Low power	2.4 GHz	0
OFDM_SLOPE_2G_Path0	High power	2.4 GHz	0
CCK_SLOPE_5G_SUBBAND1_Path0	Low power	5 GHz	1
OFDM_SLOPE_5G_SUBBAND1_Path0	High power	5 GHz	1
CCK_SLOPE_5G_SUBBAND2_Path0	Low power	5 GHz	2
OFDM_SLOPE_5G_SUBBAND2_Path0	High power	5 GHz	2
CCK_SLOPE_5G_SUBBAND3_Path0	Low power	5 GHz	3
OFDM_SLOPE_5G_SUBBAND3_Path0	High power	5 GHz	3

These parameters may be further fine-tuned for various system designs to optimize the transmit power accuracy.

This section details how to characterize the thermal TX power for the device. The measured power versus temperature sensor reading slope across multiple temperatures is recorded for the thermal power calibration offset.

4.4.1 Hardware test setup

To calculate TX thermal slope, set up the equipment as shown in [Figure 4](#).

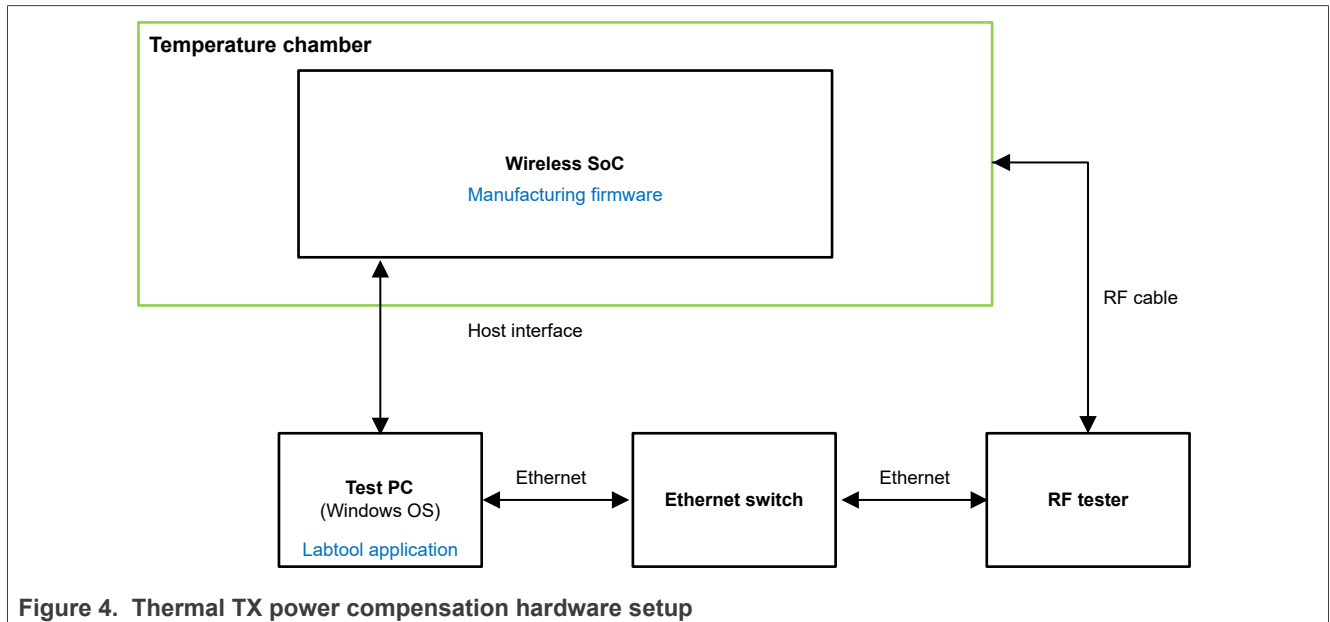


Figure 4. Thermal TX power compensation hardware setup

4.4.2 Labtool setup and command sequence

The TX output power versus temperature sensor reading needs to be measured over several temperatures, data rates, bandwidth, and sub-bands on a per path basis.

The example of Labtool procedure below measures TX output power over temperature while keeping the gain code constant (~12 dBm at the antenna connector):

Step 1 – Open *SetUp.ini* file in the Labtool directory and disable EEPROM in the `DUTInitSet` section.

```
[DutInitSet]
;0 - EEPROM support
;1 - NO EEPROM support
;2 - OTP support
NO_EEPROM = 1 // NO_EEPROM support
```

Step 2 – Turn on the DUT.

Step 3 – Open Labtool and navigate to the Wi-Fi command menu.

Step 4 - Open *WlanCalData_ext.conf* and delete `[THERMAL_POWER_RSSI_COMPENSATION]` and `[THERMAL_XTAL_V2]` parameters (see the example below). These parameters will be configured later.

```
[THERMAL_XTAL_V2]
Third_Order = 1.25482124E-04
Second_Order = -1.43699874E-02
First_Order = 5.46357137E-02
Constant_Order = 1.43561726E+01

[THERMAL_POWER_RSSI_COMPENSATION]
THERMAL_POWER_RSSI_REV=255
THERMAL_POWER_RSSI_Path0_Entries=5
CCK_SLOPE_2G_Path0=0xDA
OFDM_SLOPE_2G_Path0=0xD6
.
.
.
THERMAL_POWER_RSSI_5G_SUBBAND3_TEMPREF_SLOPE_BYPASS_Path0=0x00
```


Step 5 – Apply the following example of command sequence in Labtool to measure the TX power and thermal sensor reading.

Note: For low power slope, use power index 4. For high power slope, use power index 6.

```
22 // Load the calibration data file with all thermal compensation parameters removed
6 11 // Set the band to 2.4GHz
112 0 0 // Set the bandwidth to 20MHz
12 0 6 // Set the channel to 6
96 xx // Adjust the XTAL offset if necessary
95 // Readback XTAL offset
102 0x10 // Enable RF calibration mode
35 0 1 15 4 // Transmit with SIFS gap at power index 4 (~10dBm)
<Measure the output power using a VSA. Note the value>
120 // Get thermal sensor reading. Note the value.
35 0 // Stop the transmission
```

Step 6 – Repeat Step 5 over the operating temperature range for all paths and each sub-band of interest and record the corresponding measured TX power and temperature. It is recommended to measure in 10°C increments.

Figure 5 shows an example plot of TX output power versus the temperature sensor reading.

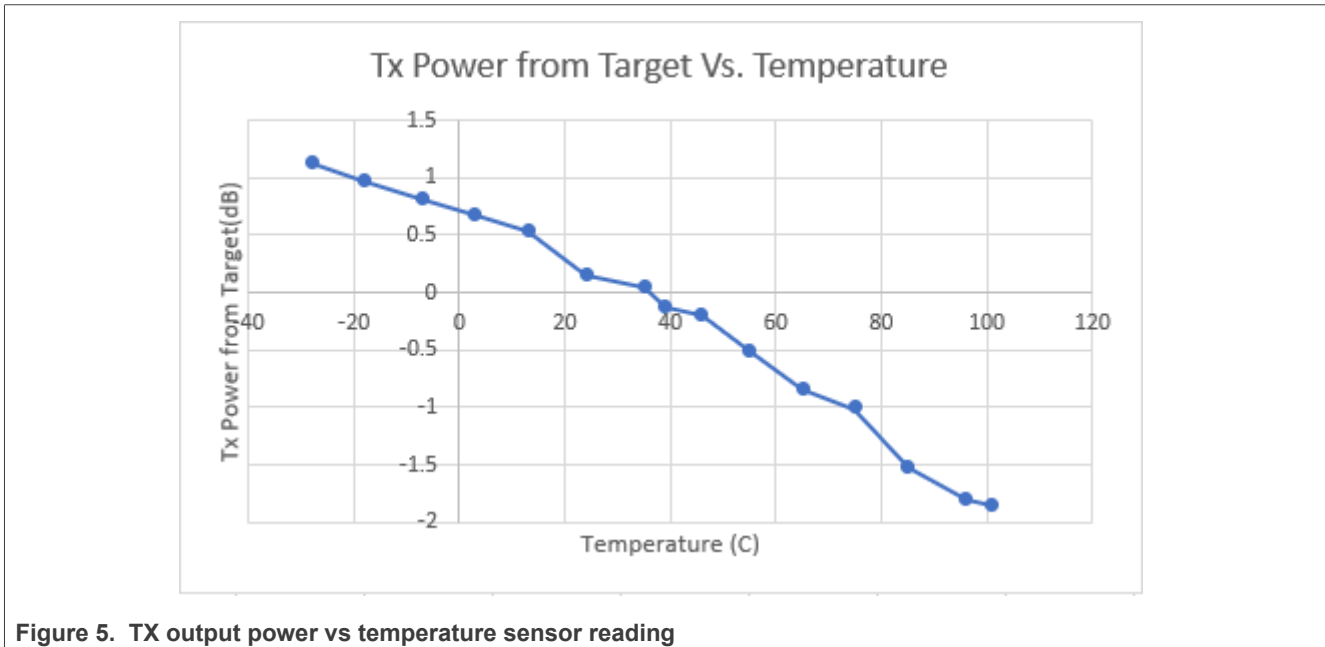

Once the data collection is complete for all points of interest (channel, bandwidth, data rates, and more), a TX thermal slope must be defined for each path and sub-band.

4.4.3 Calculating the thermal power slope

The formula for TX power thermal slope is shown below:

$$Thermal\ slope = \frac{[(Output\ Pwr\ @Hot)-(Output\ Pwr\ @Cold)] \times 1000}{[(Tsens\ @Hot)-(Tsens\ @Cold)]}$$

Where:

- *Tsen* is the temperature sensor reading.
- *Output Pwr* is the Tx power measured at the RF connector of the DUT.

Based on the example data above, the TX power thermal slope is calculated as follows:

$$\frac{(1.851-1.1198) \times 1000}{(101-28)} = -23.03$$

To get the low power and high power slope parameters for each sub-band, convert the calculated TX power thermal slope to a hex number rounded to the nearest whole number in the THERMAL_POWER_RSSI_COMPENSATION section (Figure 6).

```
[THERMAL_POWER_RSSI_COMPENSATION]
THERMAL_POWER_RSSI_REV=255
THERMAL_POWER_RSSI_Path0_Entries=5
CCK_SLOPE_2G_Path0=0xDA
OFDM_SLOPE_2G_Path0=0xD6
THERMAL_POWER_RSSI_2G_SWITCH_POINT_TEMP_Path0=0x00
THERMAL_POWER_RSSI_2G_DEMOM_Path0=0x00
THERMAL_POWER_RSSI_2G_TEMPREF_SLOPE_NORMAL_Path0=0x00
THERMAL_POWER_RSSI_2G_TEMPREF_SLOPE_BYPASS_Path0=0x00
CCK_SLOPE_5G_SUBBAND1_Path0=0xDD
OFDM_SLOPE_5G_SUBBAND1_Path0=0xDB
THERMAL_POWER_RSSI_5G_SUBBAND1_SWITCH_POINT_TEMP_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND1_DEMOM_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND1_TEMPREF_SLOPE_NORMAL_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND1_TEMPREF_SLOPE_BYPASS_Path0=0x00
CCK_SLOPE_5G_SUBBAND2_Path0=0xD9
OFDM_SLOPE_5G_SUBBAND2_Path0=0xD6
THERMAL_POWER_RSSI_5G_SUBBAND2_SWITCH_POINT_TEMP_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND2_DEMOM_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND2_TEMPREF_SLOPE_NORMAL_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND2_TEMPREF_SLOPE_BYPASS_Path0=0x00
CCK_SLOPE_5G_SUBBAND3_Path0=0xCD
OFDM_SLOPE_5G_SUBBAND3_Path0=0xCF
THERMAL_POWER_RSSI_5G_SUBBAND3_SWITCH_POINT_TEMP_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND3_DEMOM_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND3_TEMPREF_SLOPE_NORMAL_Path0=0x00
THERMAL_POWER_RSSI_5G_SUBBAND3_TEMPREF_SLOPE_BYPASS_Path0=0x00
```

Figure 6. THERMAL_POWER_RSSI_COMPENSATION parameters

4.4.4 Wi-Fi thermal crystal frequency compensation

The Wi-Fi thermal crystal frequency compensation parameter is used to maintain the crystal frequency accuracy across the operating temperature range.

The crystal frequency compensation parameter is expressed in a third order polynomial equation for crystal frequency correction (see below). As the temperature changes, the compensation is applied to maintain the crystal frequency accuracy.

Third order polynomial equation used for the crystal frequency parameter:

$$Y(t) = A \cdot X^3 + B \cdot X^2 + C \cdot X + D$$

Where:

- Y is the crystal frequency offset
- X is the thermal sensor (Tsen) reading
- A is the third order coefficient
- B is the second order coefficient
- C is the first order coefficient
- D is the constant coefficient

Example of crystal frequency thermal coefficients in *CalWlanDataFile.txt* file:

```
THERMAL_XTAL_V2]
Third_Order = 1.25482124E-04
Second_Order = -1.43699874E-02
First_Order = 5.46357137E-02
Constant_Order = 1.43561726E+01
```

These parameters may be further fine-tuned to optimize the crystal frequency variation over temperature.

This section details how to characterize the thermal behavior of XTAL to fit to the 3rd order polynomial. The frequency error versus temperature sensor reading across multiple temperatures is recorded for the XTAL calibration offset.

Before starting thermal crystal frequency compensation, ensure that XTAL calibration has been performed on the DUT. The XTAL calibration offset, RFX TAL, can be found in the [Main_Table] section in *CalWlanDataFile.txt* file, as shown in [Figure 7](#).

```
[StructureInfo]
STRUCTURE_REV=0x0F
[Main_Table]
Ref_Design_Type=0x00
Device_ID=0x00
SPI_Size=0x40
Ant_TX=0xFF
Ant_RX=0xFF
Soc_OR_Rev=0x12
TMP_At_Cal=0x0025
RFX TAL=0x6D
Region_Code=0x10
MISC_Flag=0x00
TEST_VERSION=0x43FCB
MFG_VERSION=0x200003F
DLL_VERSION=0x100000C
```

Figure 7. XTAL calibration offset parameter

4.4.4.1 Calculating the thermal crystal frequency coefficients

Step 1 – Follow the setup shown in [Section 4.4.1](#).

Step 2 - Power cycle the DUT and open Labtool.

Step 3 - Measure the frequency change with XTAL calibration offset change:

Use the following command sequence to transmit with a fixed gain code that provides ~12 dBm at the antenna connector at room temperature:

```
22          // Load the calibration data file with all thermal compensation parameters
removed
6 3        // Set the band to 5GHz
112 0 0    // Set the bandwidth to 20MHz
12 0 100   // Set the channel to 100 (5500MHz)
102 0x10   // Disable thermal compensation
96 0x6D    // Set XTAL calibration offset (0x6D is an example value)
95         // Readback XTAL offset
35 0 1 15 4 // Transmit with SIFS gap at power index 4 (~10 dBm)
<Measure the frequency using a VSA. Note the value>
96 0x6E    // Increase XTAL offset by one step
<Measure the frequency using a VSA. Note the value>
```

Step 4 - Continue to increase the XTAL offset and record the frequency until at least 10 frequency values have been recorded.

Step 5 - Stop the transmission with Labtool command 35 0.

Step 6 - Determine the frequency offset delta between each XTAL calibration offset step and convert the value to ppm.

Step 7 - Calculate the average frequency offset delta from **step 6** to obtain the average ppm/step and record the value. [Table 9](#) shows an example.

Table 9. Average XTAL frequency change per XTAL calibration code

XTAL offset (room temperature)	Frequency offset (kHz)	Frequency offset (ppm)	Delta
55	85	18.33	0.92
56	86	17.41	0.99
57	87	16.42	0.9
58	88	15.52	0.98
59	89	14.54	0.86
5a	90	13.68	0.94
5b	91	12.74	0.73
5c	92	12.01	0.93
...
7c	124	-10.76	0.66
7d	125	-11.42	0.54
7e	126	-11.96	0.62
7f	127	-12.58	0.55
80	128	-13.13	0.59
81	129	-13.72	0.57
82	130	-14.29	0.57
83	131	-14.86	0.44
84	132	-15.3	0.58
85	133	-15.88	
Average frequency offset delta ppm/code			0.71270833

Step 8 – Measure the frequency error with the change of temperature.

Use the following command sequence to transmit with a fixed gain code that provides ~12 dBm at the antenna connector.

```

22 // Load the calibration data file with all thermal compensation parameters removed
6 3 // Set the band to 5GHz
112 0 0 // Set the bandwidth to 20MHz
12 0 100 // Set the channel to 100 (5500MHz)
102 0x10 // Disable thermal compensation
96 0x6D // Set XTAL calibration offset (0x6D is an example value)
95 // Readback XTAL offset
35 0 1 15 4 // Transmit with SIFS gap at power index 4 (~10 dBm)
<Measure the frequency error using a VSA. Note the value>
120 // Get thermal sensor reading. Note the value.
35 0 // Stop transmission
    
```

Step 9 – Repeat **step 8** over the operating temperature range.

Step 10 – Convert the measured frequency error in kHz to ppm and record the value.

Step 11 – Divide the frequency error in ppm value by the average frequency offset delta from **step 7** to obtain the XTAL correction code at each temperature step. [Table 10](#) shows an example.

Table 10. XTAL correction code and temperature reading

Temperature (°C)	Temp sensor reading	Frequency error (ppm)	XTAL correction code
-40	-28	-0.76	-1.067411498
-30	-18	5.87	8.234668738
-20	-7	9.19	12.89745791
-10	3	10.02	14.05479799
0	13	9.00	12.63055985
10	24	6.49	9.107522503
20	35	3.18	4.464704683
25	39	1.48	2.081564796
30	46	-0.43	-0.609635024
40	55	-3.59	-5.042397977
50	65	-6.05	-8.486023214
60	75	-7.09	-9.950162151
70	85	-5.93	-8.31673198
80	96	-1.28	-1.794561768
85	101	2.15	3.020531285

Step 12 - Once the data collection is complete for all points of interest, plot XTAL frequency error versus temperature reading using MS Excel scatter plot. See an example in [Figure 8](#). The polynomial equation appearing on the plot should be updated with an accuracy of 8 decimal places.

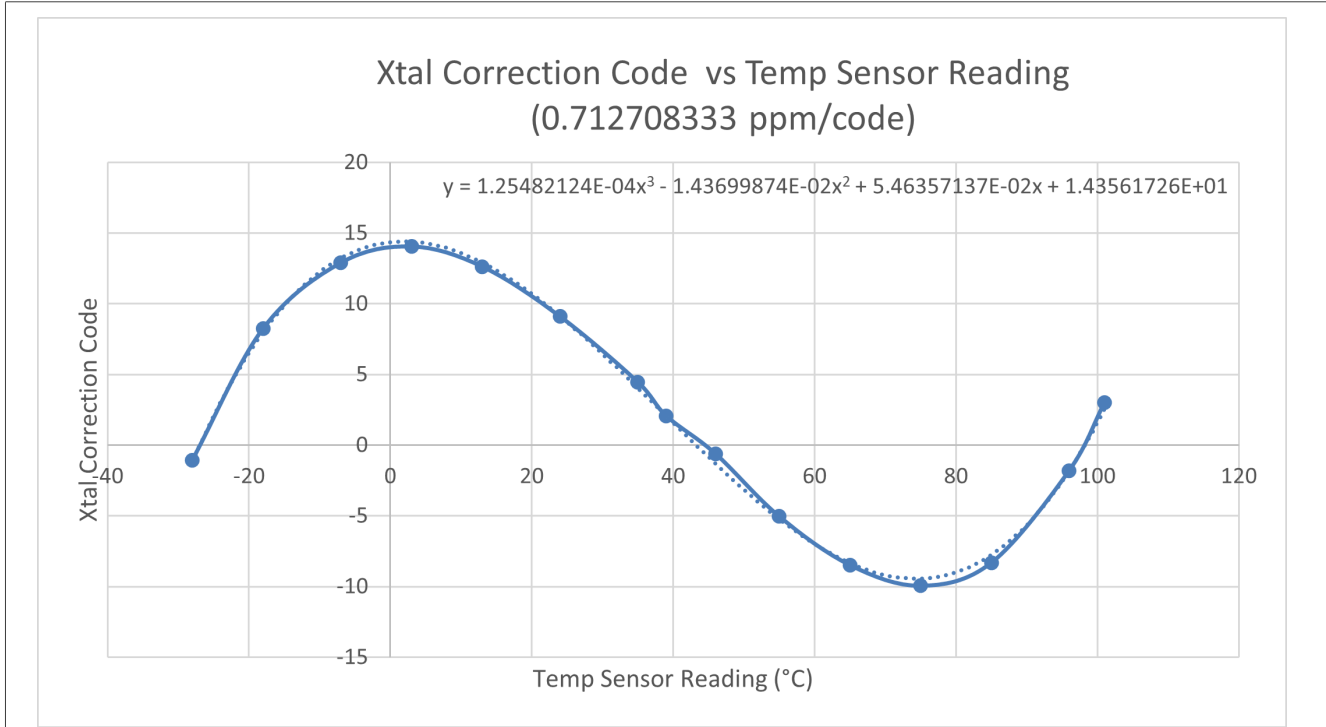


Figure 8. XTAL correction code vs temperature with 3rd order polynomial equation

4.4.4.2 Incorporating the crystal thermal coefficients into the calibration data

To ensure thermal compensation is performed, include the 3rd order polynomial coefficients determined in [Figure 8](#) in the *CalWlanDataFile.txt* file. The coefficients are expressed in scientific number format.

For example, using [Figure 8](#), enter the XTAL thermal coefficients for the radio into the *CalWlanDataFile.txt* file.

Thermal_XTAL_V2

```

>>>>>Third_Order= 1.25482124E-04
>>>>>Second_Order = -1.43699874E-02
>>>>>First_Order = 5.46357137E-02
>>>>>Constant_Order = 1.43561726E+01

```

4.5 Wi-Fi MAC address

The Wi-Fi MAC address is a unique 6-byte number. It is not included in the calibration data file and needs to be programmed separately into the on-chip OTP memory of the device using Labtool.

Enter the Labtool command 46 to write the Wi-Fi MAC address into the OTP.

Note: The MAC address cannot be written or stored in *WlanCalData_ext.conf* file.

Example:

```
46 0 00.50.43.22.33.B4
```

4.6 Wi-Fi front-end configuration

The front-end configuration parameters are under the `FEM_SETTING` section of the *CalWlanDataFile.txt* file.

If the front-end configuration of your design differs from NXP evaluation board configuration, contact your NXP representative to discuss which updates are required in your calibration data file.

4.6.1 FEM data entry

[Table 11](#) describes FEM parameters.

Update the FEM section in *CalWlanDataFile.txt* for your design using the information in [Table 11](#).

Table 11. FEM parameters

Parameter	Description
FEM_DATA_Entries	Number of FEM entries for the FEM design.
FE_VER	FEM data revision Set to 4 (default).
FEMCap2G	Set 2.4 GHz FEM capability. 0x0 = disable 0x1 = enable (default)
FEMCap5G	Set 5 GHz FEM capability. 0x0 = disable 0x1 = enable (default)
FEM_INTERNAL_BT	Set the use of internal Bluetooth. 0x0 = disable 0x1 = enable (default)
FEM_BT_LOCATION	Reserved. Set to 0x00.
FEM_EXTERNAL_2G_LNA	Set the use of 2.4 GHz external LNA. 0x0 = disable (default) 0x1 = enable
FEM_EXTERNAL_5G_LNA	Set the use of 5 GHz external LNA. 0x0 = disable (default) 0x1 = enable

Table 11. FEM parameters...continued

Parameter	Description
FEM_EXTERNAL_2G_PA	Set the use of 2.4 GHz external PA. 0x0 = disable (default) 0x1 = enable
FEM_EXTERNAL_5G_PA	Set the use of 5 GHz external PA. 0x0 = disable (default) 0x1 = enable
FEM_CONCURRENCY	Reserved. Set to 0x00.
FEM_2G_TVXR_A_BIT_MASK	Hex value of 16-bit RF control line bit mask for 2.4 GHz for Path A bit[0] = 1 //enable RF control line 0 bit[1] = 1 //enable RF control line 1 bit[2] = 1 //enable RF control line 2 bit[3] = 1 //enable RF control line 3 ... bit[15] = 1 //enable RF control line 15
FEM_2G_TVXR_B_BIT_MASK	Reserved. Set to 0x0000.
FEM_5G_TVX_A_BIT_MASK	Hex value of 16-bit RF control line bit mask for 5 GHz for Path A bit[0] = 1 //enable RF control line 0 bit[1] = 1 //enable RF control line 1 bit[2] = 1 //enable RF control line 2 bit[3] = 1 //enable RF control line 3 ... bit[15] = 1 //enable RF control line 15
FEM_5G_TVXR_B_BIT_MASK	Reserved. Set to 0x0000.
FEM_2G_ANT_DIVERSITY_MASK	Hex value of 16 bit used to set 2.4 GHz antenna diversity. bit[0] = 1 //enable RF control line 0 bit[1] = 1 //enable RF control line 1 bit[2] = 1 //enable RF control line 2 bit[3] = 1 //enable RF control line 3 ... bit[15] = 1 //enable RF control line 15 Note: Set the value to 0x0000 if your device is not configured for antenna diversity.
FEM_5G_ANT_DIVERSITY_MASK	Hex value of 16 bit used to set 5 GHz antenna diversity. bit[0] = 1 //enable RF control line 0 bit[1] = 1 //enable RF control line 1 bit[2] = 1 //enable RF control line 2 bit[3] = 1 //enable RF control line 3 ... bit[15] = 1 //enable RF control line 15 Note: Set the value to 0x0000 if your device is not configured for antenna diversity.

Table 11. FEM parameters...continued

Parameter	Description
<p>FEM_OPERATION_MODE_MASK_ENTRIES (Y)</p> <p>Note: Y is the FEM entry number starting at index 0.</p>	<p>Hex value of the 16-bit FEM entry that defines the operation mode.</p> <p>0 = enable - 1 = disable</p> <p>Bit[0]: reserved. Set to 0.</p> <p>Bit[1]: 2.4 GHz 1x1 A 802.11ax/802.11ac (default)</p> <p>Bit[2]: reserved. Set to 0.</p> <p>Bit[3]: reserved. Set to 0.</p> <p>Bit[4]: reserved. Set to 0.</p> <p>Bit[5]: 5 GHz 1x1 A 802.11ax/802.11ac (default)</p> <p>Bit[6]: reserved. Set to 0.</p> <p>Bit[7]: reserved. Set to 0.</p> <p>Bit[8]: 5 GHz 1x1A zero-wait DFS</p> <p>Bit[9]: reserved. Set to 0.</p> <p>Bit[10]: reserved. Set to 0.</p> <p>Bit[11]: reserved. Set to 0.</p> <p>Bit[12-15]: reserved. Set to 0.</p> <p>Example FEM configuration for 2.4 GHz 1x1 (Path A) 802.11ax/802.11ac device (FEM entry 0):</p> <p>FEM_OPERATION_MODE_MASK_ENTRIES0 = 0x0002</p> <p>Example FEM configuration for 5 GHz 1x1 (Path A) 802.11ax/802.11ac device (FEM entry 1):</p> <p>FEM_OPERATION_MODE_MASK_ENTRIES1 = 0x0020</p> <p>Example FEM configuration for 2.4 GHz and 5 GHz 1x1 (Path A) 802.11ax/802.11ac device (FEM entry 0):</p> <p>FEM_OPERATION_MODE_MASK_ENTRIES0 = 0x0022</p>
<p>FEM_RF_CTRL_INFO (X) _ENTRIES (Y)</p> <p>Note:</p> <ul style="list-style-type: none"> X is the state number starting at index 0. The number corresponds to the respective FEM entry defined by Y. Y is the FEM entry number starting at index 0. See Table 12. 	<p>Hex value of 16-bit RF control lines, which correspond to the respective FEM_OPERATION_MODE_MASK_ENTRIESY entry.</p> <p>A total of 20 SoC modes can be mapped. The SoC modes define how to toggle the front-end lines to switch between Wi-Fi and Bluetooth. See Table 12.</p> <p>When configuring FEM entries for Wi-Fi 5 GHz in single antenna setup, it is recommended to set the RF switch to the Bluetooth path, except when in Idle state.</p>

[Table 12](#) shows how to configure the RF control lines.

Table 12. RF control line configuration

SoC mode index	SoC mode description	Bit[16]	...	Bit[3]	Bit[2]	Bit[1]	Bit[0]
0	Idle (Wi-Fi RX)	0	0	0	0	0	1
1	Bluetooth RX	0	0	0	0	1	0
2	Wi-Fi RX	0	0	0	0	0	1
3	Wi-Fi RX + Bluetooth RX	0	0	0	0	0	1
4	Wi-Fi TX	0	0	0	0	0	1
5	Wi-Fi TX + Bluetooth RX	0	0	0	0	0	1
6	Bluetooth TX	0	0	0	0	1	0
7	Wi-Fi RX + Bluetooth TX	0	0	0	0	0	1

Table 12. RF control line configuration...continued

SoC mode index	SoC mode description	Bit[16]	...	Bit[3]	Bit[2]	Bit[1]	Bit[0]
8	Wi-Fi TX + Bluetooth TX	0	0	0	0	0	1
9	Reserved	0	0	0	0	0	1
10	Reserved	0	0	0	0	0	1
11	Reserved	0	0	0	0	0	1
12	Reserved	0	0	0	0	0	1
13	Reserved	0	0	0	0	0	1
14	Reserved	0	0	0	0	0	1
15	Reserved	0	0	0	0	0	1
16	Reserved	0	0	0	0	0	1
17	Reserved	0	0	0	0	0	1
18	Reserved	0	0	0	0	0	1
19	Reserved	0	0	0	0	0	1

Figure 9 shows an example of schematic with the RF switch. The corresponding truth table is shown in Table 13.

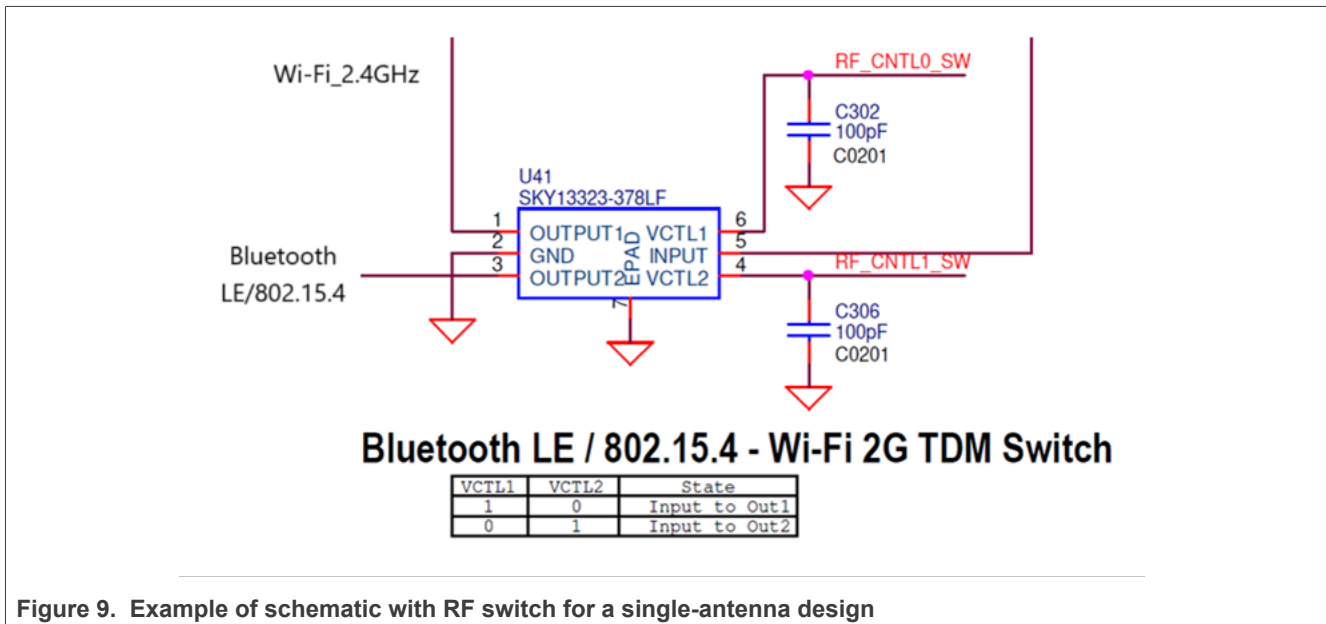


Figure 9. Example of schematic with RF switch for a single-antenna design

Table 13 shows the control line values of RW61x reference design (RD-RW61X-BGA-IPA-2A-V4) with RF switch.

Table 13. Truth table for RW61x single-antenna design with RF switch

SKY13323-378LF state	Bit[16:4]	Bit[3]	Bit[2]	Bit[1]	Bit[0]
INPUT to OUTPUT 1 (Wi-Fi 2.4 GHz)	0	0	0	0	1
INPUT to OUTPUT 2 (Bluetooth LE/802.15.4)	0	0	0	1	0

4.6.2 FEM data examples

This section includes examples of FEM configuration settings. Contact your NXP representative for more guidance on how to configure FEM settings.

4.6.2.1 Single antenna configuration without antenna diversity

```
[FEM_SETTING]
FEM_DATA_Entries=2
FE_VER=4
FEMCap2G=0x01
FEMCap5G=0x01
FEM_INTERNAL_BT=0x01
FEM_BT_LOCATION=0x00
FEM_EXTERNAL_2G_LNA=0x00
FEM_EXTERNAL_5G_LNA=0x00
FEM_EXTERNAL_2G_PA=0x00
FEM_EXTERNAL_5G_PA=0x00
FEM_CONCURRENCY=0x00
FEM_2G_TVXR_A_BIT_MASK=0x000F
FEM_2G_TVXR_B_BIT_MASK=0x0000
FEM_5G_TVXR_A_BIT_MASK=0x000F
FEM_5G_TVXR_B_BIT_MASK=0x0000
FEM_2G_ANT_DIVERSITY_MASK=0x0000
FEM_5G_ANT_DIVERSITY_MASK=0x0000
FEM_OPERATION_MODE_MASK_ENTRIES0=0x0002
FEM_RF_CTRL_INFO0_ENTRIES0=0x0001
FEM_RF_CTRL_INFO1_ENTRIES0=0x0002
FEM_RF_CTRL_INFO2_ENTRIES0=0x0001
FEM_RF_CTRL_INFO3_ENTRIES0=0x0001
FEM_RF_CTRL_INFO4_ENTRIES0=0x0001
FEM_RF_CTRL_INFO5_ENTRIES0=0x0001
FEM_RF_CTRL_INFO6_ENTRIES0=0x0002
FEM_RF_CTRL_INFO7_ENTRIES0=0x0001
FEM_RF_CTRL_INFO8_ENTRIES0=0x0001
FEM_RF_CTRL_INFO9_ENTRIES0=0x0001
FEM_RF_CTRL_INFO10_ENTRIES0=0x0001
FEM_RF_CTRL_INFO11_ENTRIES0=0x0001
FEM_RF_CTRL_INFO12_ENTRIES0=0x0001
FEM_RF_CTRL_INFO13_ENTRIES0=0x0001
FEM_RF_CTRL_INFO14_ENTRIES0=0x0001
FEM_RF_CTRL_INFO15_ENTRIES0=0x0001
FEM_RF_CTRL_INFO16_ENTRIES0=0x0001
FEM_RF_CTRL_INFO17_ENTRIES0=0x0001
FEM_RF_CTRL_INFO18_ENTRIES0=0x0001
FEM_RF_CTRL_INFO19_ENTRIES0=0x0001
FEM_OPERATION_MODE_MASK_ENTRIES1=0x0020
FEM_RF_CTRL_INFO0_ENTRIES1=0x0002
FEM_RF_CTRL_INFO1_ENTRIES1=0x0002
FEM_RF_CTRL_INFO2_ENTRIES1=0x0002
FEM_RF_CTRL_INFO3_ENTRIES1=0x0002
FEM_RF_CTRL_INFO4_ENTRIES1=0x0002
FEM_RF_CTRL_INFO5_ENTRIES1=0x0002
FEM_RF_CTRL_INFO6_ENTRIES1=0x0002
FEM_RF_CTRL_INFO7_ENTRIES1=0x0002
FEM_RF_CTRL_INFO8_ENTRIES1=0x0002
FEM_RF_CTRL_INFO9_ENTRIES1=0x0002
FEM_RF_CTRL_INFO10_ENTRIES1=0x0002
FEM_RF_CTRL_INFO11_ENTRIES1=0x0002
FEM_RF_CTRL_INFO12_ENTRIES1=0x0002
FEM_RF_CTRL_INFO13_ENTRIES1=0x0002
FEM_RF_CTRL_INFO14_ENTRIES1=0x0002
FEM_RF_CTRL_INFO15_ENTRIES1=0x0002
FEM_RF_CTRL_INFO16_ENTRIES1=0x0002
FEM_RF_CTRL_INFO17_ENTRIES1=0x0002
FEM_RF_CTRL_INFO18_ENTRIES1=0x0002
FEM_RF_CTRL_INFO19_ENTRIES1=0x0002
```

4.6.2.2 Single antenna configuration with antenna diversity

```
[FEM_SETTING]
FEM_DATA_Entries=2
FE_VER=4
FEMCap2G=0x01
FEMCap5G=0x01
FEM_INTERNAL_BT=0x01
FEM_BT_LOCATION=0x00
FEM_EXTERNAL_2G_LNA=0x00
FEM_EXTERNAL_5G_LNA=0x00
FEM_EXTERNAL_2G_PA=0x00
FEM_EXTERNAL_5G_PA=0x00
FEM_CONCURRENCY=0x00
FEM_2G_TVXR_A_BIT_MASK=0x000F
FEM_2G_TVXR_B_BIT_MASK=0x0000
FEM_5G_TVXR_A_BIT_MASK=0x000F
FEM_5G_TVXR_B_BIT_MASK=0x0000
FEM_2G_ANT_DIVERSITY_MASK=0x000C
FEM_5G_ANT_DIVERSITY_MASK=0x000C
FEM_OPERATION_MODE_MASK_ENTRIES0=0x0002
FEM_RF_CTRL_INFO0_ENTRIES0=0x0005
FEM_RF_CTRL_INFO1_ENTRIES0=0x0006
FEM_RF_CTRL_INFO2_ENTRIES0=0x0005
FEM_RF_CTRL_INFO3_ENTRIES0=0x0005
FEM_RF_CTRL_INFO4_ENTRIES0=0x0005
FEM_RF_CTRL_INFO5_ENTRIES0=0x0005
FEM_RF_CTRL_INFO6_ENTRIES0=0x0006
FEM_RF_CTRL_INFO7_ENTRIES0=0x0005
FEM_RF_CTRL_INFO8_ENTRIES0=0x0005
FEM_RF_CTRL_INFO9_ENTRIES0=0x0005
FEM_RF_CTRL_INFO10_ENTRIES0=0x0005
FEM_RF_CTRL_INFO11_ENTRIES0=0x0005
FEM_RF_CTRL_INFO12_ENTRIES0=0x0005
FEM_RF_CTRL_INFO13_ENTRIES0=0x0005
FEM_RF_CTRL_INFO14_ENTRIES0=0x0005
FEM_RF_CTRL_INFO15_ENTRIES0=0x0005
FEM_RF_CTRL_INFO16_ENTRIES0=0x0005
FEM_RF_CTRL_INFO17_ENTRIES0=0x0005
FEM_RF_CTRL_INFO18_ENTRIES0=0x0005
FEM_RF_CTRL_INFO19_ENTRIES0=0x0005
FEM_OPERATION_MODE_MASK_ENTRIES1=0x0020
FEM_RF_CTRL_INFO0_ENTRIES1=0x0006
FEM_RF_CTRL_INFO1_ENTRIES1=0x0006
FEM_RF_CTRL_INFO2_ENTRIES1=0x0006
FEM_RF_CTRL_INFO3_ENTRIES1=0x0006
FEM_RF_CTRL_INFO4_ENTRIES1=0x0006
FEM_RF_CTRL_INFO5_ENTRIES1=0x0006
FEM_RF_CTRL_INFO6_ENTRIES1=0x0006
FEM_RF_CTRL_INFO7_ENTRIES1=0x0006
FEM_RF_CTRL_INFO8_ENTRIES1=0x0006
FEM_RF_CTRL_INFO9_ENTRIES1=0x0006
FEM_RF_CTRL_INFO10_ENTRIES1=0x0006
FEM_RF_CTRL_INFO11_ENTRIES1=0x0006
FEM_RF_CTRL_INFO12_ENTRIES1=0x0006
FEM_RF_CTRL_INFO13_ENTRIES1=0x0006
FEM_RF_CTRL_INFO14_ENTRIES1=0x0006
FEM_RF_CTRL_INFO15_ENTRIES1=0x0006
FEM_RF_CTRL_INFO16_ENTRIES1=0x0006
FEM_RF_CTRL_INFO17_ENTRIES1=0x0006
FEM_RF_CTRL_INFO18_ENTRIES1=0x0006
FEM_RF_CTRL_INFO19_ENTRIES1=0x0006
```


4.6.3 Antenna isolation configuration

The antenna isolation configuration parameters are in the ANT_ISO_INFO section of the CalWlanDataFile.txt file. The parameters are used to define the antenna setup and the isolation between antennas.

4.6.3.1 Antenna isolation parameters

Table 14 describes the parameters for antenna isolation. Set the parameter values for your design in the ANT_ISO_INFO section of CalWlanDataFile.txt file.

Table 14. Antenna isolation parameters

Parameter	Description
ANT_ISO_INFO_Entries	Antenna configuration. <ul style="list-style-type: none"> 0 = single-antenna configuration 1 = dual-antenna configuration
ANT_ISO_INFO_Revision	Annex version for antenna isolation Set to 0x01.
ANT_ISO_INFO_NUM_WLAN_ANT	Number of Wi-Fi antennas. Set to 1
ANT_ISO_INFO_NUM_BT_ANT	Number of Bluetooth antennas. Set to 1
ANT_ISO_INFO_NUM_ZB_ANT	Number of 802.15.4 antennas. Set to 1
ANT_ISO_INFO_ANT_SHARING_INFO ^[1]	Antenna sharing information for 2.4 GHz Wi-Fi, Bluetooth, and 802.15.4. For the bitmask information, see Table 15.
ANT_ISO_INFO_TECH_A_FORMAT_ENTRIES0 ^[1]	Configure RF signal A: <ul style="list-style-type: none"> Set to 0 for Wi-Fi Set to 1 for Bluetooth Note: <ul style="list-style-type: none"> If ANT_ISO_INFO_TECH_B_FORMAT_ENTRIES0 = 0, set this entry to "1". If ANT_ISO_INFO_TECH_B_FORMAT_ENTRIES0 = 1, set this entry to "0".
ANT_ISO_INFO_ANT_A_FORMAT_ENTRIES0 ^[1]	Antenna ID for RF signal A. Set to 0.
ANT_ISO_INFO_TECH_B_FORMAT_ENTRIES0 ^[1]	Configure RF signal B: <ul style="list-style-type: none"> Set to 0 for Wi-Fi. Set to 1 for Bluetooth. Note: <ul style="list-style-type: none"> If ANT_ISO_INFO_TECH_A_FORMAT_ENTRIES0 = 0, set this entry to "1". If ANT_ISO_INFO_TECH_A_FORMAT_ENTRIES0 = 1, set this entry to "0".

Table 14. Antenna isolation parameters...continued

Parameter	Description
ANT_ISO_INFO_ANT_B_FORMAT_ENTRIES0 ^[1]	Antenna ID for RF signal B. Set to 0
ANT_ISO_INFO_ISOLATION_FORMAT_ENTRIES0 ^[1]	Antenna isolation value in dB between RF signals A and B. Range: [0 - 255] dB (1dB resolution unsigned integer) Note: The firmware automatically applies the Wi-Fi and Bluetooth antenna isolation value to Wi-Fi and 802.15.4

[1] The parameter is for dual-antenna designs only.

Note: The bitmask must be entered as an hexadecimal value for ANT_ISO_INFO_ANT_SHARING_INFO parameter.

Table 15 shows the settings for antenna sharing.

Table 15. Antenna sharing information

Byte	Configuration	Bit	Description
0	LNA	0	Wi-Fi and Bluetooth share the LNA
		1	Reserved. Set to 0.
		2	Wi-Fi and 802.15.4 share the LNA
		3	Bluetooth and 802.15.4 share LNA
		4	Reserved. Set to 0.
		5	Reserved. Set to 0.
		6	Reserved. Set to 0.
		7	
1	Antenna	8	Wi-Fi and Bluetooth share antenna
		9	Reserved. Set to 0.
		10	Wi-Fi and 802.15.4 share antenna
		11	Bluetooth and 802.15.4 share antenna
		12	Reserved. Set to 0.
		13	Reserved. Set to 0.
		14:15	Reserved. Set to 0.
		2	Shared path ^[1]
3	—	24:31	Reserved. Set to 0.

[1] See [ref.\[2\]](#)

4.6.3.2 Examples of antenna isolation configurations

Single antenna configuration with Wi-Fi, Bluetooth LE, and 802.15.4 sharing the same antenna:

```
[ANT_ISO_INFO]
ANT_ISO_INFO_Entries=0
ANT_ISO_INFO_Revision=0x01
ANT_ISO_INFO_NUM_WLAN_ANT=1
ANT_ISO_INFO_NUM_BT_ANT=1
ANT_ISO_INFO_NUM_ZB_ANT=1
ANT_ISO_INFO_ANT_SHARING_INFO=0x00000D08
```

Dual-antenna configuration with 20 dB isolation between the Wi-Fi and Bluetooth LE/802.15.4 antennas:

```
[ANT_ISO_INFO]
ANT_ISO_INFO_Entries=1
ANT_ISO_INFO_Revision=0x01
ANT_ISO_INFO_NUM_WLAN_ANT=1
ANT_ISO_INFO_NUM_BT_ANT=1
ANT_ISO_INFO_NUM_ZB_ANT=1
ANT_ISO_INFO_ANT_SHARING_INFO=0x00000808
ANT_ISO_INFO_TECH_A_FORMAT_ENTRIES0=0
ANT_ISO_INFO_ANT_A_FORMAT_ENTRIES0=0
ANT_ISO_INFO_TECH_B_FORMAT_ENTRIES0=1
ANT_ISO_INFO_ANT_B_FORMAT_ENTRIES0=0
ANT_ISO_INFO_ISOLATION_FORMAT_ENTRIES0=0x14
```

Note: If the front-end configuration of your design differs from NXP evaluation board configuration, contact your NXP representative about how to update your calibration data file.

4.7 Bluetooth LE configuration

The *CalBtDataFile.txt* file includes sections with the parameters to configure Bluetooth LE calibration settings.

Example of configuration parameters for Bluetooth LE:

```
[BT_Config]
ANNEX56_EXIST=0
Version=0x1
Xtal=0x79
InitPwrIndBm_Pwr=4
FELoss=0x4
ForceClass2Op=0
Class1OpSupport=1
DisablePwrControl=0
MiscFlag=0
UsedInternalSleepClock=1
AOALocaltionSupport=0
AOANumberOfAntennas=0x0
RssiGoldenRangeLow=0x0
RssiGoldenRangeHigh=0x0
UartBaudRate=3000000
BdAddress=C0.95.DA.21.12.14
MinEncrKeyLen=0x0
MaxEncrKeyLen=0x0
RegionCode=0x10
[BT_HW_INFO]
BT_HW_INFO_EPA_Present=1
BT_HW_INFO_EPA_Gain=0x00
BT_HW_INFO_EPA_FEM_Mask=0x0004
BT_HW_INFO_ELNA_Present=1
BT_HW_INFO_ELNA_Gain=0x00
BT_HW_INFO_ELNA_FEM_Mask=0x0004
```

4.7.1 Initial Bluetooth transmit power

The parameter `InitPwrIndBm_Pwr` is used to set the initial operating power (in dBm with step size of 1 dB) for Bluetooth/Bluetooth LE.

Example:

```
InitPwrIndBm_Pwr = 4 // Bluetooth initial operating power is 4 dBm.
```

4.7.2 Bluetooth TX power class setting

The parameters `ForceClass2Op` and `Class1OpSupport` are used to configure Bluetooth TX power class operation.

[Table 16](#) shows the power class configurations.

Table 16. Bluetooth TX power class parameters

Bluetooth TX power class	Configuration parameter
Class 1 (up to 15 dBm)	<code>ForceClass2Op=0</code> <code>Class1OpSupport=1</code>
Class 1.5 (up to 10 dBm)	<code>ForceClass2Op=0</code> <code>Class1OpSupport=0</code>
Class 2 (up to 4 dBm)	<code>ForceClass2Op=1</code> <code>Class1OpSupport=0</code>

4.7.3 Bluetooth device (BD) address

The `BdAddress` parameter is a unique 6-byte number.

For Wi-Fi and Bluetooth combo radio design, the `BdAddress` is the Wi-Fi MAC address plus 1 bit.

`BdAddress` = Wi-Fi MAC address + 1

For example, if Wi-Fi MAC address is C0.95.DA.21.12.13, `BdAddress` = C0.95.DA.21.12.14.

4.7.4 Bluetooth front-end loss

The Bluetooth FE loss (`FELoss`) parameter is used to tune the Bluetooth/Bluetooth LE transmit power (with step size of 0.5 dB) at the antenna connector.

Increasing `FELoss` results in increasing the output power from the radio. Similarly, decreasing `FELoss` decreases the output power from the radio.

For example, Bluetooth `FELoss` = 0x5 // Bluetooth `FELoss` is 2.5 dB.

4.7.5 Bluetooth frequency calibration

The Bluetooth frequency (`RFXTAL`) parameter is used to tune the frequency accuracy. Set the Bluetooth `RFXTAL` value to the same value as the `RFXTAL` value in Wi-Fi calibration data file ([Section 4.1](#)).

Note: Bluetooth `RFXTAL` parameter is used for applications that do not use Wi-Fi.

4.7.6 Bluetooth host interface Baud rate

The `UartBaudRate` parameter is used to set the baud rate of the Bluetooth host interface. This parameter is defined in bits per second. The Bluetooth host interface will use this baud rate after the firmware download is completed.

For an example, `UartBaudRate=3000000` will set the UART baud rate to 3 Mbps.

Note: If the host supports a baud rate of 3 Mbps, it is recommended to set the baud rate to 3000000.

4.7.7 Bluetooth hardware info

The `BT_HW_INFO` section is used to configure the front-end configuration for Bluetooth-only designs.

[Table 17](#) lists the parameters in the `BT_HW_INFO` section.

Table 17. Parameters in `BT_HW_INFO` section

Parameter	Description
<code>BT_HW_INFO_EPA_Present</code>	Enable external TX control 0x0 = not present 0x1 = present
<code>BT_HW_INFO_EPA_Gain</code>	Gain of the external power amplifier (EPA) in dB
<code>BT_HW_INFO_EPA_FEM_Mask</code>	Bit mask used to define the state of the RF control line for TX. For example, the bit mask of <code>RF_CNTL2_N</code> is 0x0000_0000_0000_0100.
<code>BT_HW_INFO_ELNA_Present</code>	Enable external RX control 0x0 = not present 0x1 = present
<code>BT_HW_INFO_ELNA_Gain</code>	External LNA gain in dB

Table 17. Parameters in BT_HW_INFO section...continued

Parameter	Description
BT_HW_INFO_ELNA_FEM_Mask	Bit [4:0]: the bit mask used to define the state of RF control line for RX For example, the bit mask of RF_CNTL2_N is 0x0000_0000_0000_0100.
BT_HW_INFO_EANT_Present	External antenna (eANT) presence. Set to 0
BT_HW_INFO_EANT_Gain	Gain of the external antenna. Set to 0
BT_HW_INFO_MULTIPURPOSE_MASK	The bit mask that identifies the multi-purpose control lines for special control. Set to 0

Example of Bluetooth hardware info configuration for an NXP reference design with single antenna and narrowband only radio.

```
[BT_HW_INFO]
BT_HW_INFO_EPA_Present=1
BT_HW_INFO_EPA_Gain=0x00
BT_HW_INFO_EPA_FEM_Mask=0x000A
BT_HW_INFO_ELNA_Present=1
BT_HW_INFO_ELNA_Gain=0x00
BT_HW_INFO_ELNA_FEM_Mask=0x000A
BT_HW_INFO_EANT_Present=0
BT_HW_INFO_EANT_Gain=0x00
BT_HW_INFO_MULTIPURPOSE_MASK=0x00
```

Example of Bluetooth hardware info configuration for an NXP reference design with external FEM on narrowband only radio.

```
[BT_HW_INFO]
BT_HW_INFO_EPA_Present=1
BT_HW_INFO_EPA_Gain=0x16
BT_HW_INFO_EPA_FEM_Mask=0x0089
BT_HW_INFO_ELNA_Present=1
BT_HW_INFO_ELNA_Gain=0x0B
BT_HW_INFO_ELNA_FEM_Mask=0x0005
BT_HW_INFO_EANT_Present=0
BT_HW_INFO_EANT_Gain=0x00
BT_HW_INFO_MULTIPURPOSE_MASK=0x00
```

Note: If the front-end configuration of your design differs from NXP evaluation board configuration, contact your NXP representative about how to update your calibration data file.

4.8 802.15.4 configuration (RW612 only)

The section `15_4_Config` in `Cal15_4DataFile.txt` includes the parameters used to configure 802.15.4 settings.

4.8.1 802.15.4 TX power limit

The `_15_4_TxPowerLimit` parameter is used to set the max operating TX power for 802.15.4 in steps of 0.5 dB. The valid parameter value range is 1 to 44 (0.5 dBm to 22 dBm). If TX power limit parameter is set to 0, there will be no limit on TX power.

For example, `_15_4_TxPowerLimit = 20` sets the max 802.15.4 TX power to 10 dBm.

4.8.2 802.15.4 MAC address

The `_15_4_Address` parameter is used to set the 64-bit MAC address of the 802.15.4 radio.

For example, `_15_4_Address = 88.77.66.55.44.33.22.11` sets the MAC address to `11.22.33.44.55.66.77.88`.

Note: Once the extended unique identifier (EUI) MAC address is programmed into the OTP, Labtool command 46 can NOT update the MAC address at runtime.

4.8.3 SPI clock frequency

The `_15_4_SPIClk` parameter is used to set the range of the SPI clock frequency.

The default range is up to 4 MHz (`_15_4_SPIClk=0`). To enable support for a higher SPI clock frequency up to 10 MHz, set `_15_4_SPIClk=1`.

4.8.4 802.15.4 front-end loss

The (`FELoss`) parameter in `CalBtDataFile.txt` file is used to compensate the 802.15.4 radio front-end loss.

4.9 Miscellaneous calibration data

If other calibration data of your design differs from NXP sample calibration data, contact your NXP representative to discuss further updates.

5 Golden calibration data

If per-board calibration is not needed, use one set of calibration data as representative of all of your boards. This calibration data is commonly referred to as golden calibration data.

To create golden calibration data:

Step 1 - Collect the calibration data for your device. See [Section 4](#).

Step 2 - Repeat step 1 for X number of boards.

You should have a unique text file for each of your boards.

Step 3 - Average the calibration results of your samples into a single text file for each radio.

Step 4 - Follow [Section 7](#) and [Section 8](#) to convert these text files to a configuration file and use the files.

6 Converting the calibration data

Before using the calibration data, store the data as configuration files. Follow the steps below to save the calibration data as a configuration file:

Step 1 – Save the updated calibration data text files listed below in the Labtool executable directory.

- *CalWlanDataFile.txt*
- *PwrTable_Path0.txt*
- *CalBtDataFile.txt*
- *Cal15_4DataFile.txt*(RW612 only)

Step 2 – Set `NO_EEPROM` parameter (`NO_EEPROM =1`) in the *SetUp.ini* file to configuration file as calibration data storage type.

Step 3 – Enter command 53 in the Labtool Wi-Fi menu.

Command 53 creates new configuration files:

- *WlanCalData_ext.conf*
- *BtCalData_ext.conf*
- *15p4CalData_ext.conf*(RW612 only)

The created files are located in the same directory as Labtool executable.

7 Using the calibration data

The use of the calibration data will vary based on which firmware will be loaded: production or manufacturing.

7.1 Production firmware

Wi-Fi

Refer to [ref.\[3\]](#).

Bluetooth

See [ref.\[3\]](#).

802.15.4 (RW612 only)

See [ref.\[1\]](#).

7.2 Manufacturing firmware

Wi-Fi

Place the converted WlanCalData_ext.conf file in the same directory as the Labtool executable and load the file using Labtool command 22. See [ref.\[2\]](#) .

Bluetooth

Place the converted BtCalData_ext.conf file in the same directory as the Labtool executable and load the file using Labtool command 232. See [ref.\[2\]](#).

802.15.4 (RW612 only)

See [Section 8](#).

8 Programming the calibration data into the OTP

As an alternative to a calibration file, calibration data can be stored into the on-chip OTP memory. Follow the procedure below to program the calibration data into the OTP memory:

Step 1 – Save the calibration data text files listed below in the Labtool executable directory.

- *CalWlanDataFile.txt*
- *PwrTable_Path0.txt*
- *CalBtDataFile.txt*
- *Cal15_4DataFile.txt*(RW612 only)

Step 2 – Set NO_EEPROM parameter (NO_EEPROM =2) in the *SetUp.ini* file to select OTP as calibration data storage type.


Step 3 – Enter command 53 in the Labtool Wi-Fi menu to program the calibration data text files into the OTP.

8.1 Partial calibration data

To update only a subset of the calibration data stored in the OTP of your device, use an external configuration file to pass the partial calibration data to the Wi-Fi firmware. The Wi-Fi firmware uses the updated calibration data first and next the unchanged calibration data available in the OTP.

In the **[Main_Table]** section of *CalWlanDataFile.txt* file, set MISC_Flag to 0x20. The flag indicates which calibration data structures to update in RW61x Wi-Fi firmware memory.

[Figure 10](#) shows part of the **[Main_Table]** section of *CalWlanDataFile.txt* file with MISC_Flag to 0x20 and updated FEM settings.

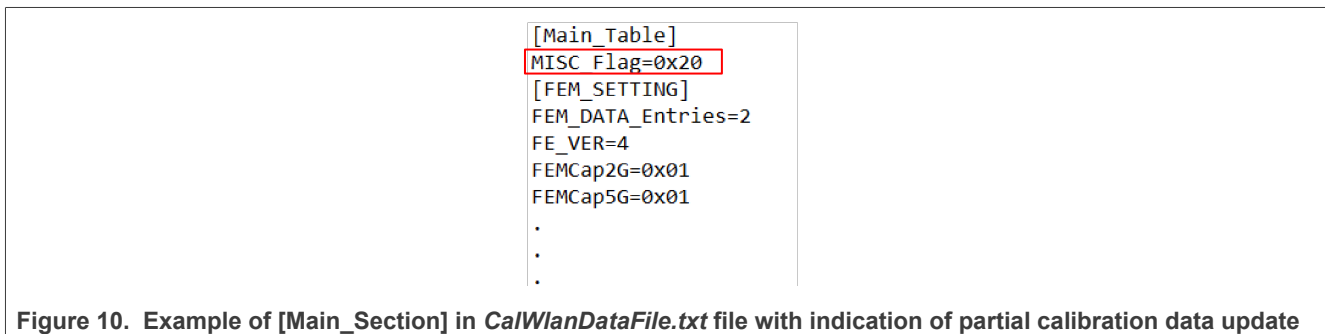

In the example of [Figure 10](#), when the partial calibration data is loaded, the firmware uses the updated FEM settings and the rest of the calibration data already programmed in the OTP. The other calibration data already programmed in the OTP remains untouched.

9 Abbreviations

Table 18. Abbreviations

Abbreviations	Description
BT	Bluetooth
EEPROM	Electrically erasable programmable read only memory
EUI	Extended unique identifier
LNA	Low noise amplifier
OTP	One-time-programmable
VSA	Vector signal analysis
XTAL	Crystal

10 References

- [1] User manual – UM11861: NXP 802.15.4 Demo Applications for RW612 ([link](#))
- [2] User manual – UM11801: Manufacturing Software User Manual for RW61x ([link](#))
- [3] User manual – UM11799: NXP Wi-Fi and Bluetooth Demo Applications for RW61x ([link](#))

11 Note about the source code in the document

The example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2022-2025 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials must be provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

12 Revision history

Table 19. Revision history

Document ID	Release date	Description
AN13639 v.5.0	29 April 2025	<ul style="list-style-type: none"> • Section 8.1 "Partial calibration data": added.
AN13639 v.4.0	10 February 2025	<ul style="list-style-type: none"> • Changed the access to the document to public. • Section 4.4 "Wi-Fi thermal TX power compensation": updated the value of the low power slop parameter to ≤ 12 dBm. • Section 4.4.2 "Labtool setup and command sequence": updated the code sample in step 5. • Section 4.6 "Wi-Fi front-end configuration": <ul style="list-style-type: none"> – Section 4.6.1 "FEM data entry": added. – Section 4.6.2 "FEM data examples": added. – Section 4.6.3 "Antenna isolation configuration": added. – Section 4.6.3.2 "Examples of antenna isolation configurations": added. • Section 4.7.1 "Initial Bluetooth transmit power": updated. • Section 4.7.2 "Bluetooth TX power class setting": updated the definitions of class 1 and calss 1.5. • Section 4.7.7 "Bluetooth hardware info": updated. • Section 4.8.2 "802.15.4 MAC address": updated. • Section 7.1 "Production firmware": updated the references to other documents. • Section 10 "References": updated.
AN13639 v.3.0	27 August 2024	<ul style="list-style-type: none"> • Section 4.4.4.1 "Calculating the thermal crystal frequency coefficients": corrected the unit of the frequency error in Table 10. • Section 10 "References": moved the section.
AN13639 v.2.0	4 December 2023	<ul style="list-style-type: none"> • Reorganized the content • Section 10 "References": updated • Section 4.1 "Frequency calibration": added. • Section 4.2 "Wi-Fi RSSI calibration": updated. • Section 4.3 "Wi-Fi transmit power calibration": <ul style="list-style-type: none"> – Updated the description of <i>Temperature</i> and <i>PWRLevelBMRFO through PWRLevelBMRF7</i>. – Updated Table 5 "Sub-band information" • Section 4.4 "Wi-Fi thermal TX power compensation": added. • Section 4.8 "802.15.4 configuration (RW612 only)": added. • Section 4.9 "Miscellaneous calibration data": added. • Section 5 "Golden calibration data": added. • Section 6 "Converting the calibration data": added. • Section 7 "Using the calibration data": added. • Section 8 "Programming the calibration data into the OTP": added. • Section 9 "Abbreviations": added. • Section 11 "Note about the source code in the document": added.
AN13639 v.1.0	13 May 2022	<ul style="list-style-type: none"> • Initial version

Legal information

Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <https://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

HTML publications — An HTML version, if available, of this document is provided as a courtesy. Definitive information is contained in the applicable document in PDF format. If there is a discrepancy between the HTML document and the PDF document, the PDF document has priority.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP B.V. — NXP B.V. is not an operating company and it does not distribute or sell products.

Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

Amazon Web Services, AWS, the Powered by AWS logo, and FreeRTOS
— are trademarks of Amazon.com, Inc. or its affiliates.

Bluetooth — the Bluetooth wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by NXP Semiconductors is under license.

Tables

Tab. 1.	Calibration files	4	Tab. 10.	XTAL correction code and temperature reading	25
Tab. 2.	Calibration data for RW610 and RW612 devices	7	Tab. 11.	FEM parameters	27
Tab. 3.	Recommended RSSI calibration channels	10	Tab. 12.	RF control line configuration	29
Tab. 4.	Power table file parameters	13	Tab. 13.	Truth table for RW61x single-antenna design with RF switch	30
Tab. 5.	Sub-band information	14	Tab. 14.	Antenna isolation parameters	33
Tab. 6.	Setting the power index with Labtool command 35	14	Tab. 15.	Antenna sharing information	34
Tab. 7.	Temperature sensor and power detector offset reading using commands 120 and 121	14	Tab. 16.	Bluetooth TX power class parameters	36
Tab. 8.	Thermal power compensation parameters	16	Tab. 17.	Parameters in BT_HW_INFO section	37
Tab. 9.	Average XTAL frequency change per XTAL calibration code	24	Tab. 18.	Abbreviations	44
			Tab. 19.	Revision history	47

Figures

Fig. 1.	Main_Table section in CalWlanDataFile.txt file	9	Fig. 7.	XTAL calibration offset parameter	22
Fig. 2.	RSSI offset entries in the calibration file	11	Fig. 8.	XTAL correction code vs temperature with 3rd order polynomial equation	26
Fig. 3.	Power table file PwrTble_Path0.txt	13	Fig. 9.	Example of schematic with RF switch for a single-antenna design	30
Fig. 4.	Thermal TX power compensation hardware setup	17	Fig. 10.	Example of [Main_Section] in CalWlanDataFile.txt file with indication of partial calibration data update	43
Fig. 5.	TX output power vs temperature sensor reading	19			
Fig. 6.	THERMAL_POWER_RSSI_COMPENSATION parameters	20			

Contents

1	Introduction	2	10	References	45
2	Calibration data	3	11	Note about the source code in the	
3	Getting calibration files	4		document	46
3.1	Procedure to get editable text files	5	12	Revision history	47
4	Updating the calibration data	7		Legal information	48
4.1	Frequency calibration	8			
4.2	Wi-Fi RSSI calibration	10			
4.3	Wi-Fi transmit power calibration	13			
4.4	Wi-Fi thermal TX power compensation	16			
4.4.1	Hardware test setup	17			
4.4.2	Labtool setup and command sequence	18			
4.4.3	Calculating the thermal power slope	20			
4.4.4	Wi-Fi thermal crystal frequency compensation	21			
4.4.4.1	Calculating the thermal crystal frequency coefficients	23			
4.4.4.2	Incorporating the crystal thermal coefficients into the calibration data	26			
4.5	Wi-Fi MAC address	27			
4.6	Wi-Fi front-end configuration	27			
4.6.1	FEM data entry	27			
4.6.2	FEM data examples	31			
4.6.2.1	Single antenna configuration without antenna diversity	31			
4.6.2.2	Single antenna configuration with antenna diversity	32			
4.6.3	Antenna isolation configuration	33			
4.6.3.1	Antenna isolation parameters	33			
4.6.3.2	Examples of antenna isolation configurations	35			
4.7	Bluetooth LE configuration	36			
4.7.1	Initial Bluetooth transmit power	36			
4.7.2	Bluetooth TX power class setting	36			
4.7.3	Bluetooth device (BD) address	37			
4.7.4	Bluetooth front-end loss	37			
4.7.5	Bluetooth frequency calibration	37			
4.7.6	Bluetooth host interface Baud rate	37			
4.7.7	Bluetooth hardware info	37			
4.8	802.15.4 configuration (RW612 only)	39			
4.8.1	802.15.4 TX power limit	39			
4.8.2	802.15.4 MAC address	39			
4.8.3	SPI clock frequency	39			
4.8.4	802.15.4 front-end loss	39			
4.9	Miscellaneous calibration data	39			
5	Golden calibration data	40			
6	Converting the calibration data	41			
7	Using the calibration data	42			
7.1	Production firmware	42			
7.2	Manufacturing firmware	42			
8	Programming the calibration data into the OTP	43			
8.1	Partial calibration data	43			
9	Abbreviations	44			

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.