

# Soldering Recommendations for Pressure Sensor Devices

by: Bill McDonald

## INTRODUCTION

Pressure sensor devices require the internal cavity containing the silicon transducer to be exposed to ambient in order for the device to function. Exposed cavity packages require special considerations during board assembly to prevent damage to the device during soldering and subsequent cleaning operations.

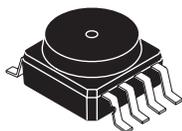


Figure 1. Basic Element

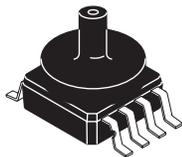


Figure 2. Port Adapter

## SURFACE MOUNT COMPONENTS

Components can be mounted using solder paste stencil, screen printed or dispensed onto the PCB pads prior to placement of the component. The volume of solder paste applied to the PCB is normally sufficient to secure the component during transport to the subsequent reflow soldering process. Use of adhesives to secure component is not recommended, but where necessary can be applied providing the vent at the underside of the package does not become blocked. This is applicable only to a gauge pressure sensor device. Absolute pressure sensor devices do not have a backside vent so vent blocking is not an issue.

Solder pastes are available in variety of metal compositions, particle size and flux types. The solder paste consists of metals and flux required for a reliable connection between the component lead and the PCB pad. Flux aids the removal of oxides that may be present on PCB pads and prevents further oxidation from occurring during the solder process.

The use of a No-Clean (NC) flux is recommended for exposed cavity components. Using pressure spray or other methods of cleaning is not recommended. If cleaning of the pcb is performed Water Soluble (WS) flux can be used, but it is recommended the component cavity to be protected by adhesive Kapton tape, vinyl cap or other means prior to the cleaning process to prevent contamination and foreign materials from being introduced into device cavity as result of cleaning processes. Refer to this link for info.

<http://www.stockcap.com/products.asp>

Ultrasonic cleaning is not recommended as the frequencies can damage wire bond interconnections.

Reflow soldering is typically used for surface mount components and accomplished by convection heat from the sides of the reflow furnace utilizing air circulation to produce uniform temperature across the PCB. Hot spots and shielding of the smaller components by adjacent larger components can be minimized thus achieving more reliable solder connection.

## THROUGH-HOLE (DIP) STYLE COMPONENTS

Dual in-line and other styles of through-hole components packages are typically wave soldered where the leads protrude through the circuit board and exposed to a flux bath then immersed into molten solder as the board is passed over a solder wave to create the solder connection. In this application the top board surface and component body are not directly exposed to high temperatures.


### SOLDERING PRECAUTIONS

Wave solder does not typically expose component to excessive temperature, but there may be cases where components are subjected to secondary reflow cycle during double side board assembly.


Vapor phase soldering process is not recommended for open cavity devices. There is a potential for liquid to ingress into the cavity or possibility of condensation to form in cavity of the device.

IR reflow is not recommended due to potential damage to plastic features as result of radiation heat transfer.

MPXA, MPXH, MPXM and MPXV series pressure sensors with port adapters should not be exposed to temperatures greater than 245°C. Suffix designations for these devices are; C, AP, DP and GSX.

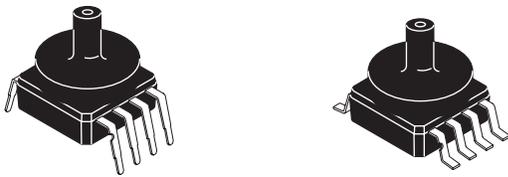

MPX series pressure sensors with port adapters should not be exposed to temperatures greater than 220°C. The suffix designations for these devices are; AP, GP, DP, AS, GS, ASX or GSX.

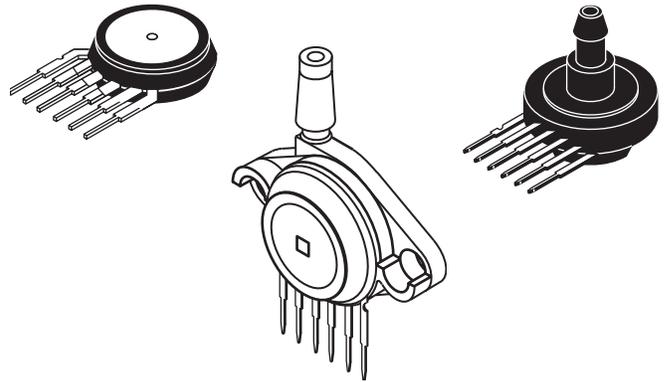

Refer to the following table for listing of device types and recommended maximum temperature exposure. The reflow temperature profile for surface mount devices must be in accordance with JEDEC STD. 020. Refer to following link for specific profile details.

<http://www.jedec.org/download/search/jstd020c.pdf>

Devices provided with a mounting bracket for special applications are to be excluded.

## REWORK OF SOLDERED COMPONENTS

Rework is not recommended, but should it be necessary, maximum temperature exposure for devices should not exceed the limits shown in Table 1 with minimized duration.

**Table 1. Pressure Sensors**

Device Number	Suffix Designation	Package	Maximum Temperature °C
<b>MPX</b>	A,D	BASIC ELEMENT	245
	AP	PORT ADAPTER	220
	GP	PORT ADAPTER	220
	DP	PORT ADAPTER	220
	AS	PORT ADAPTER	220
	GS	PORT ADAPTER	220
	ASX	PORT ADAPTER	220
	GSX	PORT ADAPTER	220
<b>MPXA</b>	A	BASIC ELEMENT	245
	C	PORT ADAPTER	245
	GSX	PORT ADAPTER	245
<b>MPXV</b>	G	BASIC ELEMENT	245
	C	PORT ADAPTER	245
	DP	PORT ADAPTER	245
	GP	PORT ADAPTER	245
	GVP	PORT ADAPTER	245
	GSX	PORT ADAPTER	245
<b>MPXH</b>	A	BASIC ELEMENT	250
	C	PORT ADAPTER	250
<b>MPXM</b>	A,D	BASIC ELEMENT	250
	AS,GS	PORT ADAPTER	250



## **How to Reach Us:**

### **Home Page:**

[www.freescale.com](http://www.freescale.com)

### **E-mail:**

[support@freescale.com](mailto:support@freescale.com)

### **USA/Europe or Locations Not Listed:**

Freescale Semiconductor  
Technical Information Center, CH370  
1300 N. Alma School Road  
Chandler, Arizona 85224  
+1-800-521-6274 or +1-480-768-2130  
[support@freescale.com](mailto:support@freescale.com)

### **Europe, Middle East, and Africa:**

Freescale Halbleiter Deutschland GmbH  
Technical Information Center  
Schatzbogen 7  
81829 Muenchen, Germany  
+44 1296 380 456 (English)  
+46 8 52200080 (English)  
+49 89 92103 559 (German)  
+33 1 69 35 48 48 (French)  
[support@freescale.com](mailto:support@freescale.com)

### **Japan:**

Freescale Semiconductor Japan Ltd.  
Headquarters  
ARCO Tower 15F  
1-8-1, Shimo-Meguro, Meguro-ku,  
Tokyo 153-0064  
Japan  
0120 191014 or +81 3 5437 9125  
[support.japan@freescale.com](mailto:support.japan@freescale.com)

### **Asia/Pacific:**

Freescale Semiconductor Hong Kong Ltd.  
Technical Information Center  
2 Dai King Street  
Tai Po Industrial Estate  
Tai Po, N.T., Hong Kong  
+800 2666 8080  
[support.asia@freescale.com](mailto:support.asia@freescale.com)

### **For Literature Requests Only:**

Freescale Semiconductor Literature Distribution Center  
P.O. Box 5405  
Denver, Colorado 80217  
1-800-441-2447 or 303-675-2140  
Fax: 303-675-2150  
[LDCForFreescaleSemiconductor@hibbertgroup.com](mailto:LDCForFreescaleSemiconductor@hibbertgroup.com)

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics of their non-RoHS-compliant and/or non-Pb-free counterparts. For further information, see <http://www.freescale.com> or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to <http://www.freescale.com/epp>.

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.  
© Freescale Semiconductor, Inc., 2006. All rights reserved.